

SAMSUNG
Galaxy S6 edge

User Guide



Table of Contents

Introduction	1
About the User Guide	1
Access Instructions on Phone.....	2
Access Help	2
Get Support from Sprint Zone.....	3
Get Started.....	4
Parts and Functions	4
Phone Layout	4
Charge the Battery	6
Turn Your Phone On and Off	7
Use the Touchscreen	9
Activate Your Phone	12
Complete the Setup Screens	13
Basic Operations	15
Basics.....	15
Home Screen and Applications (Apps) List	15
Phone Settings Menu.....	16
Portrait and Landscape Screen Orientation.....	17
Capture Screenshots	17
Edge Screen	18
Edge Screen Notification Options.....	18
Other Edge Screen Features	25
Applications.....	29
Launch Applications.....	29
Apps List	30
Phone Number	35
Airplane Mode	37
Enter Text.....	38
Samsung Keyboard	38
Google Voice Typing.....	40
Tips for Editing Text	40
Google Account.....	41

Create a Google Account.....	41
Sign In to Your Google Account	48
Google Play Store	52
Find and Install an App	53
Request a Refund for a Paid App	54
Update an App	55
Uninstall an App.....	58
Get Help with Google Play	59
Lock and Unlock Your Screen	60
Update Your Phone.....	62
Update Your Phone Software	62
Update Your Profile.....	65
Update Your PRL.....	66
Your Phone Interface	67
Home Screen Basics.....	67
Home Screen Layout	67
Extended Home Screens	69
Status Bar	70
Notification Panel	72
S Finder.....	75
Quick Connect	76
Customize the Home Screen	77
Change the Wallpaper	77
Add Shortcuts to the Home Screen	79
Add Widgets to the Home Screen	80
Add Folders to the Home Screen	81
Phone App	82
Wi-Fi Calling	82
Place and Answer Calls	83
Call Using the Phone Dialer.....	84
Call Emergency Numbers	85
Answer Phone Calls.....	86
In-Call Screen Layout and Operations.....	89
Place Calls from Contacts/Call Logs.....	91
Place a Call from Contacts	91

Call from Call Logs.....	93
Optional Services	95
Voicemail Setup	95
Visual Voicemail.....	96
Set Up Visual Voicemail.....	96
Review Visual Voicemail.....	98
Listen to Multiple Voicemail Messages	99
Visual Voicemail Options	100
Configure Visual Voicemail Settings	101
Caller ID Blocking	104
Call Waiting	105
Conference Calling	106
Call Forwarding.....	108
Call Settings.....	110
Contacts	112
Add a Contact	112
Check Contacts.....	117
Contacts Screen Layout.....	118
Edit a Contact	119
Delete a Contact	120
Share a Contact	122
Profile Sharing	124
Import Contacts.....	126
Back Up Contacts	127
Messaging and Internet.....	129
Text and Multimedia Messaging	129
Send a Text Message	129
Send a Multimedia Message (MMS).....	131
Send an Enhanced Message.....	133
Save and Resume a Draft Message.....	137
New Messages Notification.....	138
Manage Message Conversations	138
Create and Send Gmail	141
Create and Send a Gmail Message.....	141
Check Received Gmail Messages	143

Open New Gmail Messages	143
Open Gmail Messages	144
Manage Gmail Messages	145
Use Gmail Labels.....	145
Archive Gmail Threads	146
Mute Gmail Threads	147
Delete Gmail Threads	148
Search Gmail Messages.....	149
Report Spam or Phishing Gmail	151
Add Another Google (Gmail) Account	152
Switching Between Gmail Accounts	153
Email	155
Set Up an Email Account.....	155
Add an Email Account.....	156
Add an Exchange ActiveSync Account.....	160
Compose and Send Email	162
Open New Email Messages.....	164
Open Email Messages.....	165
Delete an Email Account.....	166
Manage Your Email Inbox.....	168
Exchange ActiveSync Email Features.....	169
Data Services General Information (LTE and 3G Networks).....	172
Sprint Spark LTE.....	172
Your User Name	173
Data Connection Status and Indicators	176
Browser	176
Use the Browser	177
Add a Bookmark	178
View Browser History.....	179
Open New Browser Tab.....	181
Browser Settings.....	182
Chrome Browser	182
Camera and Video	184
Take Pictures and Record Videos	185
Take a Picture	186

Viewfinder Screen	187
Record Videos	188
Shooting Modes	189
View Pictures and Videos Using Gallery	190
Edit Pictures	194
Share Pictures and Videos	200
Send Pictures or Videos by Email or Gmail	200
Send a Picture or Video by Multimedia Message	202
Send Pictures or Videos Using Bluetooth	203
Share Pictures or Videos via Additional Apps or Social Media	205
Share Videos on YouTube	206
Camera Options and Settings	208
Switch Cameras	208
Set Camera Options	208
Useful Apps and Features	211
Sprint Zone	211
Sprint Family Locator	211
Sprint Fun & Games	211
Sprint TV & Movies	211
Calculator	212
Calendar	214
Add an Event to the Calendar	214
View Calendar Events	217
Share Calendar Events	218
Sync Calendars	220
Synchronize an Exchange ActiveSync Calendar	222
Clock	222
Set Alarms	224
World Clock	226
Stopwatch	226
Timer	227
Galaxy Apps	227
Gallery	228
Google Hangouts	229
Google Maps	231

Google Play Books.....	233
Google Play Games.....	233
Google Play Movies & TV	233
Google Play Music	234
Google Play Newsstand.....	237
Google Search	237
Use Google Search.....	237
Use Google Voice Search.....	239
Lookout Security	239
Memo	240
Milk.....	241
Music.....	241
My Files.....	244
OneDrive	245
OneNote	245
Peel Smart Remote.....	245
S Voice.....	245
Video	246
Voice Recorder	247
YouTube.....	250
1Weather.....	252
Amazon	252
App Pass.....	252
eBay	252
Messaging Plus.....	252
NASCAR Mobile 2014.....	253
NBA Game Time	253
NextRadio	253
Scout	253
Spotify	254
Facebook	254
Uber	255
Connectivity.....	256
Transfer Files Between Your Phone and a Computer.....	256
Wi-Fi.....	258

Turn Wi-Fi On and Connect to a Wireless Network.....	258
Wi-Fi Settings.....	261
Disconnect Wi-Fi.....	263
Wi-Fi Direct	264
Bluetooth	267
Bluetooth Information.....	267
Enable Bluetooth.....	267
Pair Bluetooth Devices.....	269
Connect to a Paired Bluetooth Device	272
Share Information Using Bluetooth	273
Receiving Data via Bluetooth.....	275
Sprint Worldwide Wireless Service	277
Activate Sprint Worldwide Service on Your Account	277
Your Phone's SIM Card for International Roaming.....	277
Set Network Mode Options	278
Make and Receive Worldwide Calls	278
Sprint International Voicemail Service	279
Set Up Your Voicemail Access Number for International Use.....	280
Access Your Voicemail Internationally.....	280
International Data Roaming	281
International Roaming Status Messages	282
Contact Sprint for Assistance with International Service	283
Settings	285
Basic Settings	285
Wi-Fi Calling Settings.....	289
Wi-Fi Settings Menu.....	291
Bluetooth Settings.....	294
Hotspot Settings.....	296
Airplane Mode	300
Data Usage Settings	302
Mobile Networks Settings	304
NFC and Payment.....	306
More Connection Settings.....	310
Tethering Settings.....	312
Printing	313

Virtual Private Networks (VPN).....	314
Default Messaging App Settings.....	322
Sounds and Notifications Settings	324
Sound Mode.....	325
Volume	326
Ringtones and Sounds.....	327
Vibrations	328
Sound Quality and Effects	329
Notifications.....	330
Display Settings	331
Edge Screen Settings	333
Motions and Gestures.....	334
Applications Settings.....	336
Application Manager	337
Default Applications	339
Calendar Settings	340
Camera Settings	341
Contacts Settings.....	342
Email Settings	344
Internet Settings.....	348
Messages Settings.....	349
Music Settings.....	351
Phone Settings.....	353
S Voice Settings.....	355
Weather Settings	357
Wallpaper	358
Themes	359
Lock Screen and Security Settings	360
Lock Screen and Security Overview.....	360
Screen Lock	362
Disable the Screen Lock.....	368
Privacy and Safety	370
Private Mode	371
Report Diagnostic Info	372
Send SOS Message	373

Location Settings	374
Accessibility Settings.....	377
Vision Accessibility Settings.....	378
Hearing Accessibility Settings.....	380
Dexterity and Interaction Settings.....	381
Configure Other Accessibility Settings.....	383
Add Accounts	384
Backup and Reset.....	386
Language and Input Settings	391
Battery Settings.....	393
Power Saving Mode.....	395
Ultra Power Saving Mode	396
Storage Settings.....	397
Date and Time Settings	399
Help	400
Activate This Device.....	401
System Update.....	402
About Device.....	403
Copyright Information.....	405
For Assistance	406
Sprint Account Information and Help	406
Sprint Account Passwords	406
Manage Your Account	406
Sprint Support Services	407
Index.....	408

Introduction

The following topics describe the basics of using this guide and your new phone.

About the User Guide

Thank you for purchasing your new Samsung Galaxy S 6 edge. The following topics explain how best to use this guide to get the most out of your phone.

Before Using Your Phone

Read [Get Started](#) and [Basic Operations](#) thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

Descriptions in the User Guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's Home screen, which is displayed by pressing the **Home** key. Some operation descriptions may be simplified.

Screenshots and Key Labels

Screenshots in the user guide may appear differently on your phone. Key labels in the user guide are simplified for description purposes and differ from your phone's display.

Other Notations

In the user guide, the phone may be referred to either as “phone,” “device,” or “handset.”

Access Instructions on Phone

Whether you're new to Android or just new to your Galaxy S 6, your phone can help you learn how to use it.

Access Help

Use the phone's Help menu to learn about your phone.

1. Press  to display the Home Screen.




2. From home, tap **Apps**  > **Settings**  > **Help** .
3. Tap a topic to view its contents, or tap **SEARCH** to search for a topic.


Get Support from Sprint Zone

In addition to your phone's built-in Help menu, you can also access support for your phone and service through the preloaded Sprint Zone app.

1. From home, tap **Apps**  > **Sprint Zone** .

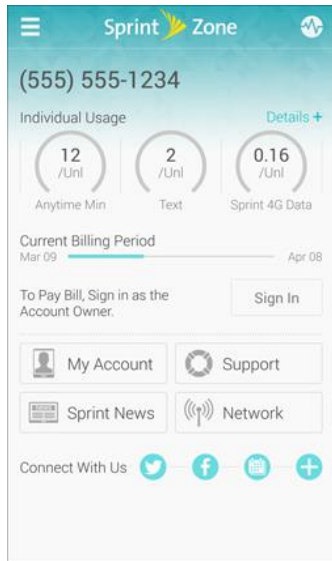

2. From the Sprint Zone main page, tap **Support**.

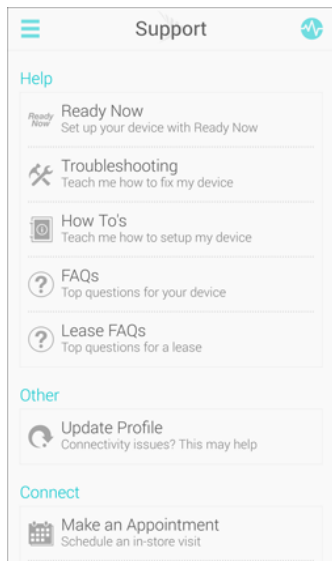

3. Tap a topic to view its contents.

Get Started


The following topics give you all the information you need to set up your phone and wireless service the first time.

Parts and Functions

These topics illustrate your phone's primary parts and key functions.

Phone Layout

The following illustration outlines your phone's primary external features and buttons.

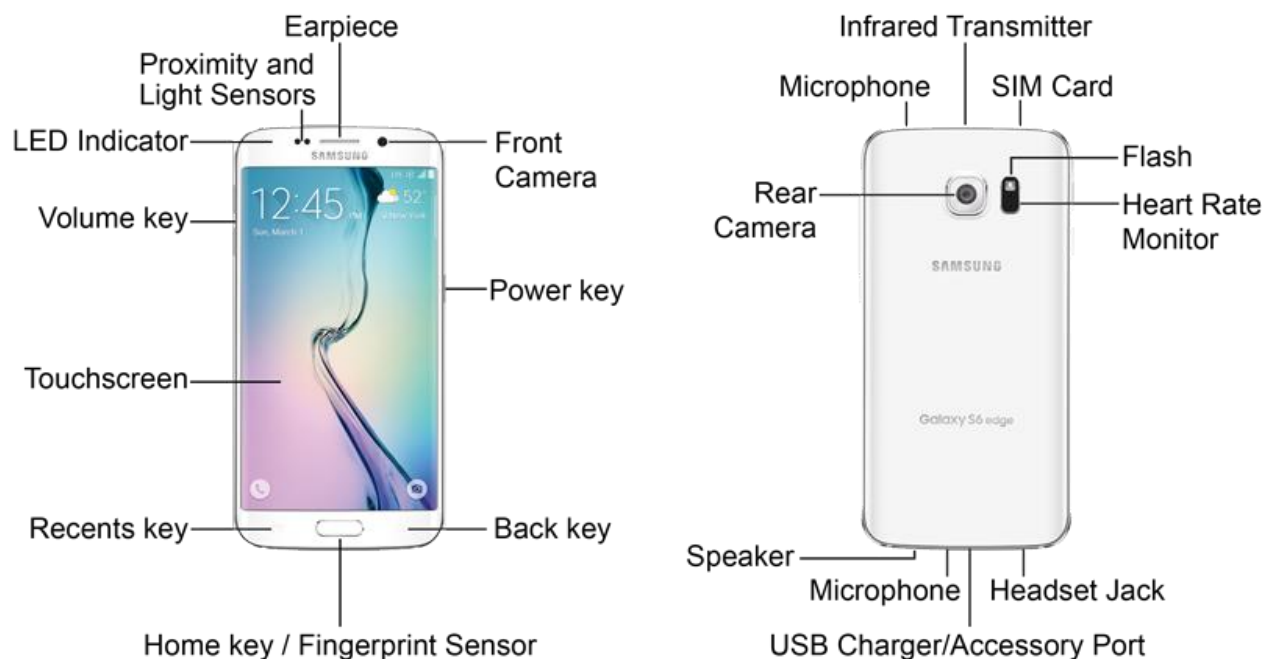

Part	Description
Rear Camera	Take pictures and videos.
Back key 	Return you to the previous screen, or close a dialog box, options menu, the Notification Panel, or onscreen keyboard.
Earpiece	Listen to calls and automated prompts when using the phone.
Flash	Help illuminate subjects in low-light environments when the camera is focusing and capturing a picture or video.

Part	Description
Front Camera	Take pictures and records videos while facing the screen, and allows you to video conference.
Headset Jack	Plug in a headset for convenient, hands-free conversations.
Heart Rate Monitor	Measure your heart rate via your fingertip when using the S Health app.
Home key / Fingerprint Sensor	Return you to the Home screen. Press and hold to open Google Search/Google Now. Use to register fingerprints for security.
Infrared Transmitter	Control other devices using infrared light.
LED Indicator	The LED indicator blinks or glows when charging, to indicate low battery, to announce new notifications, and when voice recording.
Microphone	Transmit your voice for phone calls or record your voice or ambient sounds for voice recordings and videos. There are two microphones, one on the top and one on the bottom.
Power key	Turn the phone or screen on or off, or switch your phone to silent mode, vibration mode, or airplane mode.
Proximity and Light Sensor	Detect when objects are close to the screen. For example, when you hold the phone to your ear while on a phone call, the sensor temporarily locks the screen to prevent accidental screen touches.
Recents key 	Access recently used apps.
SIM Card	Location of the SIM card.
Speaker	Play ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
Touchscreen	Display information needed to operate your phone, such as the call status, the Contacts list, and the date and time. Also provides one-tap access to all of your features and applications.
USB Charger/Accessory Port	Connect the phone to the charger via a USB cable.
Volume key	Adjust the ringtone or media volume or adjust the voice volume during a call.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Charge the Battery

Follow these instructions to charge your phone's battery using either the included charging head and USB cable or via a USB connection on your computer.

Note: This phone has an integrated battery that cannot be removed by the user.

Battery Cautions

Storage: Avoid storing or leaving the phone with no battery charge remaining. Saved information and settings may become lost or changed, or the phone may become unusable. Charge once every six months before storing or leaving unused for a long period.

Charge Using the AC Adapter

For fastest charging times, use the Adaptive Fast Charging charger that came with your phone. This charger provides faster charging only when connected to devices that have Adaptive Fast Charging.

1. Plug the USB cable into the USB charger/accessory port on the bottom of your phone.



2. Plug the other end of the USB cable into the charging head.
3. Plug the charging head into an electrical outlet.
4. After charging, disconnect the phone from the charger.
 - Unplug the charging head from the outlet, and remove the micro USB cable from the phone and the charging head.

Charge Using a PC Connection

Before using a PC connection to charge your phone, ensure that the computer is turned on. Depending on the type of connection, your phone's battery may not charge.

1. Insert the small end of the USB cable into the USB charger/accessory port on the bottom of your phone.




2. Insert the large end of the USB cable into a USB port on your computer.
3. After charging, remove the USB cable from both the phone and the computer.

Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

Turn Your Phone On

- Press and hold the **Power** key.

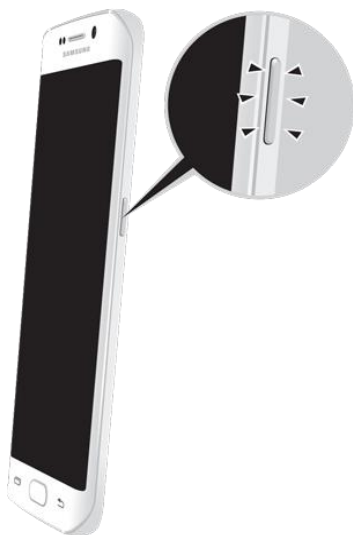

- ❖ Your phone will power on. Depending on the settings, you may see the Lock screen.


- See [Lock and Unlock Your Screen](#) and [Screen Lock](#) for information about using the screen lock.
- The first time you turn the phone on, you will see the startup screens. See [Complete the Setup Screens](#) for details.
- If your phone is not yet activated, see [Activate Your Phone](#) for more information.

Turn Your Phone Off

1. Press and hold the **Power** key to open the phone options menu.



2. Tap **Power off** to turn the phone off.

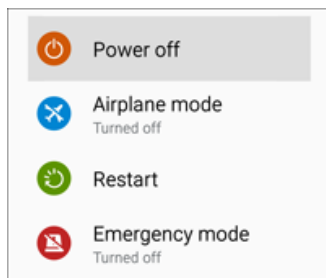

- ❖ Your phone will power off.

Your screen remains blank while your phone is off (unless the battery is charging).

Use the Touchscreen

Your phone's touchscreen lets you control actions through a variety of touch gestures.


Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.



Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

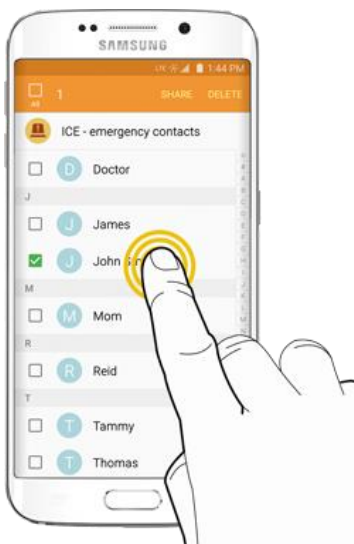

Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



Flick

Flicking the screen is similar to swiping, except that you need to move your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard. See [Enter Text](#) for more details.



Note: Screen rotation must be enabled for the screen orientation to automatically change. To enable screen rotation, slide your finger down from the Status Bar to display the Notification table, and then tap **Screen rotation** to enable the option.

Pinch and Spread

"Pinch" the screen by moving two fingers inward to zoom out, or "spread" by moving two fingers outward to zoom in.



Activate Your Phone

Follow the instructions below to activate your phone if it has not already been activated. Depending on your account or how and where you purchased your phone, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
 - When you turn the phone on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.
 - **Activate on your computer:**
 - Go to sprint.com/activate and complete the online instructions to activate your phone.
 - **Activate on your phone:**
 - Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.
 - Tap **Activate** to override auto-activation and start the manual activation wizard.
 - Follow the onscreen prompts to complete the activation process.

To confirm activation, make a phone call. If your phone is still not activated, visit sprint.com/support for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727** from another phone.

Tip: Do not press the **Power** key while the phone is being activated. Pressing the **Power** key cancels the activation process.

Note: If you are having any difficulty with activation, visit sprint.com/support.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your phone has been activated on your Sprint account.

Note: During or after setup, you may see a **Connections Optimizer** notice. Read the notice and tap **I Agree** to allow your phone to connect automatically to the best available data network, including Wi-Fi. To turn Connections Optimizer off at any time, From home, tap **Apps**  > **Settings**  > **Mobile networks**  > **Connections optimizer** and uncheck the box next to **Connections Optimizer**.

1. At the Welcome screen, choose options, and then tap  to begin setup:
 - **Language:** Choose the default language for your phone's operation.
 - **Accessibility:** Configure settings to access settings to improve the accessibility of your phone's features if you are visually impaired or hard of hearing.
2. Follow the onscreen instructions to complete setup for each topic. Tap **NEXT**, or the right arrow, to move through the steps. You can skip options to continue to the next one. During setup, you may see these options:

Note: Screens may vary based on the activation status of your phone.

- **Wi-Fi:** By default, your phone prompts you to use Wi-Fi when accessing data services. Tap a Wi-Fi access point to connect to it, or you can continue setup using your phone's connection to the wireless network.
- **Terms and conditions:** Read the End User License Agreement (EULA) and then tap the check box to confirm that you understand and agree to its terms and conditions. If you do not agree to the EULA, you cannot continue with setup. If you consent to provide diagnostic and usage data to Samsung, tap **Yes**, or tap **No thanks**.
- **Hands Free Activation:** Automatically connect to Sprint network and set up voice and data services.
 - After Hands Free Activation completes, tap **OK** to continue.
 - You may see a message indicating your phone needs to restart. Tap **OK** again and wait for your phone to restart.

- **Tap & Go:** Quickly copy any Google Accounts, backed up apps, and data from your existing Android device. Follow the onscreen instructions to use Tap & Go, or tap **SKIP** to continue setup.
- **Add your account (Google):** Your phone uses your Google Account to provide access to many features and apps. Complete the steps to sign in to your current Google Account, or sign up for a new Google Account right from your phone. You can also skip signing in to your Google Account, or sign in later.
 - To sign in to an existing Google Account, you will need your account name (Gmail address) and password.
 - For both new and existing accounts, you will need to review and accept the Terms of Service and Privacy Policy by tapping **ACCEPT** when prompted.
- **Name:** Enter your First and Last name, to personalize Google features and apps.
- **Google services:** Select Google service preferences, including Backup & Restore, Location and Communication options.
- **Samsung account:** Some apps and features use your Samsung account. You can sign in to your Samsung account, or follow the prompts to create a new account.
 - To sign in to or set up a Samsung account, you will have to review and agree to the Terms and Conditions by tapping **AGREE** when prompted.
- **Set wake-up command:** Enable S Voice to easily wake up your device, open apps, make calls, and more.
- **Add fingerprint:** Register your fingerprint to unlock your device and sign in to services securely without entering your password,
- **Easy mode:** Easy mode offers a simpler home screen layout, with larger text and icons. Tap the **ON/OFF** switch to turn on Easy mode. You can also choose Easy mode from Settings at any time.

3. Tap **FINISH** to complete setup.

- Your phone is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps list or through Settings.

Note: You do not need to sign up for a Google Account to use your phone. However, to download apps from the Google Play store app, you must link your phone to a Google Account.

Basic Operations

The following topics outline basic features and operations of your phone.

Basics

The following topics offer an overview of your phone's basic operations.

Home Screen and Applications (Apps) List

Most of your phone's operations originate from the Home screen or the apps list.

1. From any screen, press the **Home** key to display the Home screen.
2. Tap **Apps**  to display the apps list.



For information about using the Home screen, see [Home Screen Basics](#).

Select Options and Navigate Screens

Tap icons, onscreen keys, and other items to open or activate the assigned function.

- Tap the **Back** key  to return to the previous screen.

Recent Applications

You can display a list of recently used applications using the Recents key.

- Tap **Recents**  to view a list of recently used applications.


Phone Settings Menu

You can customize your phone's settings and options through the Settings menu.

- From home, tap **Apps**  > **Settings** .

— or —

Drag the Notification Panel down and tap **Settings** .

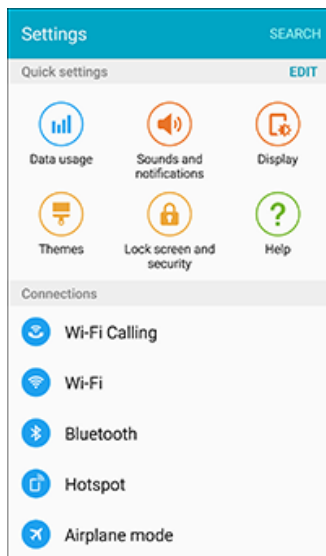

- ❖ The Settings menu displays.

For more information, see [Settings](#).

Portrait and Landscape Screen Orientation

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the phone sideways.



Turn Screen Rotation On or Off

1. Open the Status Bar by dragging down from the top of the screen.
2. Tap **Screen rotation**  to turn the option on or off.
 - You may need to scroll left or right to see the Screen rotation option.
 - If the Screen rotation option is not available, tap **Edit**  to display the full options list.
 - Not all screens will adjust for landscape orientation.

Capture Screenshots

You can use your phone's Power and Home keys to capture screenshots.

- Press and hold the **Power** key and **Home** key at the same time to capture a screenshot of the current screen.
 - ❖ The current screenshot will be captured and stored in the Screenshots album in the phone's Gallery. From home, tap **Apps**  > **Gallery** .

Depending on your settings, you may also capture a screenshot by swiping your palm across the screen from side to side.

To set up palm swipe screen capture:

1. From home, tap **Apps**  > **Settings** .
2. Tap **Motions and gestures**  and then tap the **ON/OFF** switch next to **Palm swipe to capture**.

Edge Screen

The Edge screen provides a variety of useful tools for notifications, information feeds, and timekeeping.



Edge Screen Notification Options

You can configure which notifications appear on the Edge screen, Edge lighting options, and priority contacts.


Edge lighting and Quick reply are features that activate when your phone is turned over (display side down).

Edge Lighting


Edge lighting illuminates the Edge screen when a notification is received. If People edge is also on, the color of the indicator will be that assigned to the contact who is calling or messaging.

To turn on Edge lighting:

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Edge lighting**.

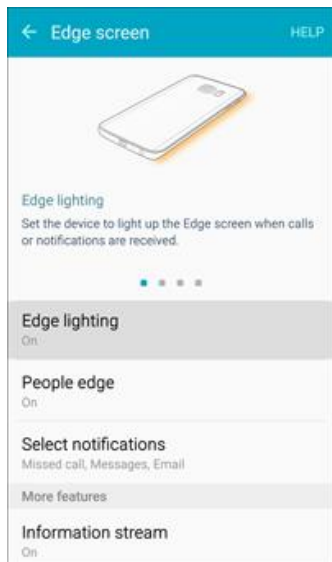

2. Tap the **ON/OFF** switch to turn on the feature.

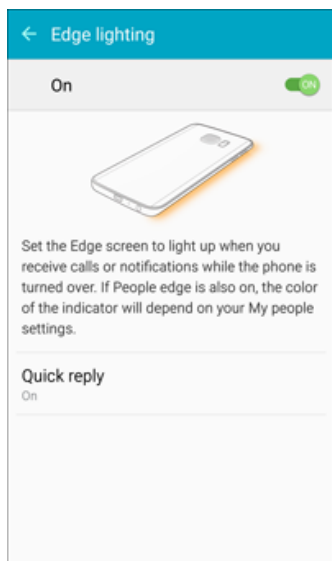


Quick Reply


Quick reply allows you to reject an incoming phone call with a text message by placing your finger on the heart rate sensor for two seconds. The call is rejected, and a preset message is sent to the caller.

To turn on and configure Quick reply:


1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Edge lighting**.

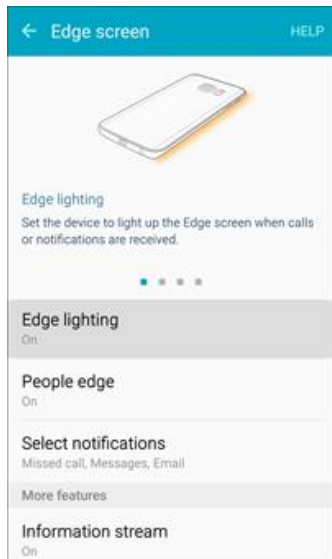


2. Tap **Quick reply**.

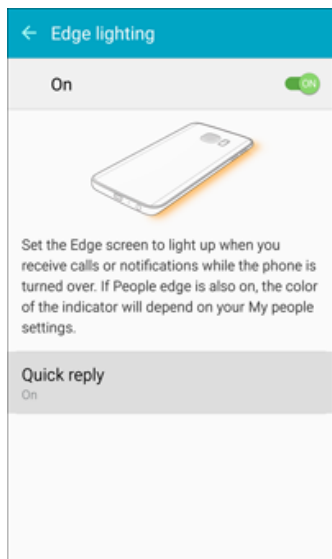

3. Tap the **ON/OFF** switch to enable Quick reply.

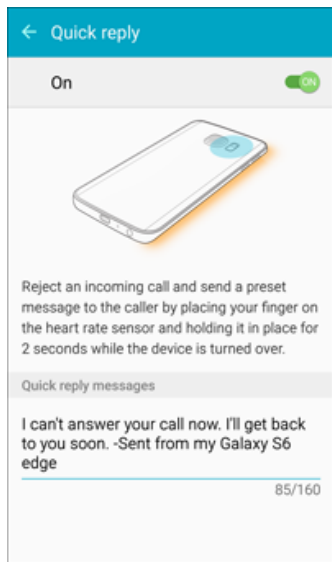

4. Tap the message to edit the text reply.

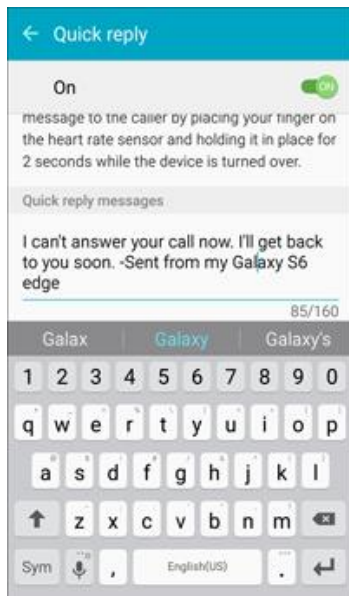


5. When finished, tap the **Back** key  to save changes.

People Edge

People edge allows you to set important contacts for custom notifications on the Edge screen.

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **People edge**.

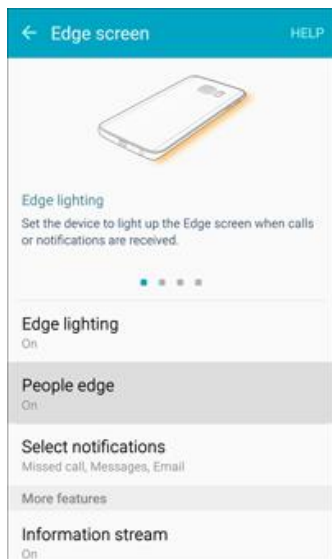


— or —

Swipe the **People edge** tab to the center of the screen, and then tap **Settings** .



2. Tap the **ON/OFF** switch to turn on the feature.

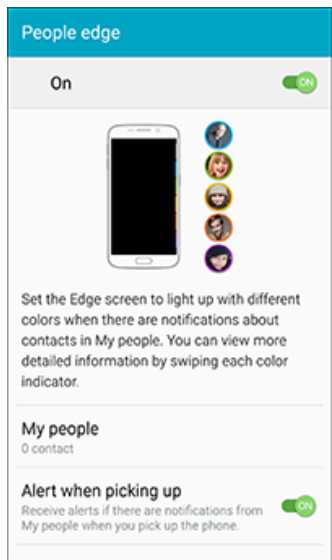


3. Tap **My people** to add contacts to the My people list.
 - Tap **Add contact** to add a person from your Contacts list. Notifications from that person appear in the color assigned.
 - Tap **EDIT** to rearrange the order contacts appear on the screen, or to remove contacts.
4. Tap **Alert when picking up** to enable or disable alerts from your My people contacts when you pick up your phone.


Select Notifications

You can choose which kinds of notifications appear on the Edge screen.

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Select notifications**.

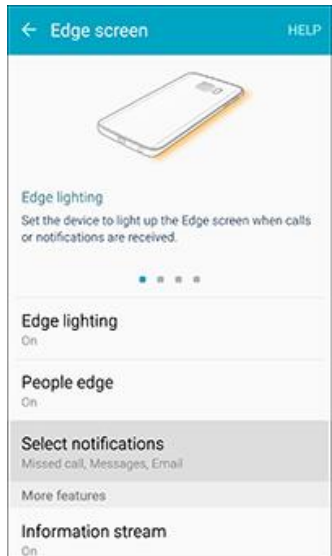

2. Tap the **ON/OFF** switch next to each notification type to activate or deactivate alerts on the Edge screen.

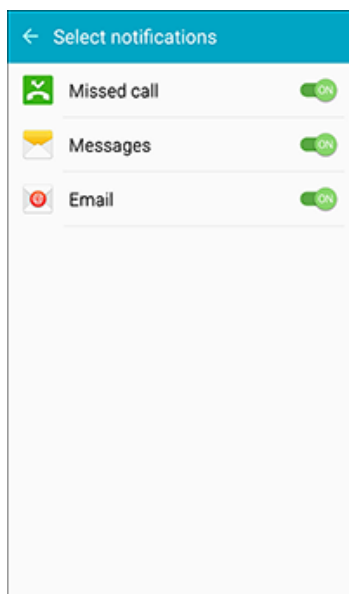

3. When finished, tap the **Back** key  to save changes.

Other Edge Screen Features

In addition to contacts and notifications, the Edge screen can be configured to display news and information feeds and a night clock, and it can be moved to the opposite side of the screen.

Information Stream


The Information stream feature lets you select news and information feeds to display on the Edge screen.

To view the Information stream:


- When the main screen is turned off, quickly swipe your finger along the Edge screen in one direction, and then back in the opposite direction.

To configure the Information stream:

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Information stream**.

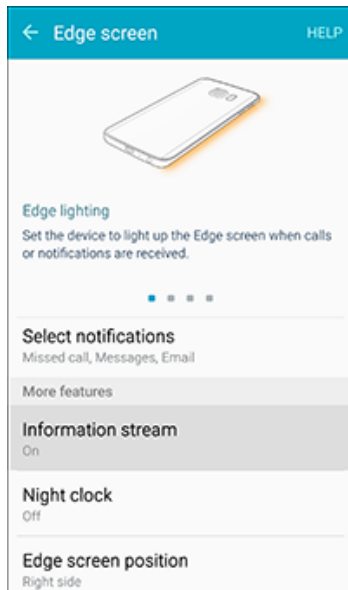

2. Tap the **ON/OFF** switch to activate the Information stream feature.

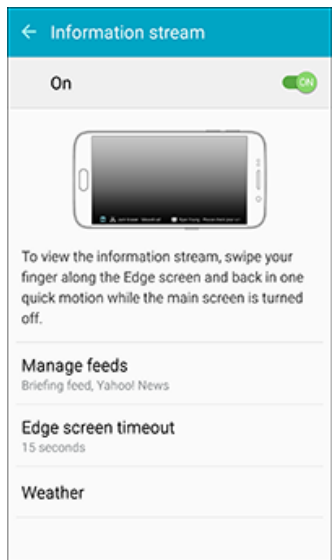


3. Tap **Manage feeds** to configure the following:
 - Tap the checkbox on each feed that you want to appear on the Edge screen.
 - To edit a feed, tap **Settings**  (if available).
 - To download more feeds, swipe to the right and tap the **Download feeds** bar.
 - To change the order of the feeds, tap **REORDER** and drag the selected feeds into the order you prefer.
4. Tap **Edge screen timeout** to configure how long the Edge screen stays on when activated.
5. Tap **Weather** to configure weather settings, as well as select which screens and apps that weather information appears on.

Note: To edit or view information streams, your phone must be either in a network coverage area or connected via Wi-Fi.


Night Clock

Set up a clock that displays on the Edge screen when the phone screen is off. Night mode is available for a maximum of 12 hours.

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Night clock**.

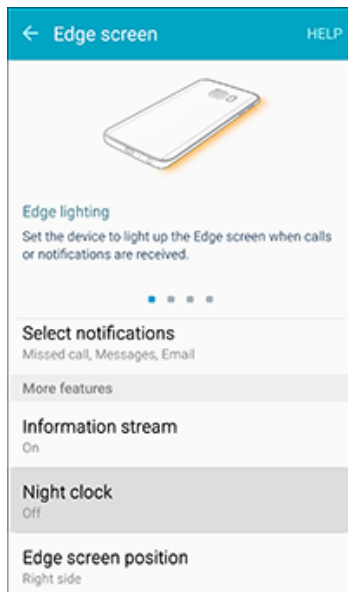

2. Tap the **ON/OFF** switch to activate the Night clock feature.

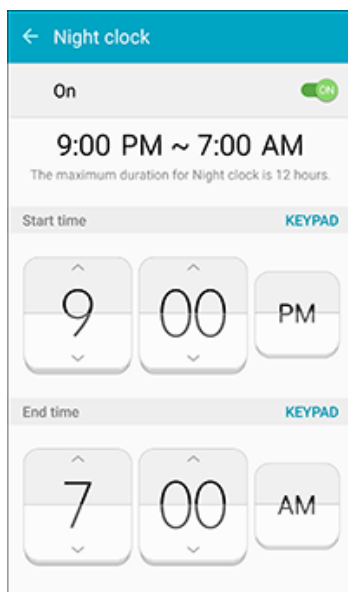


- Tap the numbers on the **Start time** clock to set the time for the Night clock to activate.
- Tap the numbers on the **End time** clock to set the time for the Night clock to deactivate.

3. When finished, tap the **Back** key  to save changes.


Edge Screen Position

You can select either the left or right side of the display for the Edge screen.

1. From a Home screen, tap **Apps**  > **Settings**  > **Edge screen**  > **Edge screen position**.

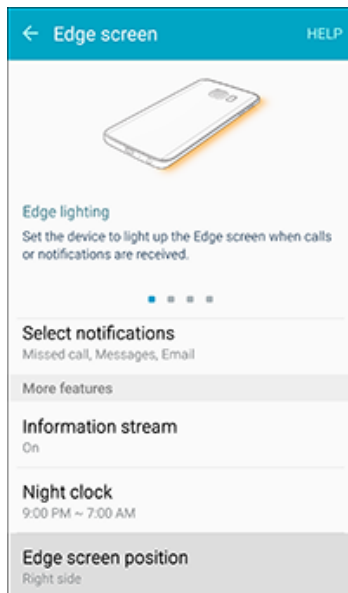

2. Tap either **Right side** or **Left side** to set which side the Edge screen appears on.

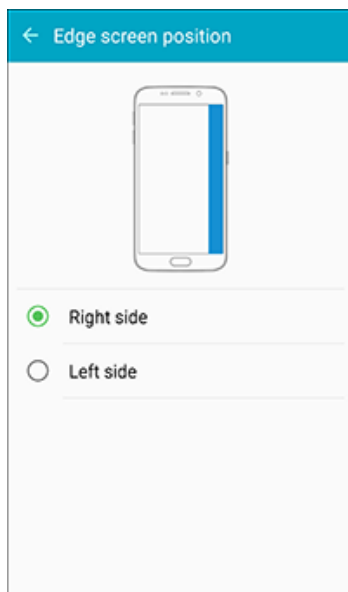

3. When finished, tap the **Back** key  to save changes.

Applications

The following topics describe how to access the applications (apps) list and launch apps on your phone.

Launch Applications

All installed apps can be accessed and launched from the apps list.

1. From home, tap **Apps** .



- ❖ The apps list opens.
2. Tap an app icon to launch the corresponding application.
- ❖ The application opens.

Apps List

The apps list expands to include any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.

App	Function/Service
 1Weather	Receive real-time local weather information at any location in the world. Access 7-day and hourly weather forecasts for your area.
 Amazon (Amazon Shopping)	Shop at Amazon.com from your phone.
 App Pass	Sprint's App Pass is a subscription service giving you unlimited access to a hand-selected catalog of premium apps and games across two devices.
 Calculator	Perform basic and advanced mathematical calculations.
 Calendar	Use Calendar to create and manage events, meetings, and appointments, organize your time, and be reminded of important events.
 Camera	Take pictures and record videos using the front and rear cameras.
 Chrome	Browse the Internet using Google's Chrome Web browser. Located in the Google folder in the apps list.
 Clock	Set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.
 Contacts	Store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google account, compatible email programs (including Exchange Server), and your Facebook friends.
 Drive	Store, sync, and access your data across multiple devices with Google Drive's cloud storage. Located in the Google folder in the apps list.
 eBay	The eBay app is packed full of features that make it easy to browse, buy, sell, and manage your eBay experience whenever and wherever you are.
 Email	Send and receive email from a variety of email service providers.
 Facebook	Keep up with friends and family with the Facebook app. Share updates, photos, and videos, as well as text, chat, and play games.

App	Function/Service
 FamilyWall for Sprint	Sprint FamilyWall is a private space to communicate, organize, share, remember and even locate friends and family members. Users get all the benefits of social sharing in a totally private space.
 Galaxy Apps	Discover apps designed exclusively for your Galaxy device.
 Gallery	View and edit pictures and watch videos that you've taken with your phone's camera or downloaded.
 Gmail	Send and receive messages using Google's Gmail service. Located in the Google folder in the apps list.
 Google	Search the Internet using Google Search. Located in the Google folder in the apps list.
 Google Settings	Use Google Settings to manage your Google apps and account settings. Located in the Google folder in the apps list.
 Google+	Instant message with your friends. Set up Circles of friends, visit the Stream to get updates from your Circles, use Hangouts for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. Located in the Google folder in the apps list.
 Hancom Office 2014	Hancom Office 2014 includes a word processor program (Hanword), a spreadsheet program (Hancell), and a presentation program (Hanshow). In addition to opening, editing, and saving MS Office documents, Hancom Office 2014 supports standard ODF files and quick and easy conversion to the PDF file format. Located in the Samsung folder in the apps list.
 Hangouts	Instant message with your friends and family using Google Hangouts. Located in the Google folder in the apps list.
 Instagram	Capture and share photos and videos with your friends. Customize what you capture, and then share it on your feed or post it directly to your friends. Located in the Social folder in the apps list.
 Internet	Browse the Internet using a full-featured browser.
 Lookout	Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.

App	Function/Service
 Maps	Use Google Maps to determine your current location with or without GPS, get driving and transit directions, and find phone numbers and addresses for local businesses.
 Memo	Organize your life by creating, editing, and managing memos. Located in the Samsung folder in the apps list.
 Messages	Send and receive text and multimedia messages.
 Messaging +	Messaging Plus provides high quality video calling, group chat, and media sharing along with easy registration, a full emoji keyboard, and other convenient features.
 Messenger	Instantly reach your friends and family with Facebook Messenger. Located in the Social folder in the apps list.
 Milk	Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free. Located in the Samsung folder in the apps list.
 Music	Use Music to browse your music library, play songs, and create playlists. You can also set songs as ringtones for incoming calls, or as alarm tones.
 My Files	Manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location. Located in the Samsung folder in the apps list.
 NASCAR Mobile 2014	NASCAR MOBILE 2014 is designed to bring you what you, our fans, want directly to your Android device. Follow NASCAR News, Video Highlights, and immerse yourself even further into the NASCAR experience with driver informational stats, plus more.
 NBA Game Time	The award-winning NBA Game Time is the official app to follow the NBA wherever you are.
 NextRadio	Listen to your favorite FM radio stations on the go with NextRadio. Tune in to any FM frequency in your area and listen to the radio without the hassle and cost of streaming music. Participating radio stations show you song information and artwork as you listen, so you can buy your favorite music, give feedback on the songs you like, and share what you are listening to on Facebook or Twitter.
 OneDrive	OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use. Located in the Microsoft folder in the apps list.

App	Function/Service
 OneNote	Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive. Located in the Microsoft folder in the apps list.
 Peel Smart Remote	Use your phone to control your TV, Set-top box, DVR, Stereos, and other electronic devices. Located in the Samsung folder in the apps list.
 Phone	Make and receive phone calls.
 Photos	View photos and videos on your phone, and sync them with your Google+ account. Located in the Google folder in the apps list.
 Play Books	Discovering your favorite books and authors has never been easier. With Google Play Books, you can shop the world's largest selection of eBooks and read them anywhere you like. Located in the Google folder in the apps list.
 Play Games	Google Play Games is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. It brings all of your gaming on Google Play together in a unified Android experience. Located in the Google folder in the apps list.
 Play Movies & TV	Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android phone or download so you can watch from anywhere, even when you are not connected. Located in the Google folder in the apps list.
 Play Music	Google Play Music lets you browse, shop, and play back songs purchased from the Google Play store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download. Located in the Google folder in the apps list.
 Play Newsstand	Discover more of the news and magazines you care about all in one app on your phone. Enjoy breaking news and in-depth articles featuring audio and video. From sports, business, cooking, entertainment, fashion and more it's all in one place. Located in the Google folder in the apps list.
 Play Store	The Google Play store app is the place to go to find new Android apps, games, movies, music, and books for your phone. Choose from a wide variety of free and paid apps ranging from productivity apps to games.
 S Health	S Health is a wellness application that can help you manage your health. Set fitness goals, check your progress, and keep track of your overall health.

App	Function/Service
 S Voice	S Voice is a voice recognition application you can use to activate a wide variety of functions on your phone.
 Scout	Scout by Telenav is a daily personal navigator that helps you get where you are going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.
 Settings	Configure settings and options on your phone.
 Spotify	Spotify gives you millions of songs at your fingertips. The artists you love, the latest hits, and new discoveries just for you. Hit play to stream anything you like.
 Sprint Family Locator	Sprint Family Locator lets you locate any phone on your Sprint family plan instantly—from your mobile phone, tablet or computer.
 Sprint Fun & Games	Download new apps and games from Sprint.
 Sprint Music Plus	Purchase, download, and play music, ringtones, and ringback tones for your phone.
 Sprint TV & Movies	With Sprint TV & Movies, you can watch live TV and access movies and other on demand entertainment on the go.
 Sprint Worldwide	Access information about Sprint Worldwide international voice and data service.
 Sprint Zone	Access your Sprint account, get device information and help, find recommended apps, and more.
 Uber	Search and find transportation service using the Uber app. Request a ride and get picked up within minutes.
 Video	View videos on your phone.
 Voice Recorder	Record voice memos and share them with others. Located in the Samsung folder in the apps list.
 Voice Search	Search the Internet and your phone using voice commands. Located in the Google folder in the apps list.


App	Function/Service
 Voicemail	Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first.
 YouTube	YouTube is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos. Located in the Google folder in the apps list.

Note: Available apps are subject to change.


Phone Number

Follow the instructions below to display your phone's wireless phone number.

1. From home, tap **Apps**  > **Settings** .

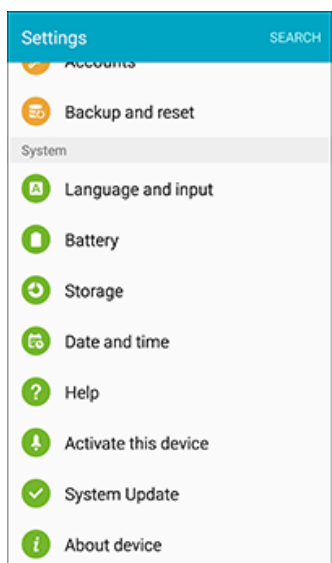

2. Tap **About device** .

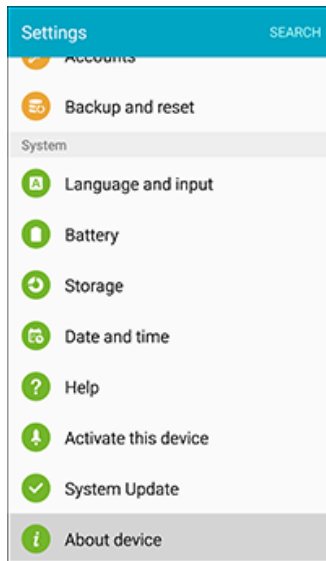

3. Tap **Status**.




- ❖ You will see the number listed under **My phone number**.

Airplane Mode


Airplane mode turns off all functions that emit or receive signals, while leaving your phone on so you can use apps that don't require a signal or data.

To turn on airplane mode:

1. Press and hold the **Power** key to display the device options menu.

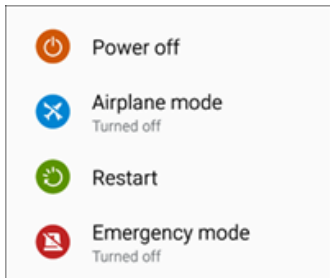

2. Tap **Airplane mode** > **TURN ON** to turn Airplane mode on.

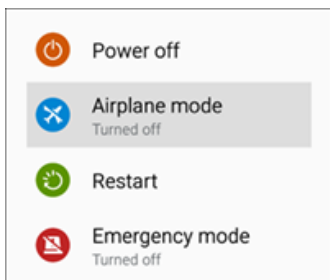


❖ Your phone is now in airplane mode. An airplane mode icon  displays on the Status Bar.


Tip: You can also access Airplane mode through the Notification Panel. Drag the Status Bar down to reveal the Notification Panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn Airplane mode on.

To turn off airplane mode:

1. Press and hold the **Power** key to display the device options menu.

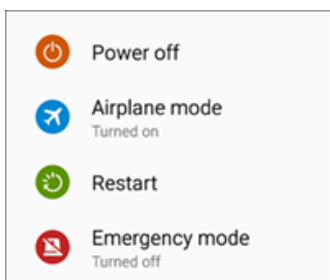

2. Tap **Airplane mode**.

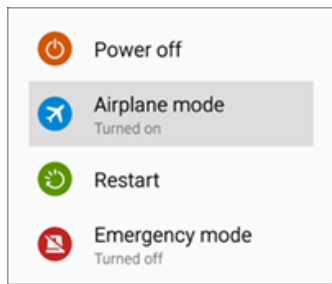

❖ Your phone's wireless connection features are now restored.

Tip: You can also access Airplane mode through the Notification Panel. Drag the Status Bar down to reveal the Notification Panel, slide the Quick settings buttons to the left, and then tap **Airplane mode**  to turn Airplane mode off.


Enter Text

You can type on your phone using the touchscreen Samsung keyboard or Google voice typing.

Samsung Keyboard

Use the touchscreen Samsung keyboard for entering text. The keyboard appears automatically onscreen when you tap a text entry field, and can be used in either portrait or landscape mode. You can also use the Google Voice typing option to enter text using your voice (see [Google Voice Typing](#) for details).

The Samsung keyboard offers a traditional QWERTY keyboard setup for entering text by tapping keys (like on a computer), along with enhancements and options that allow you to enter text faster and more accurately, such as continuous key input, personalized usage dictionaries, and more.

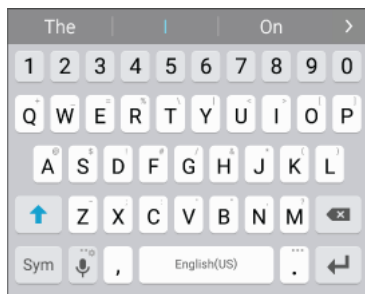

Portrait



Landscape

Note: Depending on which app you're using (Messages, Email, etc.), the keyboard appearance may differ.

Assigning the Samsung Keyboard for Text Entry

If you have multiple text input methods installed on your device, you can select the Samsung keyboard to be your default text input method from Settings, or you can choose it at any time while entering text.

Note: The Samsung keyboard is the default text input method on your phone. Additional keyboards and input methods are available for download at the Google Play store. See [Google Play Store](#).

From Settings:

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Default keyboard**, and then choose **Samsung keyboard**.

While entering text:

1. While entering text, drag down from the top of the screen to open the Notification Panel.
2. Tap **Select keyboard**, and then choose **Samsung keyboard**.

Use Samsung Keyboard to Enter Text

- Tap keys to enter text. While entering text, use these options:
 - If you make a mistake, tap  to delete incorrect characters. Touch and hold  to delete a whole word or field.
 - Tap  to change the case of the text (the arrow will turn blue). Tap  twice to switch to all capitals (the key will turn blue).
 - Tap  to switch to a symbols keyboard, to enter symbols. There are two symbol keyboards.
 - Touch and hold  to switch to Google Voice typing to enter text by speaking. See [Google Voice Typing](#).
 - If you have more than one language selected in Samsung Keyboard settings, you can swipe your finger over  to switch between languages.

Configure Samsung Keyboard

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Samsung keyboard**.

Google Voice Typing

Google Voice typing uses Google voice recognition to convert speech to text.

Use Google Voice Typing to Enter Text


1. While entering text, drag down from the top of the screen to open the Notification Panel, and then tap **Select keyboard** > **Google voice typing**.

– or –

Tap  on the Samsung keyboard.

– or –

Touch and hold  on the Samsung keyboard, and then tap .

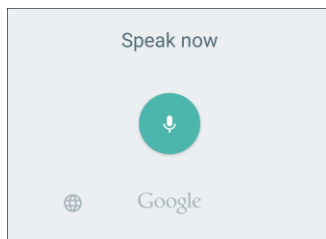

2. Speak into the microphone and watch your text being entered onscreen.
3. If the text is incorrect, tap **DELETE**.
4. Once you have completed entering your text, tap . The onscreen keyboard will reappear.

Note: You can assign a new language to Google voice typing. Tap  and tap a language to select it. To add more languages, tap  > **Settings** > **Languages**, tap the language(s) you want to add, tap **SAVE**, and then tap the **Back** key .

Configure Google Voice Typing

- From home, tap **Apps**  > **Settings**  > **Language and input**  > **Google voice typing**.

Tips for Editing Text

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

- Double-tap text to highlight it, and then select from the following options:
 -  **Select all:** Highlights all the text in the field.
 -  **Cut:** Removes the selected text and saves it to the clipboard.
 -  **Copy:** Copies the selected text to the clipboard.

-  **Paste:** Insert the last copied or cut text into the current field.
-  **Clipboard:** Display the clipboard to choose previously cut or copied text.
-  **Dictionary:** Access your personal dictionary.

Google Account

You will need a Google Account to access several phone features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your phone and your online Google Account.

Google Account Cautions

Be sure not to forget your Google Account ID or password.

Create a Google Account

If you do not already have a Google Account, you can create one online or by using your phone.

Note: You can also create and sign into your Google/Gmail account through your phone's Setup application.


Note: Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.

Create a Google Account Online


1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign in**.
3. Click **Create an account**, and then follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Create a Google Account Using Your Phone


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

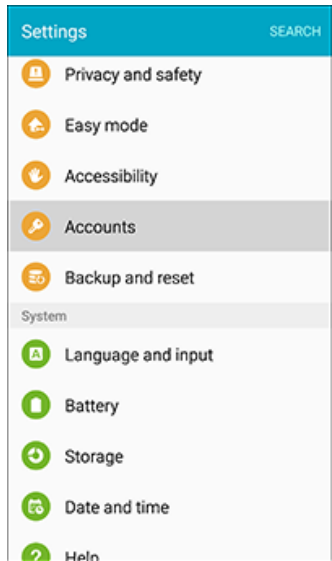

2. Tap **Add account**.

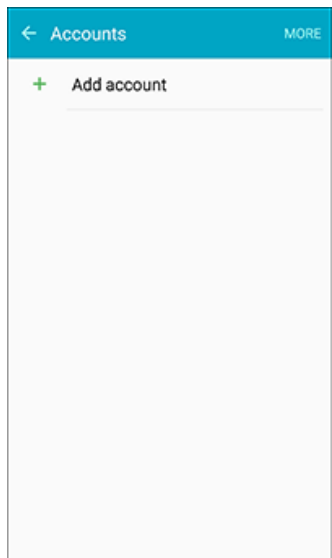


3. Tap **Google** > **OR CREATE A NEW ACCOUNT**.

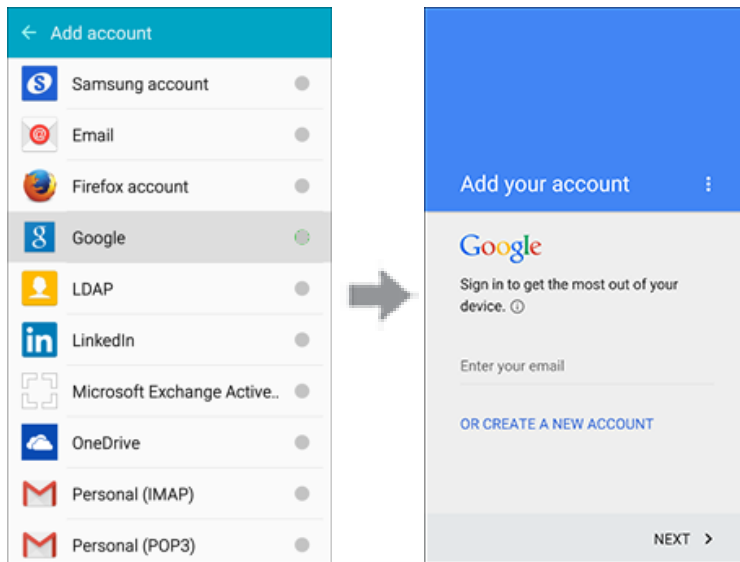

4. Enter your **First name** and **Last name**, and then tap **NEXT**.


This screenshot shows the 'Create a Google Account' screen. It has a blue header with the text 'Create a Google Account'. Below the header are two text input fields: 'First name' and 'Last name'. At the bottom right of the screen is a 'NEXT >' button.

5. Enter a desired **Username**, and then tap **NEXT**.

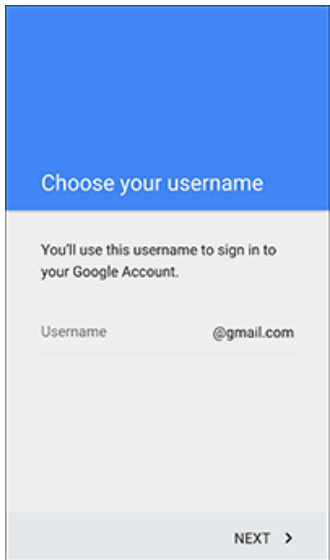


The screenshot shows a mobile app interface for choosing a username. At the top is a blue header with the text "Choose your username" in white. Below the header, on a light gray background, is the instruction "You'll use this username to sign in to your Google Account." followed by a text input field labeled "Username" with the placeholder "@gmail.com". At the bottom of the screen is a gray bar with the text "NEXT" and a right-pointing chevron.

6. When prompted, enter and re-type a password. Then tap **NEXT**.

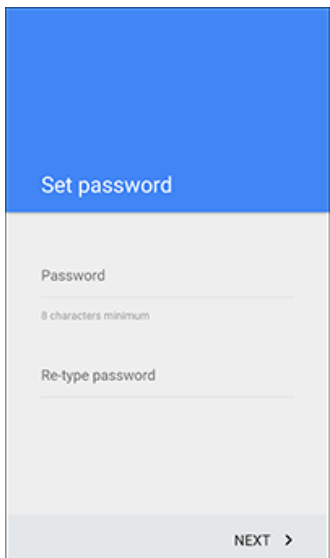

The screenshot shows a mobile app interface for setting a password. At the top is a blue header with the text "Set password" in white. Below the header, on a light gray background, are two text input fields. The first is labeled "Password" with a note below it stating "8 characters minimum". The second is labeled "Re-type password". At the bottom of the screen is a gray bar with the text "NEXT" and a right-pointing chevron.


7. Enter a valid phone number to help you recover your Google Account and password if you ever forget it, and then tap **NEXT**.

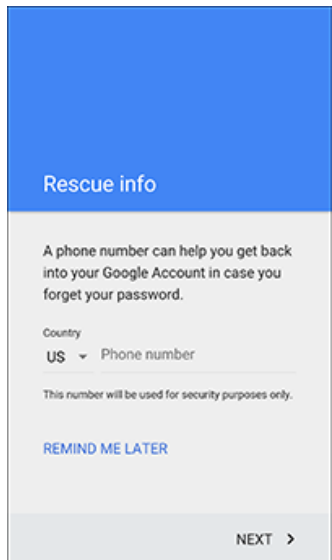

The screenshot shows a mobile screen with a blue header bar containing the text "Rescue info". Below the header, there is a paragraph of text: "A phone number can help you get back into your Google Account in case you forget your password." Underneath this text is a form with a "Country" label and a dropdown menu currently showing "US", followed by a "Phone number" label and an input field. Below the input field, a smaller line of text states: "This number will be used for security purposes only." At the bottom of the screen, there is a blue link that says "REMIND ME LATER" and a grey button with the text "NEXT >".


Note: When setting up a new Google Account, either on your phone or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your phone.

8. Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **ACCEPT**.

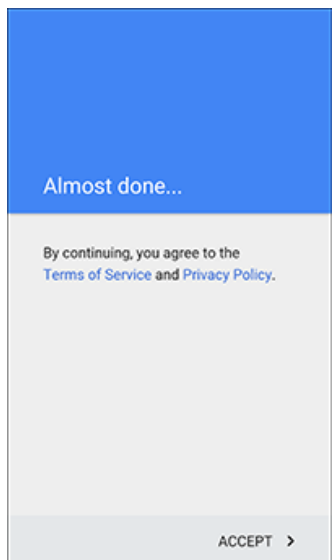


The screenshot shows a mobile screen with a blue header bar containing the text "Almost done...". Below the header, there is a paragraph of text: "By continuing, you agree to the Terms of Service and Privacy Policy." At the bottom of the screen, there is a grey button with the text "ACCEPT >".


9. Your phone connects with the Google servers and displays your account information. Tap **NEXT**.

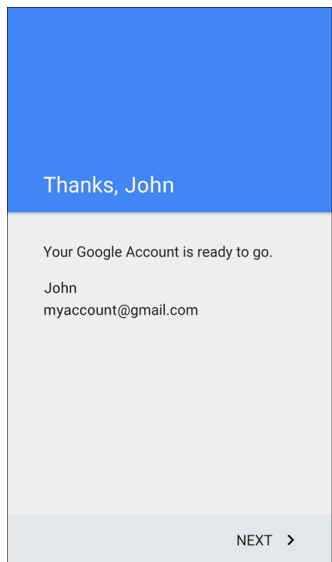


10. Configure your Google data backup and communication, and then tap **NEXT**.

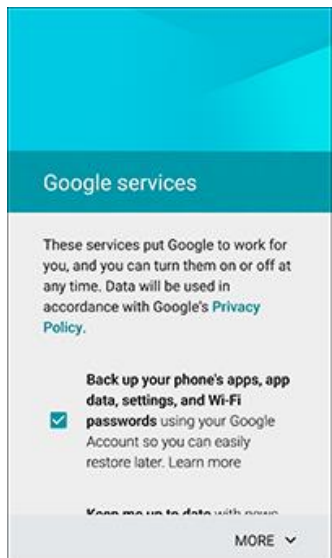

11. If desired, you can set up payment options for purchases through the Google Play store, and then tap **NEXT**.

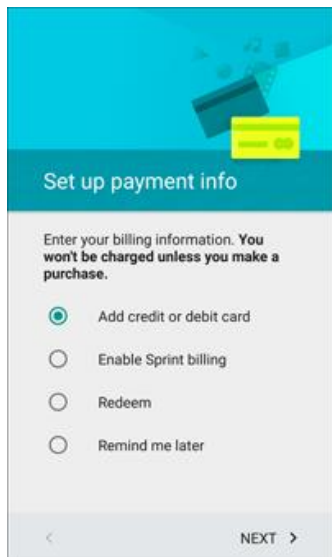


- ❖ You are signed in to your new Google Account.
- ❖ Your Google account is listed in **Apps**  > **Settings**  > **Accounts** .

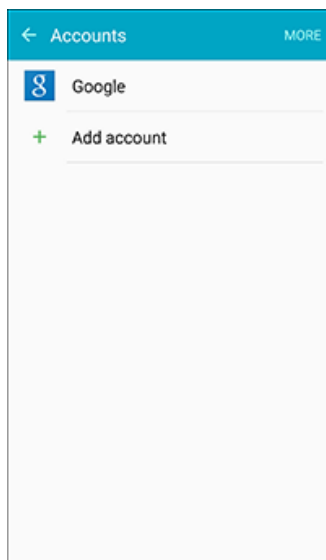

Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.


1. From home, tap **Apps**  > **Settings**  > **Accounts** .

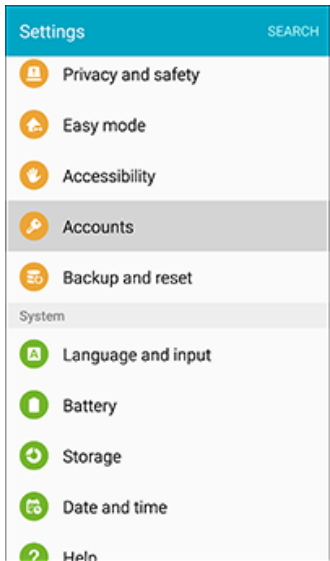


2. Tap **Add account**.




3. Tap **Google**.

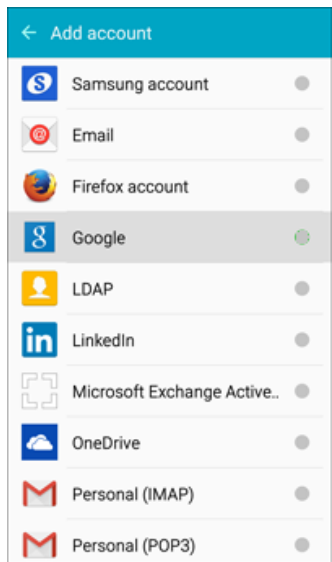

4. Tap **Enter your email**, enter your Gmail address, and then tap **NEXT**.

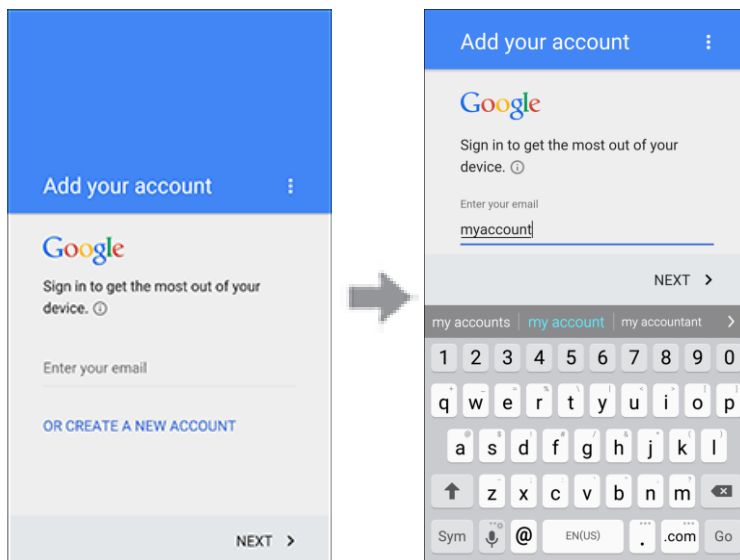


5. Enter your password and tap **NEXT**.

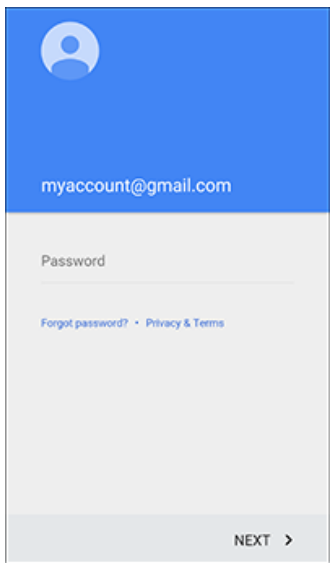


A screenshot of a mobile application's sign-in screen. The top section has a blue background with a white person icon in a circle. Below the icon, the email address "myaccount@gmail.com" is displayed in white. The bottom section has a light gray background. It contains a "Password" label above a text input field. Below the input field, there is a link that says "Forgot password? • Privacy & Terms". At the very bottom, there is a button labeled "NEXT" with a right-pointing chevron.

6. Read the Google Terms of Service, Privacy Policy, and other legal documents, and then tap **ACCEPT**.

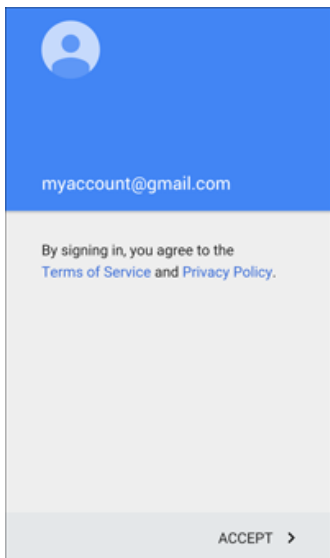


A screenshot of a mobile application's sign-in screen, similar to the one above. The top section has a blue background with a white person icon in a circle. Below the icon, the email address "myaccount@gmail.com" is displayed in white. The bottom section has a light gray background. It contains the text "By signing in, you agree to the" followed by a link "Terms of Service and Privacy Policy." in blue. At the very bottom, there is a button labeled "ACCEPT" with a right-pointing chevron.

7. Set up payment information for use in the Google Play store, and then tap **NEXT**.

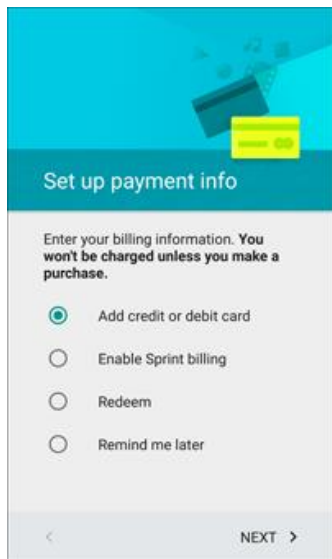


8. Tap the items from your Google Account that you want to sync to your phone. The checked items will be synced. Tap **NEXT** to continue.

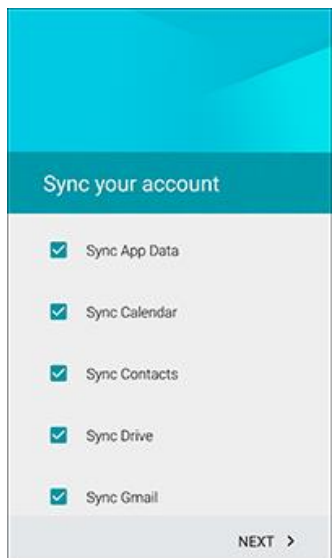

- ❖ You are now signed in to your Google Account, and your phone will start synchronizing with your Google Account.

❖ Your Google account is listed in **Apps**  > **Settings**  > **Accounts** .

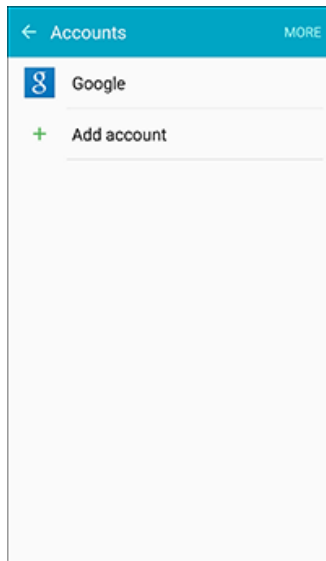

Note: Depending on your Google Account history, you may see a **Get your apps & data** screen instead of the **Sync your account** screen in step 8 above. Follow the prompts to complete your setup in either case.

Google Play Store

Google Play is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play store app, you must first connect to the Internet using your phone's Wi-Fi or mobile data connection and sign in to your Google Account. See [Browser](#) and [Sign In to Your Google Account](#) for details.

Installing Applications


Many different kinds of applications can be installed on your phone from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Important: Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.


Find and Install an App

When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

1. From home, tap **Apps**  > **Play Store** .
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Tap **ACCEPT** to continue.

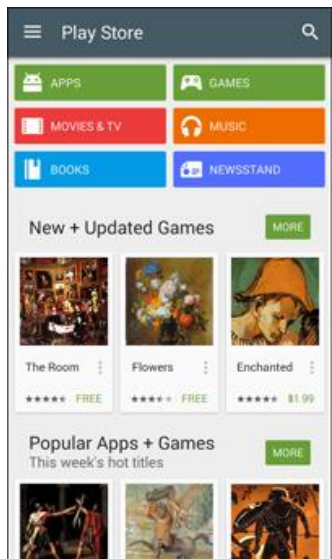

3. Browse through the categories (**APPS**, **GAMES**, **MOVIES & TV**, **MUSIC**, **BOOKS**, or **NEWSSTAND**), find an item you are interested in, and tap the name.

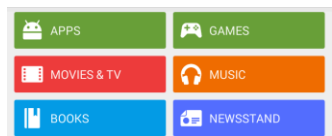

- Browse through featured apps. Scroll through the list of featured apps when you open Google Play.
 - Search for an app. Tap  on the Google Play home screen, enter the name or type of app you are looking for, and then tap  on the keyboard.
4. Tap an app to read a description about the app and user reviews.
 5. Tap **INSTALL** (for free applications) or the price (for paid applications).

Note: If you did not set up a payment option during phone setup or when adding your Google Account, you will be prompted to add a payment method when making a purchase from Google Play.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, tap **ACCEPT** (for free apps) or **ACCEPT** and then **BUY** (for paid apps) to begin downloading and installing the app.

❖ The selected app is downloaded and installed on your phone.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your phone.

Purchasing Applications

Purchase apps at your own risk. The company is not responsible for any disadvantage resulting for user or third parties.

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time.


1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **REFUND**, and then tap **YES** to confirm. Your app is uninstalled and the charge is cancelled.

Update an App


Depending on your settings, many apps will update automatically, or you can update apps directly from the Play store app.

Update an App Directly


1. From home, tap **Apps**  > **Play Store** .

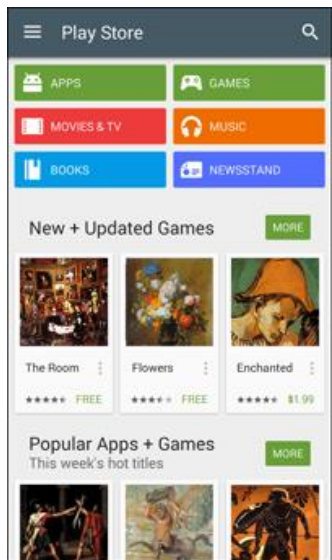

2. Tap **Menu**  > **My apps**.

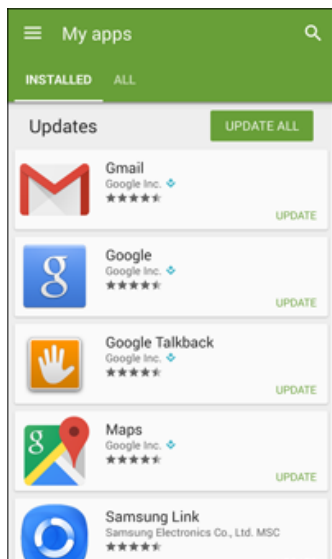


3. Tap the app you want to update, and then tap **UPDATE** > **ACCEPT**.

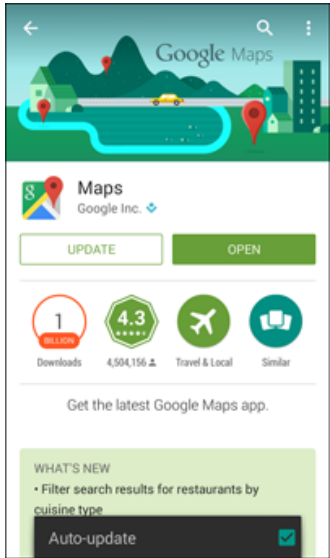


- ❖ The app update is downloaded and installed.

Set Automatic App Updates


1. From home, tap **Apps**  > **Play Store** .

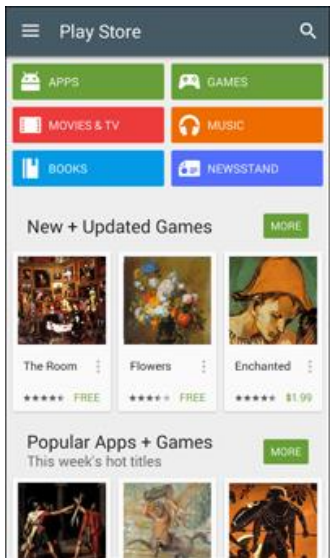

2. Tap **Menu**  > **My apps**.

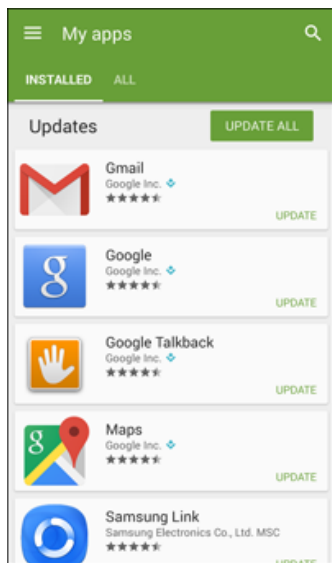

3. Tap the app you want to set for auto-update, and then tap **More options**  > **Auto-update**.

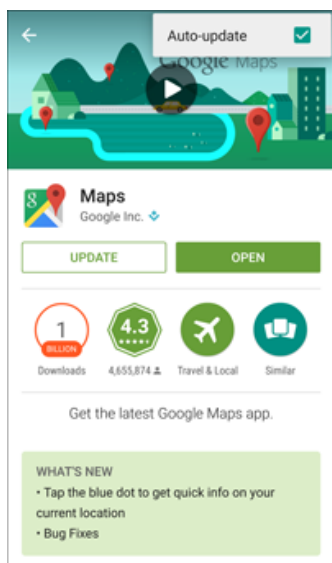


- ❖ The app is set to update automatically whenever an update becomes available.

Note: Automatic updates are unavailable for some apps.


Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.


1. From home, tap **Apps**  > **Play Store** .

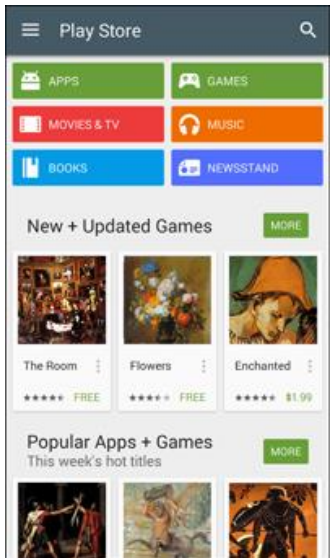

2. Tap **Menu**  > **My apps**.

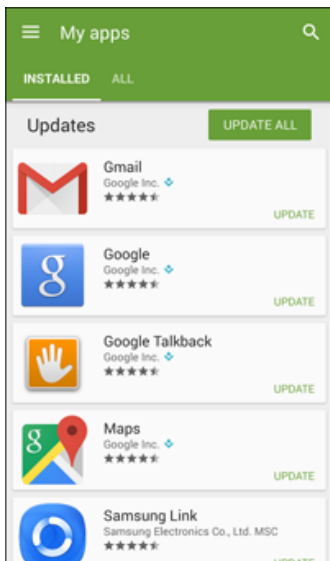

3. On the Installed screen, tap the app you want to uninstall, and then tap **UNINSTALL** > **OK**.

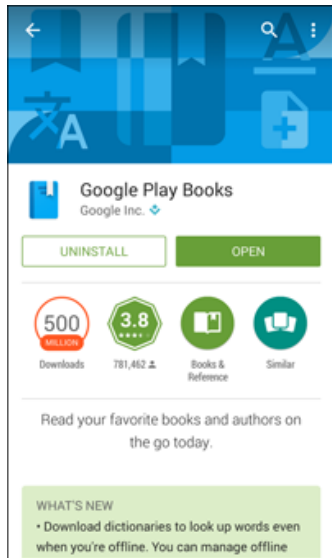


- ❖ The app is uninstalled and removed from your phone.


Get Help with Google Play

The Google Play store app offers an online help option if you have questions or want to know more about the app.

1. From home, tap **Apps**  > **Play Store** .

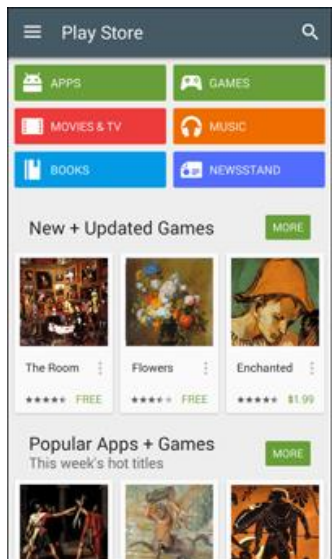

2. Tap **Menu**  > **Help & feedback**.

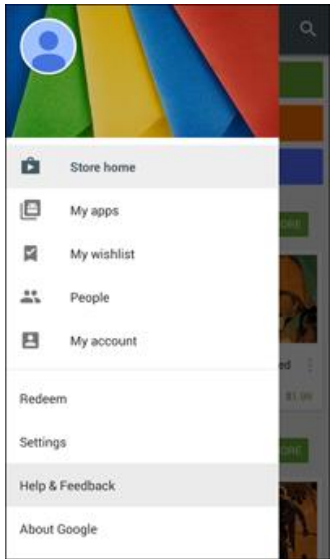


- ❖ The Web browser will take you to the Google Play Help Web page, where you will find comprehensive, categorized information about Google Play.

Lock and Unlock Your Screen

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power** key. Pressing the **Power** key again or receiving an incoming call will turn on your phone screen and show the Lock screen.

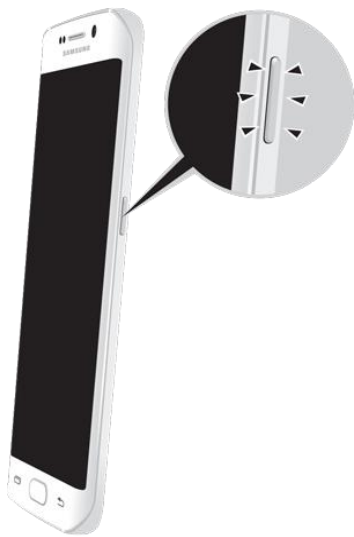

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Display Settings](#).

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power key**.



❖ The Lock screen appears.

2. Swipe your finger across the screen to unlock it.



❖ The screen is unlocked.

- If you have set up a screen lock, you will be prompted to draw a pattern, enter a password or PIN, or scan your fingerprint. See [Screen Lock](#).

Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the **Settings > System update** menu.

Software Update Cautions

During update: The phone cannot be used until the software update is complete. It may take time to update your phone's software.

Signal during update: Update your phone where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the phone.

Other functions during update: Other phone functions cannot be used during a software update.

Update Your Phone Software

You can update your phone's software using the **System update** option.

Before Updating Your Phone

Updating your phone may result in a loss of saved data depending on the condition of your phone (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your phone firmware.

Back Up All Data Prior to Update

To back up your Gmail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Google** > [your account].
2. Tap the **ON/OFF** switches to enable backup of each item.
3. Tap **MORE** > **Sync now** to sync your Google Account information.

To back up your Exchange Mail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
2. Tap the **ON/OFF** switches to enable backup of each option (Calendar, Contacts, Email, Tasks).
3. Tap **MORE** > **Sync now** to sync your Microsoft Exchange ActiveSync information.

To back up your Google apps:


Your Google app purchases are saved remotely and can be re-installed after the update is applied.

1. From home, tap **Apps**  > **Play Store** .
2. Tap **Menu**  > **My apps** > **ALL** tab.
3. Scroll through the list of previously downloaded Google apps and choose those you wish to reinstall.
4. Follow the onscreen instructions.

Update Your Phone's Software

Once you have backed up all your data, use the **Update now** option to update your phone's software.

- From home, tap **Apps**  > **Settings**  > **System update**  > **Update now**.

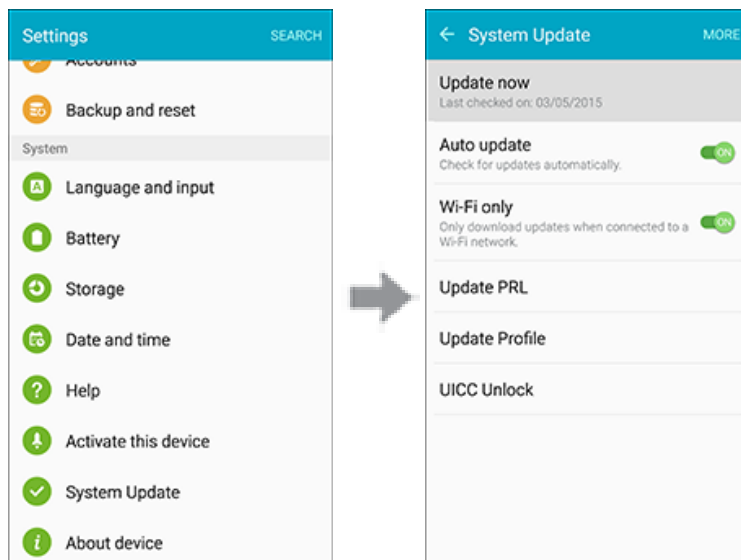


- ❖ Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the software upgrade.

– or –

1. Locate the **System Update Available** icon  in notifications.
2. Drag the Status Bar down.
3. Tap  to open the System Updates screen.
4. Tap **Download** and follow the onscreen instructions. The downloading icon  appears within the Status Bar to indicate the phone is downloading the necessary files.
5. Follow the prompts to install the update and restart your phone.

Confirm Your Current Phone Software

1. From home, tap **Apps**  > **Settings**  > **About device** .

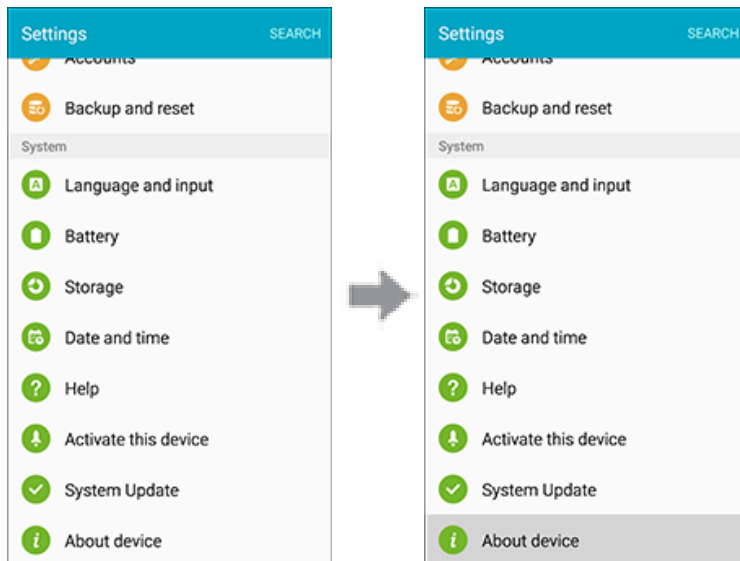


2. Locate the Software version read-only field.



Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. From home, tap **Apps**  > **Settings**  > **System update**  > **Update Profile**.

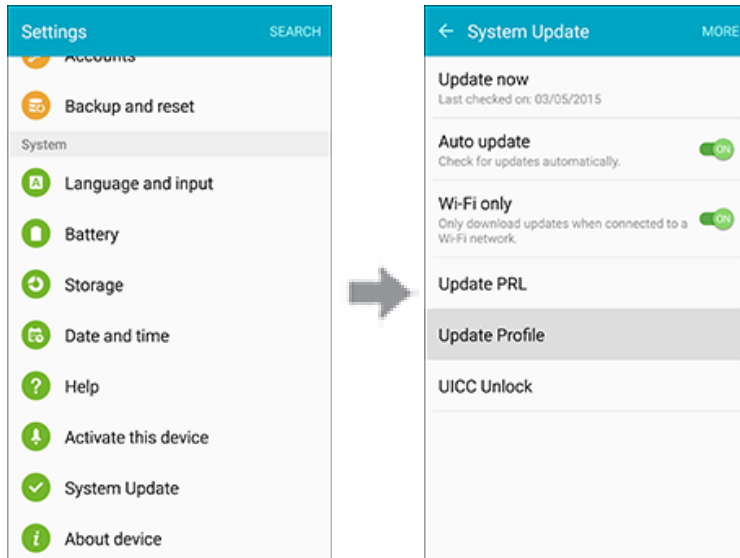


2. Follow the onscreen instructions.
 - ❖ The phone will download and install the profile update and you will see a confirmation when complete.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. From home, tap **Apps**  > **Settings**  > **System update**  > **Update PRL**.

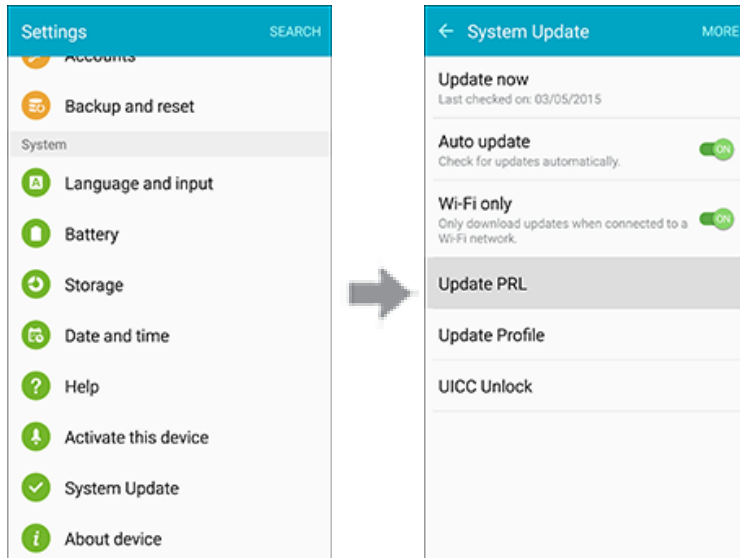

2. Follow the onscreen instructions.
 - ❖ The phone will download and install the PRL update and you will see a confirmation when complete.

Your Phone Interface

The following topics describe how to use and customize your phone's Home screen, understand the Status Bar, and use the Notification Panel.

Home Screen Basics

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your Home screen by adding application icons, shortcuts, folders, widgets, and more.

Home Screen Layout

Your Home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.



Item	Description
Application Icons	Application icons are shortcuts to favorite applications. You can add and remove these shortcuts as you wish.
Applications (Apps) List	Tap to open the applications (apps) list. The apps list key is a primary shortcut available from all Home screens.
Notification Area	The notification area of the Status Bar (on the left) displays notifications for incoming messages, missed calls, application updates, and more.
People Edge	Tap to open the People Edge. See People Edge .
Primary Shortcuts	Primary shortcuts are application shortcuts that appear in the same location on all of your phone's Home screens. These are customizable except for the Applications (Apps) shortcut, which remains static.
Status Area	The status area of the Status Bar (on the right) displays phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, ringer status, and time.
Status Bar	The Status Bar displays icons to notify you of your phone's status (on the right side) and notifications (on the left side).
Widget	Widgets are self-contained onscreen apps that reside on your phone's Home screen.

Note: The indicator above the primary shortcuts lets you know your current screen position.

Tip: Press the **Home** key to return to the main Home screen from any other screen.

Extended Home Screens

In addition to the main Home screen, your phone features extended Home screens to provide more space for adding icons, widgets, and more. Press the **Home** key to display the main Home screen and then drag across the screen to move from the main screen to an extended screen.



- Swipe left or right to go to an extended Home screen.
- While on an extended screen, press the **Home** key to return to the main Home screen.

Add Home Screens

If you want to set up more shortcuts or widgets than you have space for, you can add more home screens.

1. Touch and hold an empty area on a Home screen.
2. Scroll through the thumbnail screens to the right until you see a blank screen with a + sign.




3. Tap **+** to add the screen.
 - ❖ A new blank home screen will be added to the far right of your screens.

Status Bar

The Status Bar at the top of the Home screen provides phone and service status information on the right side and notification alerts on the left. To view the Notification Panel or access the quick settings menu, tap the Status Bar and drag it down.

Status Bar Layout

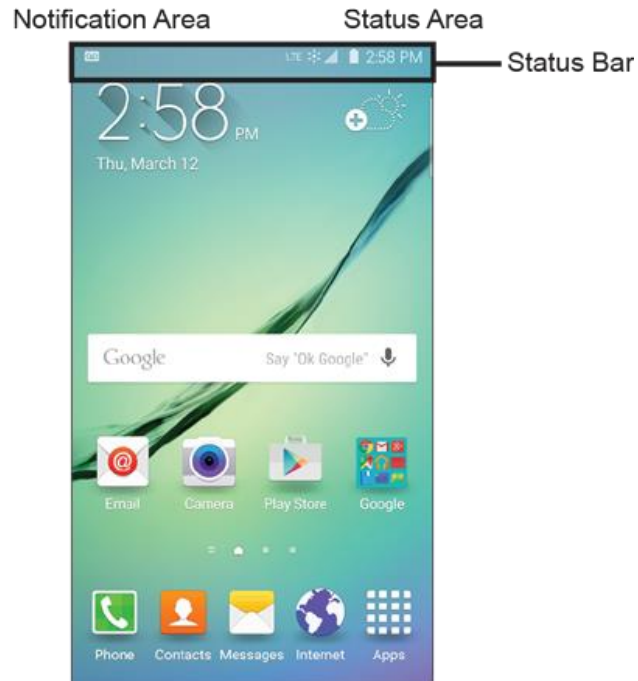

Main Notification Icons

Icon	Notification
	Missed call
	Call on hold
	New voicemail
	New email
	New Gmail
	New text or MMS message
	New Hangout message

Icon	Notification
	New Sprint Zone message
	Event
	USB connection
	Alarm
	Warning
	Update available
	Update downloading
	Update successful
	Keyboard active
	More notifications available (drag down to view)

Main Status Icons

Icon	Status
	Bluetooth active
	GPS active
	Wi-Fi active
	Downloading
	Mute mode
	Vibrate mode
	Speakerphone active
	Network (full signal)


Icon	Status
	Network (roaming)
3G	3G Data Service
	3G Data Service is in use. The rays spin when data is being transferred.
LTE 	Sprint Spark Enhanced LTE data service. The rays spin when data is being transferred.
	Airplane mode
	Sync active
	Battery (charging)
	Battery (full charge)

Notification Panel

Drag the Status Bar down to open the Notification Panel. From there, you can check notifications, download updates, open messaging apps, use the quick settings menu, and more.

Open the Notification Panel

- Drag the Status Bar down. Slide your finger down from the top of the screen.

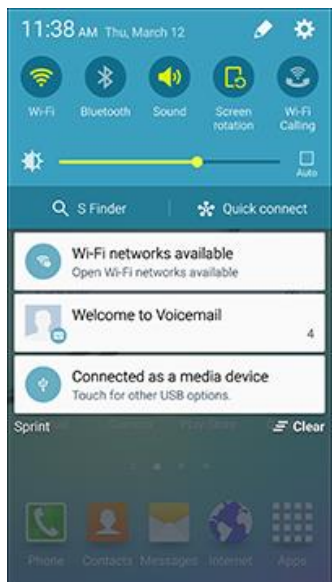

- ❖ The Notification Panel opens. To check notifications, tap an item in the list.

Close the Notification Panel


- Drag the Notification Panel up. (Slide your finger up from the bottom of the screen.)

— or —

Tap the **Back** key  to close the Notification Panel.

Notification Panel Layout

The Notification Panel gives you access to notifications, settings, and the quick settings menu.

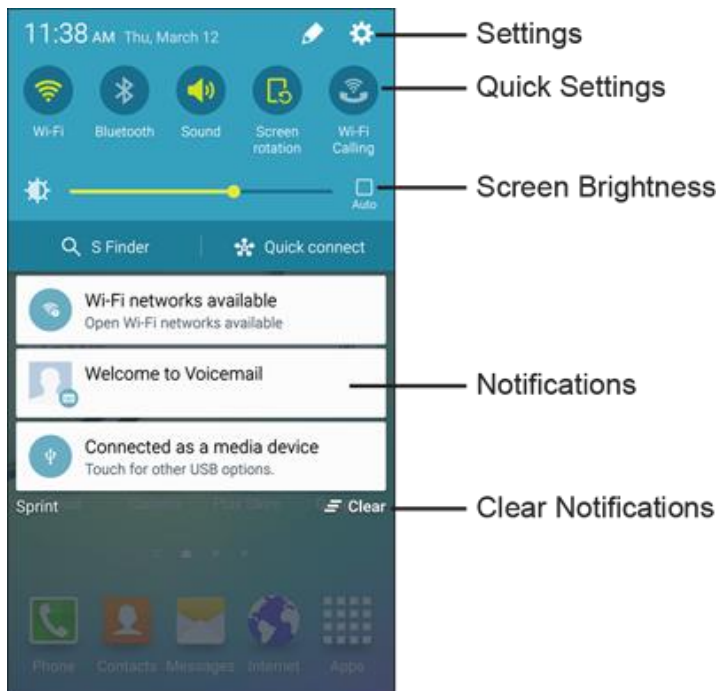


Notification Panel Quick Settings

The Quick Settings list at the top of the Notification Panel lets you quickly access frequently used settings options. Scroll left or right to display all available settings, and tap an icon to turn the selected feature on or off.

You can customize which settings are available in your Quick Settings list.

1. From a Home screen, drag the Status Bar down to display the Notification Panel.

2. Tap **Edit**  to display the quick settings panel options.

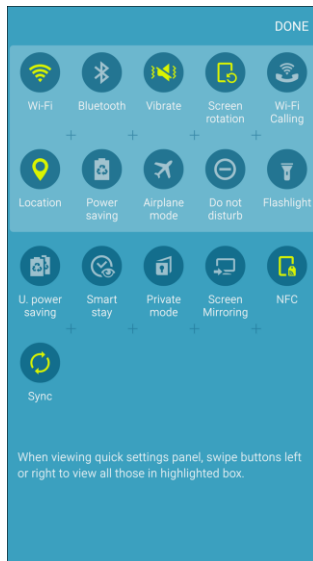

3. Drag buttons to arrange which options appear in the quick settings panel.
- You will see two sets of buttons, Active Buttons on top and Available Buttons below.
 - You can have ten buttons active in the quick settings panel. These appear in the Active Buttons list.
 - There will additional buttons shown in the Available Buttons list. These are not currently active in the quick settings panel.
 - To add, remove, or move a button, touch and hold it and move it to the desired location.
4. Tap **DONE** when you are finished.

Note: You can only move buttons from Active to Available or vice-versa if there is space in the destination area. For example, if there are already ten Active buttons, you will need to move one to Available before dragging a different Available button up to the Active area.

S Finder


Search your device for apps, contacts, messages, email, files, settings, and more.

1. Open the Notification Panel by sliding your finger down from the top of the screen.



❖ The Notification Panel opens.

2. Tap **S Finder**.

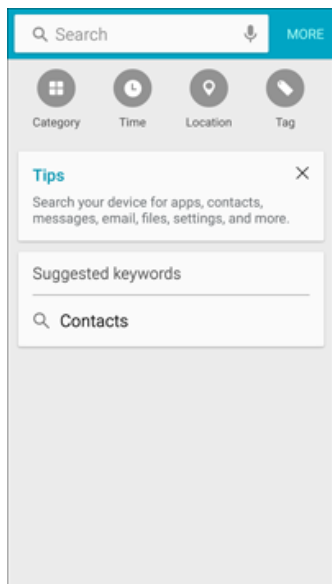


3. Tap the **Search** field and enter search criteria.
4. Tap an item to view or launch.

Quick Connect


Quickly connect wirelessly to nearby devices that support Quick connect, Wi-Fi Direct, Screen Mirroring, and devices that can share media via Wi-Fi.

1. Open the Notification Panel by sliding your finger down from the top of the screen.

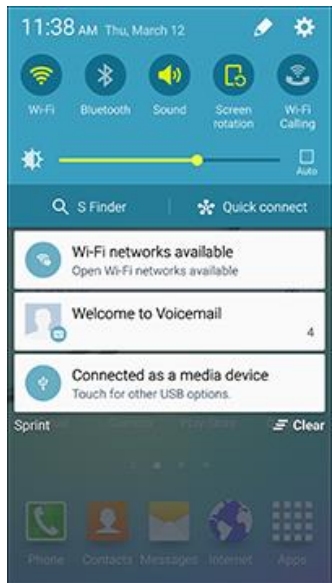

❖ The Notification Panel opens.

2. Tap **Quick connect** and set your device visibility:

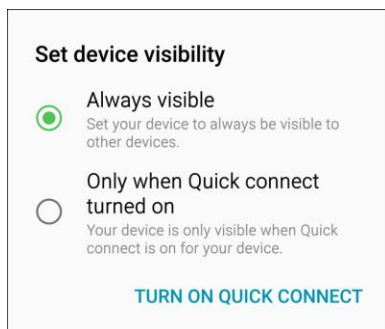

- **Always visible:** Your device will always be visible to other devices.
- **Only when Quick connect turned on:** Your device will only be visible to other devices when Quick connect is turned on.

3. Tap **TURN ON QUICK CONNECT** to view available devices.
4. Tap a device and follow the prompts to connect.

Tip: For more information about Quick Connect, tap **QUICK CONNECT HELP** from the connections screen.

Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the Home screen.

Operations for Rearranging the Home Screen

- **Moving Widgets and Icons:** From home, touch and hold an item and then drag it to the desired location.
- **Deleting Widgets and Icons:** From home, touch and hold an item and then drag it to **Remove** .
- **Displaying the Home Screen Menu:** From home, touch and hold an empty space to display the Home Screen menu. Menu options include Wallpapers, Widgets, Themes, and Screen grid.

Change the Wallpaper

Select and assign your phone's background wallpaper.

1. From home, touch and hold an empty space, and then tap **Wallpapers** .



- You can also access the wallpaper menu through settings. From home, tap **Apps**  > **Settings**  > **Wallpaper** .

2. Tap **Home screen**, and then tap an option to select the wallpaper.



- **Home screen:** Set the background wallpaper for your Home screen.
 - **Lock screen:** Set the wallpaper for your phone's Lock screen.
 - **Home and lock screens:** Set a wallpaper for both your Home screen and your Lock screen.
3. Select a wallpaper and tap **SET AS WALLPAPER**.
 - ❖ The wallpaper is set.

Add Shortcuts to the Home Screen

You can add shortcuts for quick access to favorite apps from the Home screen.

1. From home, tap **Apps** .



- ❖ The Apps list opens.
2. Touch and hold an app icon.
 - ❖ The icon will disengage and you will see thumbnails of your Home screens.
 3. Drag the icon to an empty location on one of the Home screens.
 - ❖ The shortcut is added to the Home screen.

Add Widgets to the Home Screen

You can add widgets to your phone's Home screen. Widgets are self-contained apps that display on a Home screen. Unlike a shortcut, the Widget works like as an onscreen application. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

1. From home, touch and hold an empty space, and then tap **Widgets** .



2. Touch and hold a widget icon.
 - ❖ The icon will disengage and you will see thumbnails of your Home screens.
3. Drag the icon to an empty location on one of the Home screens.
 - ❖ The widget is added to the Home screen.

Add Folders to the Home Screen

You can group Home screen shortcuts into folders for convenient access.

1. From home, touch and hold a shortcut you want to place in a folder, and then drag it on top of another shortcut and release it.



2. Type a name for the folder and tap **Done**.
 - ❖ A new folder is created.
3. To add more app shortcuts to the folder, touch and hold a shortcut and drag it on top of the new folder.
 - ❖ The new shortcut is added to the folder.

Change Folder Names

Once you have added folders, you can change the name easily from the folder display.

1. From home, tap the folder to open it, and then tap the folder name.
2. Type a new name and then tap **Done**.

Change the Folder Color

You can change the color of a folder.

1. From home, tap the folder to open it.
2. Tap  and select a color.


Phone App

The following topics outline the use of your device's phone app to place and receive calls, use voicemail, set up and manage contacts, and more.


Wi-Fi Calling

Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.

1. From a Home screen, tap **Apps**  > **Settings** .

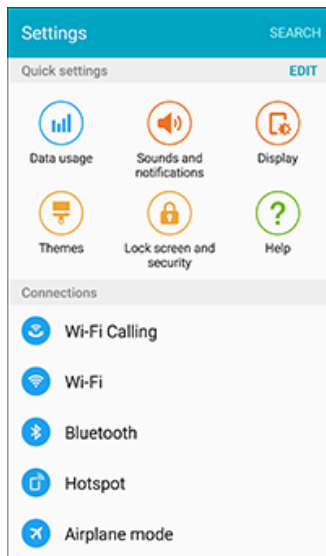

2. Tap **Wi-Fi Calling**  and follow the online prompts to set up Wi-Fi Calling.

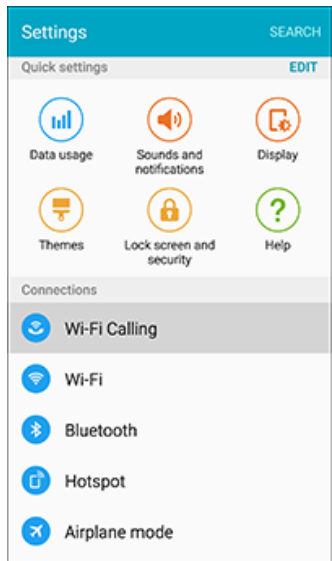

❖ Wi-Fi Calling is set up.

For more information, see [Wi-Fi Calling Settings](#).

Place and Answer Calls

The following topics describe how to directly dial calls, how to answer incoming calls, and how to use the in-call screen options.

Adjust In-Call Volume

- **Adjusting Call Volume:** Press the **Volume** key up or down during the call.

Troubleshooting

Problem: Difficulty during call.

Solution 1: It may not be possible to make a call properly in a noisy location.

Solution 2: When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.


Problem: Sound pops momentarily during a call.

Solution: Are you changing location while calling? Sound pops when signal is weak and the phone switches to a different area.

Call Using the Phone Dialer


The most “traditional” way to place a call is by using the phone’s dialer screen.

1. From home, tap **Phone**  to display the phone screen.

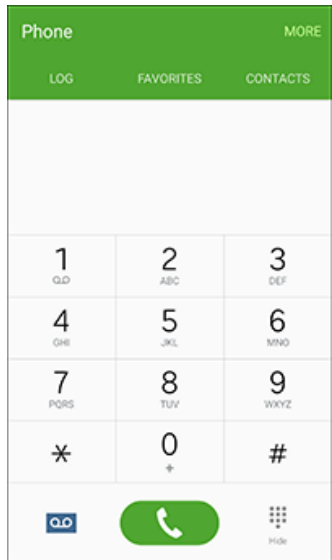


- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Tap the number keys on the keypad to enter the phone number.

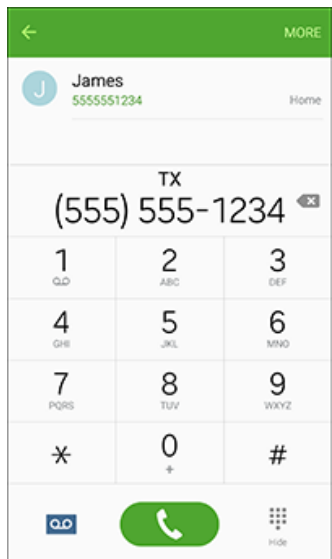

- As you enter digits, Smart Dial searches for contacts that match. If you see the number you want to dial, tap the contact to fill in the number on the keypad.

3. Tap  to call the number.

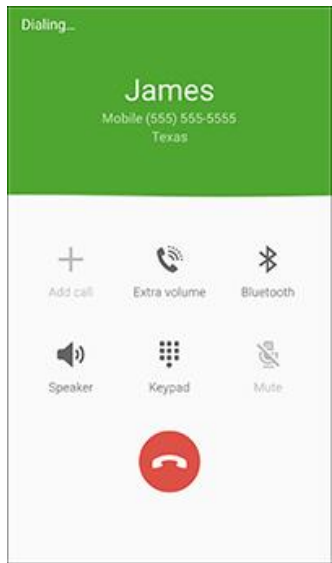

- ❖ The phone dials the number. The call begins when the other party answers.

4. To end the call, tap .

- ❖ The call ends.

Troubleshooting

Problem: Call does not connect.

Solution 1: Was the number dialed using the correct area code?

Solution 2: Are you in an area with poor wireless coverage? Try calling again from another area.

Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

To call the 9-1-1 emergency number when the phone's screen is locked with a screen lock:

1. From the Lock screen, swipe the Phone shortcut  up, and then tap **Emergency call**.
2. Tap    .

- ❖ As long as you are in an area covered by wireless service, the emergency call is placed.

To call the 9-1-1 emergency number normally or when your account is restricted:

1. Unlock the screen. For more information, see [Lock and Unlock Your Screen](#).
2. From home, tap **Phone** .
 - If necessary, tap  to display the keypad.
3. Tap    .

❖ As long as you are in an area covered by wireless service, the emergency call is placed.

Enhanced 9-1-1 (E9-1-1) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.

Answer Phone Calls


The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in Contacts, only the default caller ID icon and phone number appear on the Incoming call screen.

Note: If your phone is turned off, all calls automatically go to voicemail.

Answer an Incoming Call

1. When a call arrives, drag  to the right to answer it.

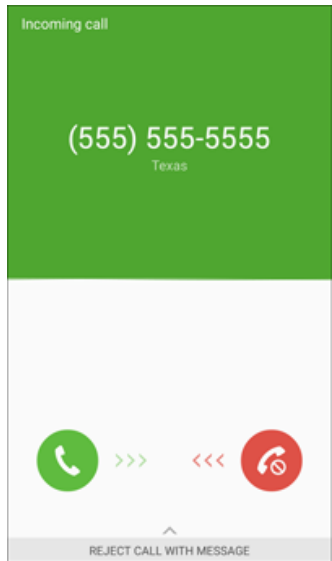

❖ The call begins.

2. To end the call, tap .


❖ The call ends.

Mute the Ringing Sound

- To mute the ringer without rejecting the call, press the **Volume** key down.

Reject an Incoming Call

- When a call arrives, drag  to the left to reject it.

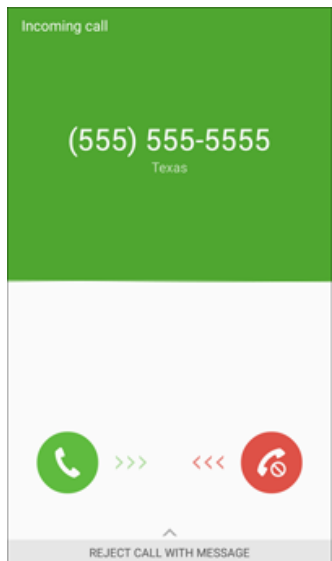


- ❖ The ringtone or vibration will stop and call will be sent directly to voicemail.

Reject a Call and Send a Text Message

You can reject an incoming call and automatically send a text message to the caller.

1. When a call arrives, drag **REJECT CALL WITH MESSAGE** up from the bottom of the screen.

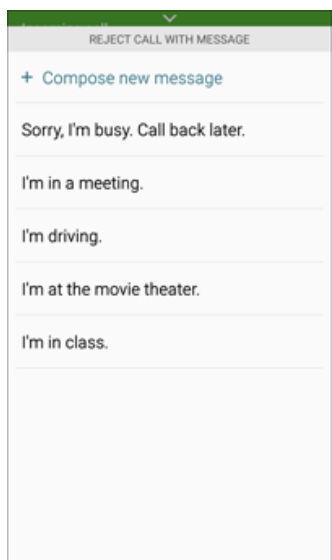

2. Tap one of the messages to send it to the caller.

❖ The selected message will be delivered to the caller.


- You can edit the reject messages through the Call settings menu. From home, tap **Apps**  > **Settings**  > **Applications**  > **Phone** > **Call rejection** > **Rejection messages** and edit or create reject messages.

In-Call Screen Layout and Operations

While you are on a call, you will see a number of onscreen options.

In-Call Screen Layout

Tap options to activate them during a call.

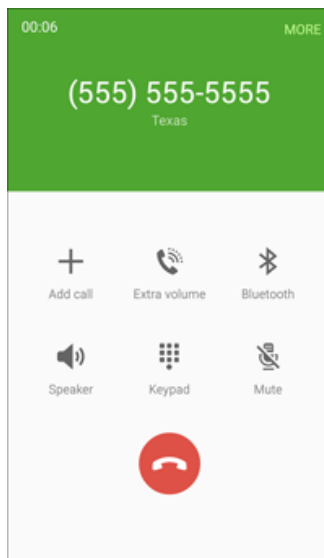

- **Add call:** Tap to initiate a conference call.
 - After the second call is placed, tap **Merge** to join the two calls (conference).
- **Extra volume:** Increase the current volume of the call.
- **Bluetooth:** Route the phone's audio through a connected Bluetooth headset (On) or through the speaker (Off).
 - When the call is routed to a Bluetooth headset, the current call area shows the **Bluetooth**  icon.

Note: The Bluetooth button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the phone, tap **Bluetooth** to temporarily use the phone. Tap it again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker.

- **Speaker:** Route the phone's audio through the speaker (On) or through the earpiece (Off).
 - Activate **Speaker** to route the phone's audio through the speaker. (You can adjust the speaker volume using the **Volume** key.)
 - Deactivate **Speaker** to use the phone's earpiece.

Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Keypad/Hide:** Toggle the appearance of the onscreen keypad.
- **Mute:** Mute the microphone during an active call. Tap again to unmute the microphone.

Note: If Mute is activated, the speaker mode is deactivated.

- **End call:** Tap  to end the current call.

Additional In-Call Options

- Tap **MORE** to display additional in-call options:
 - **Contacts:** Display your Contacts list.
 - **Message:** Send a text or multimedia message while remaining on the call.
 - **Memo:** Create a new memo while remaining on the call.
 - **Calendar:** View your calendar while remaining on the call.

End of Call Options

When a call ends, you will briefly see an end-of-call options screen, which may include:

- **View contact:** Display the contact information for the caller.
- **Create contact:** Create a new contact entry for the caller. See [Add a Contact](#).
- **Update existing:** Add the caller's phone number to an existing contact entry. See [Edit a Contact](#).
- **Add event:** Schedule a meeting and invite the caller. See [Add an Event to the Calendar](#).
- **Call:** Place a call to the caller.
- **Message:** Address a text message to the caller. See [Send a Text Message](#).


Place Calls from Contacts/Call Logs

Make calls quickly using Contacts and Call Logs.


Place a Call from Contacts

You can place phone calls directly from entries in your Contacts list.

1. From home, tap **Phone** .

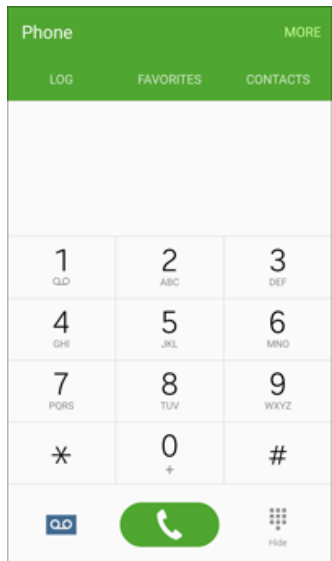


2. Tap **CONTACTS** to display the Contacts list.

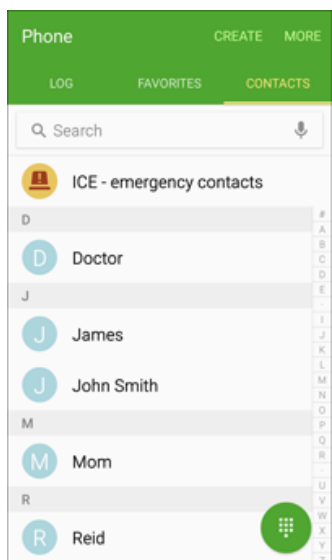

- ❖ The Contacts list appears.

3. Tap a contact.

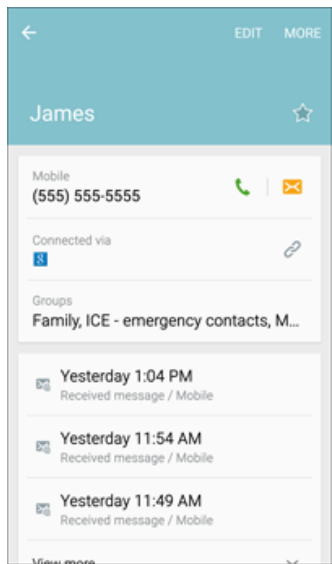

4. Tap **Call**  next to the number you want to call.

❖ The phone dials the number. The call begins when the other party answers.

5. To end the call, tap .


Tip: You can also place a call directly from the Contacts list. Swipe the entry you want to call from left to right to place a call to the entry's primary number.




Call from Call Logs

The call logs list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. From home, tap **Phone** .

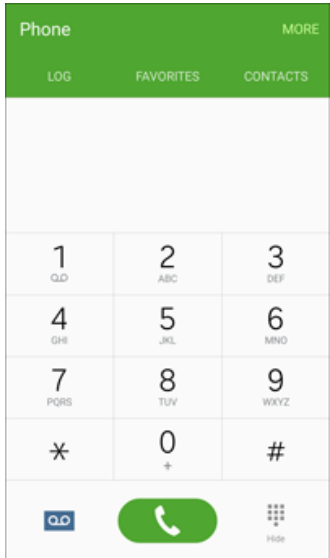


2. Tap **LOG** to display the call logs list.

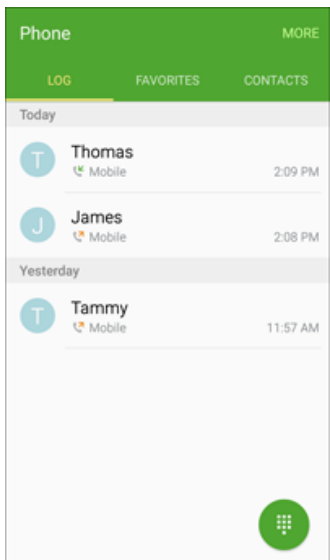

- ❖ The call logs list appears.

3. Tap an entry to display the call details.

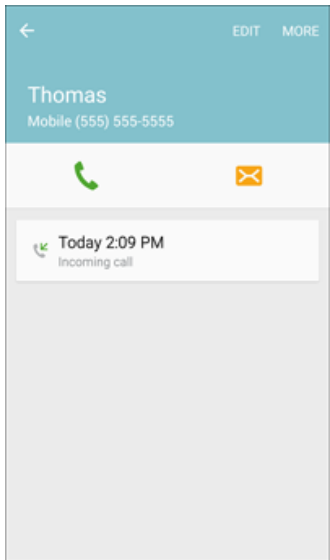

4. Tap  to place a call.

- ❖ The phone dials the number. The call begins when the other party answers.
- For additional options, tap the name or number.

5. To end the call, tap .

Tip: You can also place a call directly from the Call logs list. Swipe the entry you want to call from left to right to place a call.




Optional Services

The following topics outline additional voice-related services available with your phone, including call services, voicemail, and more.

Voicemail Setup


You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. From home, tap **Phone**  to display the phone screen.

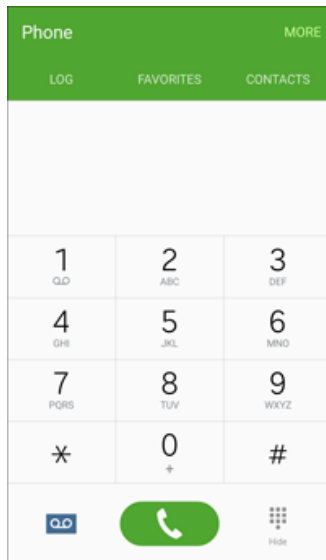

- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Touch and hold  to dial your voicemail number.

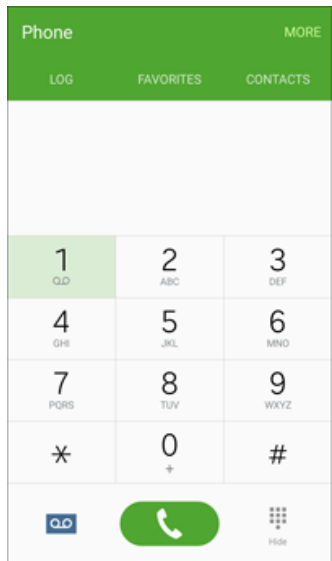

❖ Your phone dials the voicemail access number.

3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail


Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Voicemail Setup](#).


1. From home, tap **Apps**  > **Voicemail** .

– or –

Tap **Phone** , and then tap  to access your Visual Voicemail.

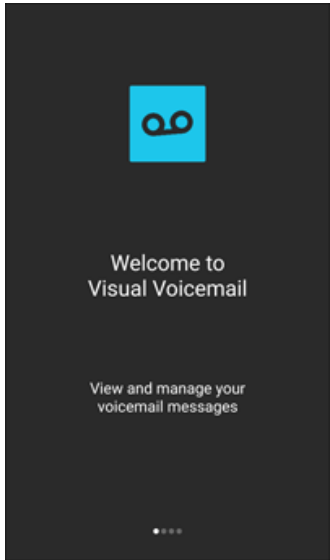

2. Scroll through the **Welcome to Visual Voicemail** introduction screens to view a brief explanation of the visual voicemail services.
3. At the end of the welcome screens, a **Personalize your voicemail** prompt displays.

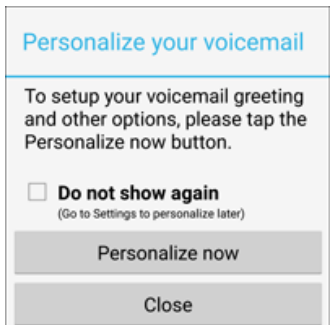

❖ You'll see a Personalize your voicemail prompt.


4. Tap **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Review Visual Voicemail


Visual Voicemail lets you easily access and select which messages you want to review.

1. From home, tap **Apps**  > **Voicemail** .

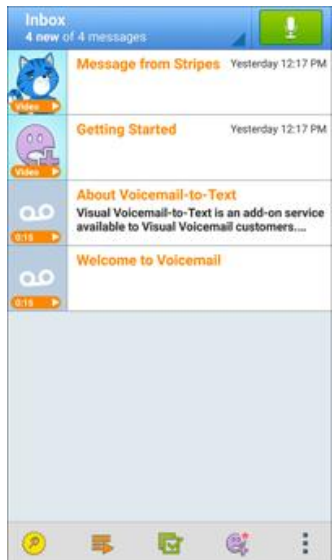

❖ You will see the voicemail inbox.

2. Tap a message, and then tap **Play**  to review it.

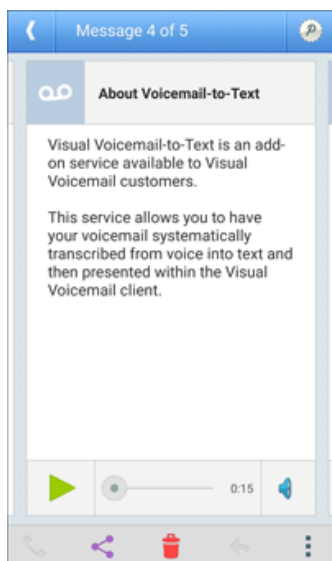


Tip: There are several icons at the bottom of the review screen for maintenance, storage, messaging, and other options. For an explanation of all your options, tap **More options**  **> Help > Visual Voicemail Menu > Visual Voicemail Settings.**

Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message.

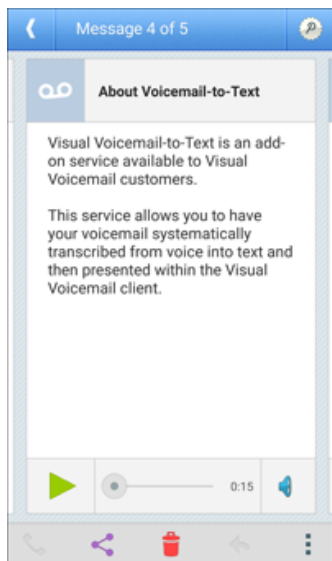


You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you are finished listening to the current one.

Visual Voicemail Options

Your visual voicemail options appear as icons at the bottom of the voicemail review screen.

1. From home, tap **Apps**  > **Voicemail** .

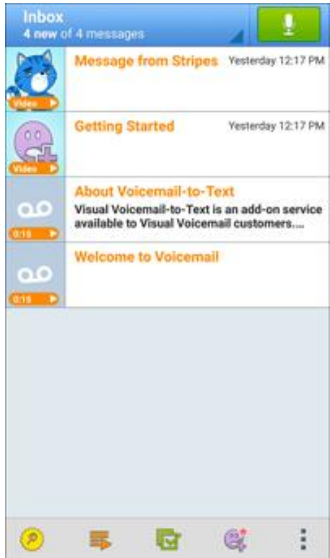

2. The following options are available when viewing new voicemail messages:
 -  **Subscribe:** Subscribe to the premium Voice-to-Text transcription service. (This service requires an additional monthly charge.)
 -  **Play all new:** Play all new messages.
 -  **Select multiple:** Perform an action on multiple messages.
 -  **Compose Avatar message:** Send an animated voice message to friends. You can also compose an Avatar message by tapping .
 -  **More options:** Access Search, Settings, and Help features.
3. Tap a message to review it. The following options are available while listening to voicemail messages:
 -  **Call:** Dial the number the message came from.
 -  **Share:** Send the message via Wi-Fi Direct, social accounts, and so on.
 -  **Delete:** Delete selected messages.
 -  **Reply:** Reply to the message via text or voice message.
 -  **More options:** Access Archive, Settings, and Help features.

4. Touch and hold a message to manage your messages. The following options are available:


-  **All:** Select all messages.
-  **Delete:** Delete the selected messages.
-  **Archive:** Save this message.
-  **Mark as Read:** Mark this voicemail as being read.
-  **Mark as Unread:** Mark this voicemail as not being read.

Note: Not all options are available for all messages.

Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. From home, tap **Apps**  > **Voicemail** .

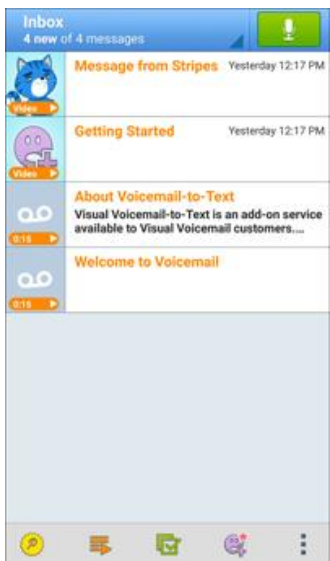

2. Tap **More options**  > **Settings**.



❖ You will see the voicemail settings menu.


3. Select an option to change its settings:

- **Avatar:** Configure you Avatar options.
- **Display:** Change your voicemail message theme and enter a name to identify yourself to people when replying or forwarding messages.
- **Help:** View help topics for using Visual Voicemail.
- **Preferences:** Change your Visual Voicemail application preferences.
- **Sound:** Change your sound/speakerphone options.
- **Updates:** Check for updates.
- **About Voicemail:** View information about the application.

Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. From home, tap **Apps**  > **Voicemail** .

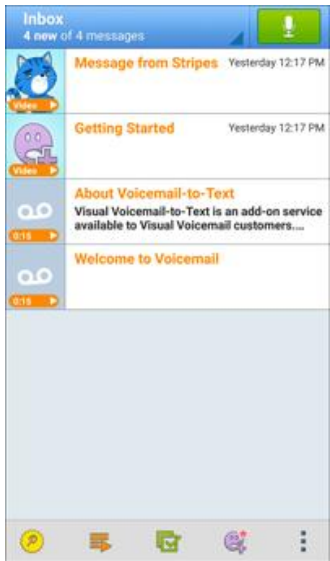


2. Tap **More options**  > **Settings** > **Preferences** > **Personalize voicemail**.
3. Tap **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.

Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. From home, tap **Apps**  > **Voicemail** .

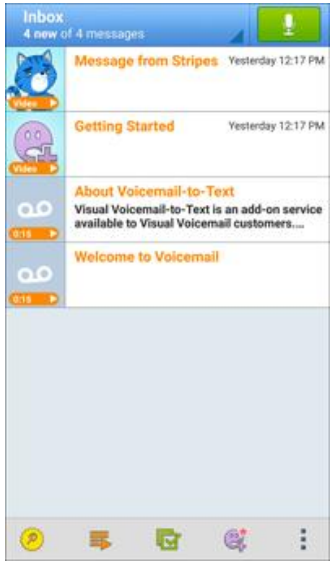


2. Tap **More options**  > **Settings** > **Display** > **Display name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Caller ID Blocking

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. From home, tap **Phone**  to display the phone screen.

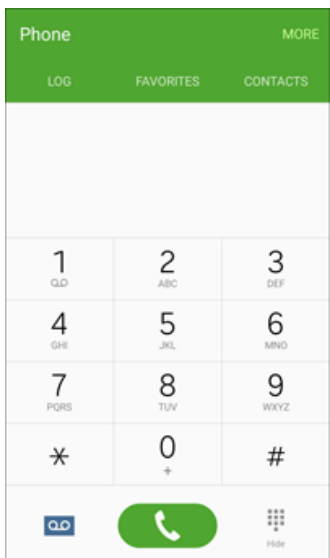

- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Tap   .
3. Enter a phone number.
4. Tap .

❖ Your caller information will not appear on the recipient's phone.


To permanently block your number, call Sprint Customer Service.

Call Waiting

When you are on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you are on a call:

- Slide  to the right. (This puts the first caller on hold and answers the second call.)

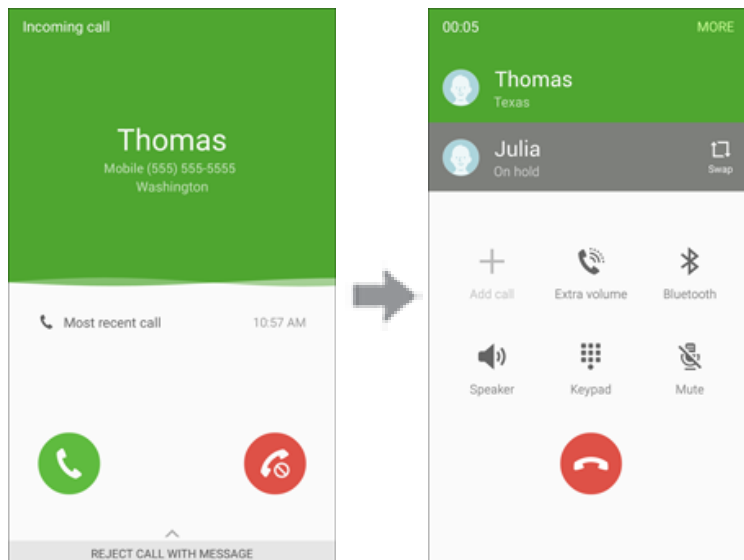


To switch back to the first caller:

- Tap **Swap** .

Conference Calling


With conference calling, also known as 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. From home, tap **Phone**  to display the phone screen.

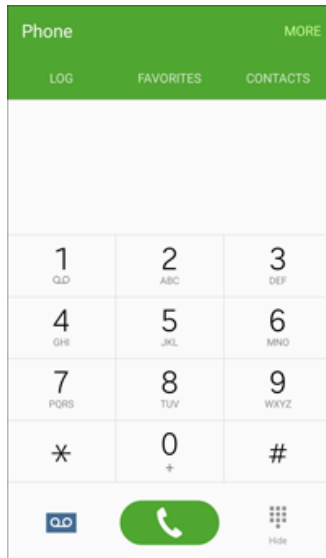


❖ The phone app opens. If necessary, tap  to display the keypad.

2. Once you have established the connection, tap **Add call**, and dial the second number (or place the call from LOG or CONTACTS).

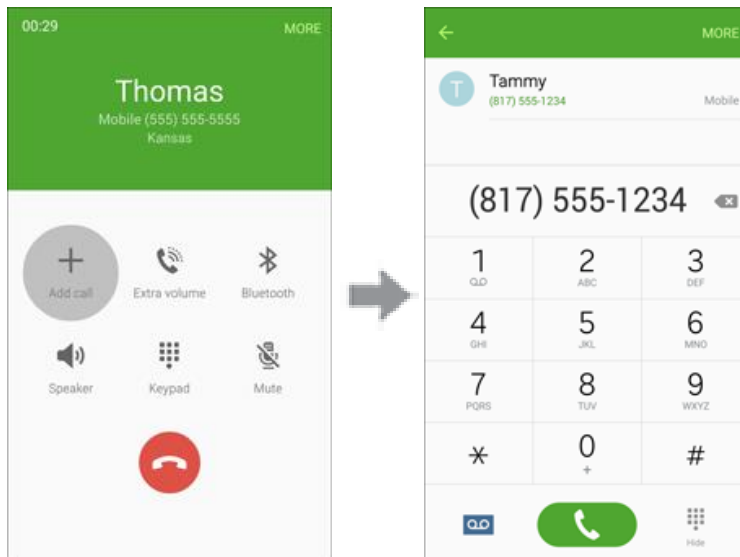

❖ This puts the first caller on hold and dials the second number.

3. When you are connected to the second party, tap **Merge** . Your conference call is now in session.

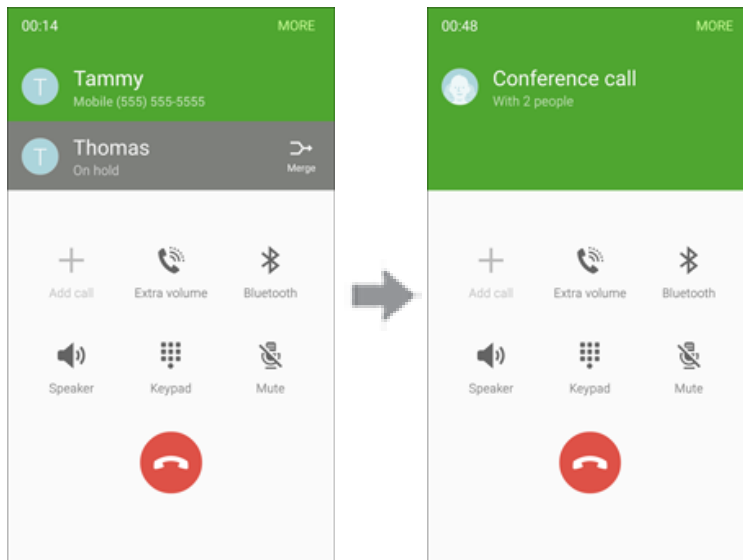

4. To end the three-way call, tap .

Note: If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.


Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

Note: You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:


1. From home, tap **Phone**  to display the phone screen.

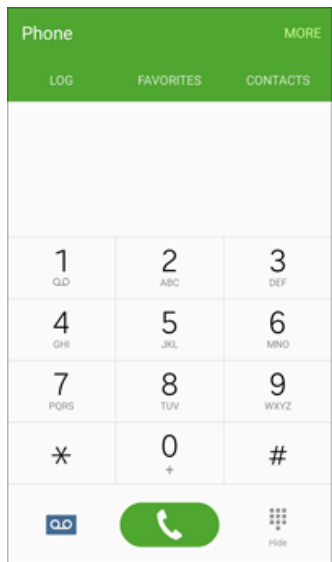

- ❖ The phone app opens. If necessary, tap  to display the keypad.
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap .
- ❖ You will hear a tone to confirm the activation of Call Forwarding. All calls to your wireless number will be forwarded to the designated phone number.

To deactivate Call Forwarding:

1. From home, tap **Phone** .

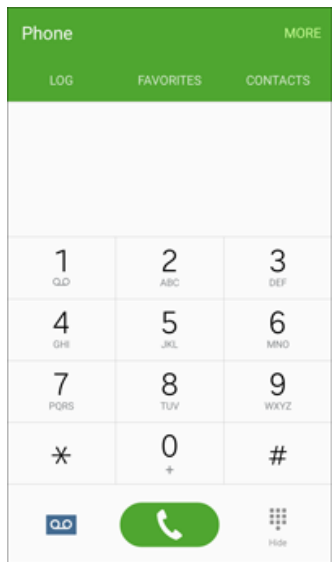

❖ The phone app opens. If necessary, tap  to display the keypad.

2. Tap    .

3. Tap .

❖ You will hear a tone to confirm the deactivation.

Call Settings


The Call settings menu lets you configure your voicemail options and a number of other settings for the phone application.

Access Call Settings

- From home, tap **Apps**  > **Settings**  > **Applications**  > **Phone**.

— or —

From home, tap **Phone**  > **MORE** > **Settings**.

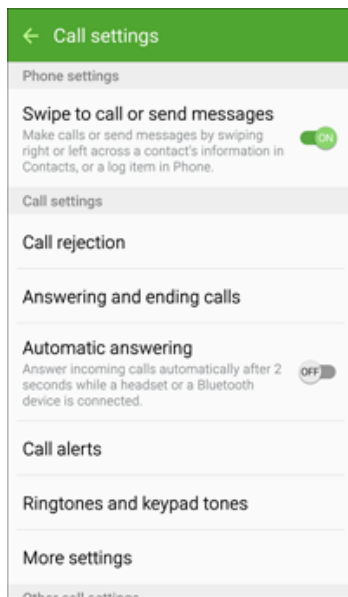

- ❖ The Call settings menu displays.

Call Settings Options

Use the Call settings menu to adjust the following settings:

Setting	Description
Swipe to call or send messages	Place a call to a displayed contact by swiping right. Send a message to a displayed contact by swiping left.
Call rejection	Create or edit messages to reject incoming calls.
Answering and ending calls	Answer calls by pressing the Home key or using voice commands. End calls by pressing the Power key or using voice commands.
Automatic answering	Automatically answer incoming calls after a set time while a headset or a Bluetooth device is connected.
Call alerts	Vibrate or play tones when calls are answered or end. Alarms and notifications can be turned off during calls.
Ringtones and keypad tones	Select or create your default ringtone, set the phone to vibrate when ringing, and play a tone when the dialing keypad is tapped.
More settings	• TTY mode: Enable service on your phone. • Hearing aids: Improve the sound quality of your phone when using hearing aids.
US dialing	Replace + with the international dialing code, except when entering +1.
International dialing	Enter the international dialing code automatically.
DTMF tones	Set the length of DTMF tones, which are used when pressing the keypad while on a call.
Voicemail settings	Configure your voicemail.

For more information about Call settings, see [Phone Settings](#).

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.


! Contacts Cautions

Information saved in Contacts may be lost or changed if the battery is left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. The company is not responsible for any damages from lost or changed contacts.

Add a Contact


You can add contacts from the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From home, tap **Apps**  > **Contacts** .

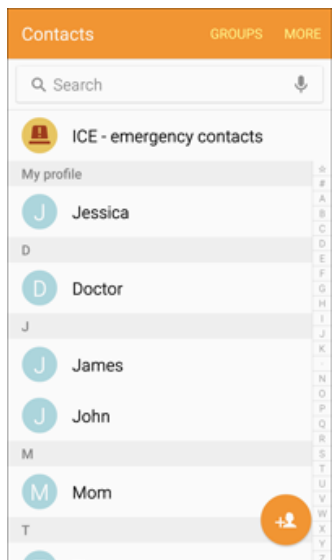

- ❖ You will see the Contacts list.

2. Tap  to add a contact.

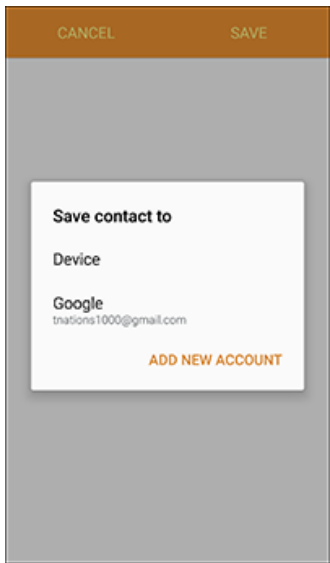

❖ The Save contact to screen appears.

3. If you have multiple account types associated with your phone, select a contact type.
- Select **Device** as the sync account if you want your contacts on your phone only; they will not be synced with your Google Account.
 - Select **Google** if you want to save contacts to your Google Account; these will be synced automatically with your Google Account online. If you have multiple Google Accounts set up, you will need to pick a specific account.
 - Select **Samsung account** to sync your contacts automatically with your Samsung account.
 - Select **Microsoft Exchange ActiveSync** to sync your contacts automatically with your Microsoft Exchange account.

Note: If you do not see the Save contact to screen and you have multiple accounts set up, you can select an account by tapping the account type in the upper left corner.

4. Use the keyboard to enter as much information as you want.

- **Photo:** Tap  to assign a picture to the contact.
- **Name:** Enter the contact's name.
- **Phone number:** Enter a phone number for the contact.
- **Email:** Enter an email address.
- **Groups:** If desired, assign the contact to one or more contact groups.
- **Ringtone:** Select a specific ringtone for this contact.
- **ADD ANOTHER FIELD:** Add additional information such as Address, Notes, Nickname, Relationship, etc.

Note: To select a type (label) for a phone number, email address, or address (such as Mobile, Home, Work, etc.), tap the type to the right of the field and select the appropriate type.

Note: To add more phone numbers, email addresses, etc., tap  on the right side of the entry field.

- When you have finished adding information, tap **SAVE**.

Device

Jennifer

Phone (555) 555-9876 Mobile

Email jennifer1000@email.com Home

Address 1234 Anywhere Drive Home

Richardson TX

- ❖ The contact is added.

Save a Phone Number

You can save a phone number to Contacts directly from the phone keypad.

- From home, tap **Phone**  to display the phone screen.

Phone MORE

LOG FAVORITES CONTACTS

1 QW 2 ABC 3 DEF

4 GHI 5 JKL 6 MNO


7 PQRS 8 TUV 9 WXYZ

* 0 + #

- ❖ The phone app opens. If necessary, tap  to display the keypad.

2. Enter a phone number and tap **Add to Contacts**.

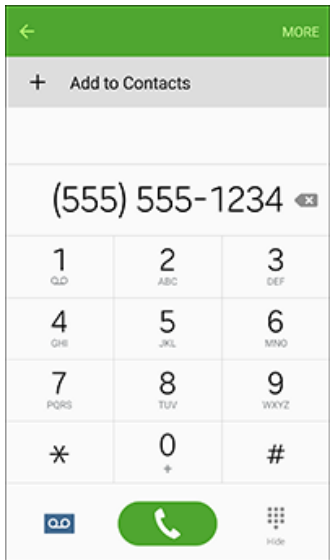


3. To add a new contact, tap **Create contact**. To add the number to an existing contact, tap **Update existing**.
 - For an existing contact, tap the contact name and select a number type for the new number.
 - For a new contact, enter the name and any additional information.
4. Tap **SAVE**.
 - ❖ The contact is added.

Check Contacts


View a contact's details by displaying a contact entry.

1. From home, tap **Apps**  > **Contacts** .

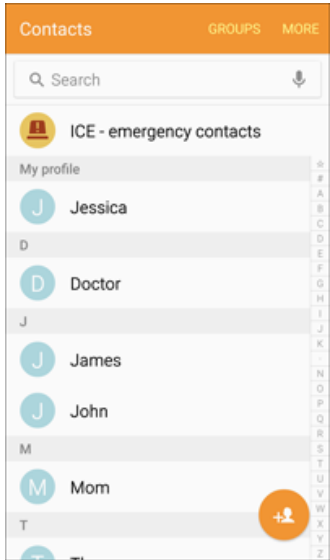

❖ You will see the Contacts list.


2. Tap a contact to view its details.

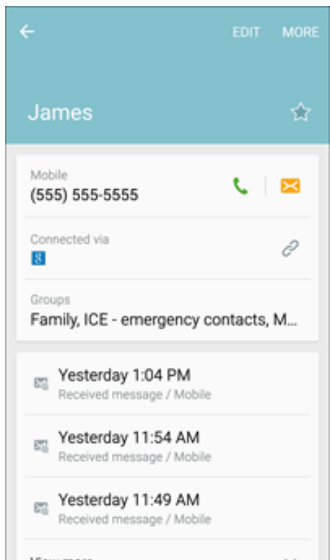

❖ The contact's detailed listing appears.

Contacts Screen Layout

The following illustration show's your Contacts app layout and describes the various features.

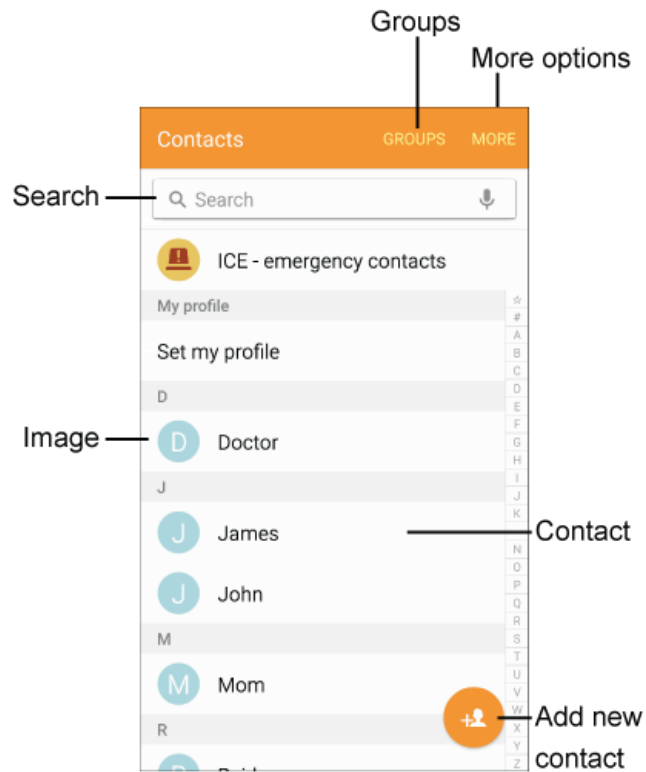


Item	Description
Add new contact	Add a new contact.
Contact	Tap to show the contact's details.
GROUPS	Show contact groups.
Image	Tap to show the contact's details.
MORE	Access additional options.
Search	Search contacts.

Edit a Contact


Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

1. From home, tap **Apps**  > **Contacts** .

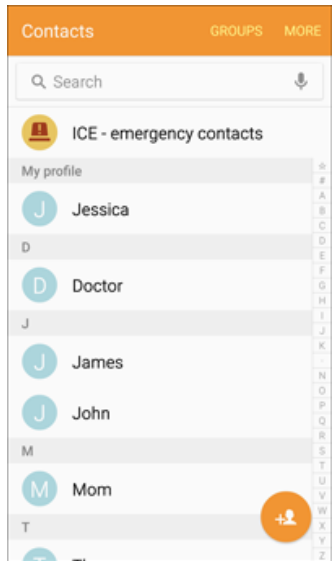

❖ You will see the Contacts list.

2. Tap a contact to view its details.

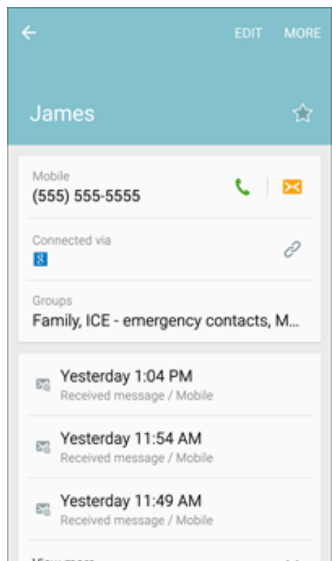

❖ The contact's detailed listing appears.

3. Tap **EDIT**.
4. Tap any field you want to change or add. See [Add a Contact](#).

5. Add or edit the information, and then tap **SAVE**.

Device

Jennifer

Phone (555) 555-9876 Mobile

Email jennifer1000@email.com Home

Address 1234 Anywhere Drive Home


Richardson TX

- ❖ Your changes are saved to the contact entry.

Delete a Contact


You can delete a contact from the contacts details page.

1. From home, tap **Apps** > **Contacts**.

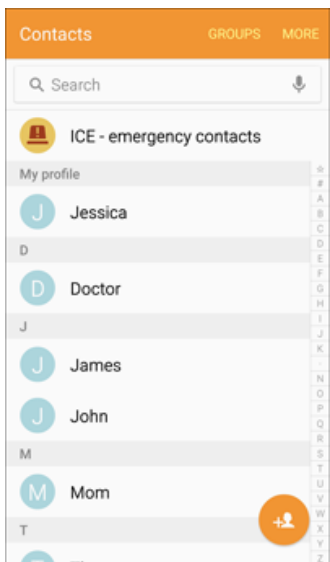


- ❖ You will see the Contacts list.

2. Tap a contact to view its details.

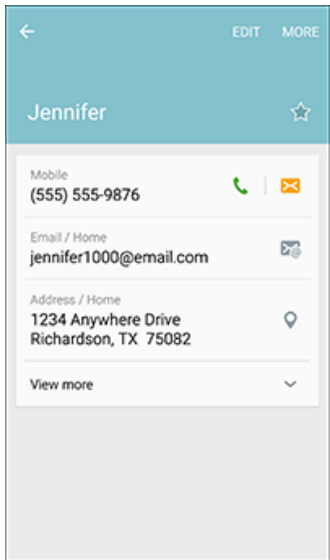

❖ The contact's detailed listing appears.

3. Tap **MORE > Delete > DELETE**.

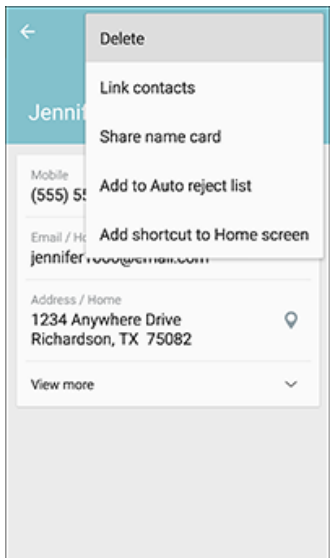


❖ The contact is deleted.

Tip: You can also touch and hold the contact from the Contacts list and tap **DELETE > DELETE**.

Share a Contact


You can quickly share contacts using Bluetooth, email, Gmail, or text messaging.

1. From home, tap **Apps**  > **Contacts** .

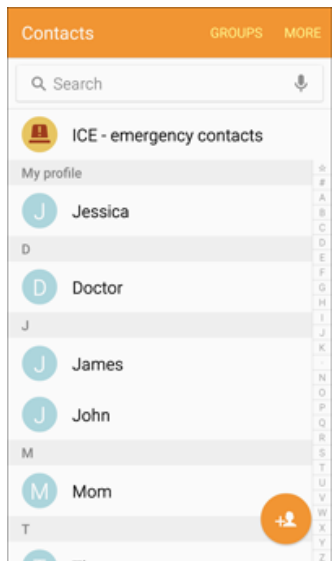

❖ You will see the Contacts list.

2. Tap a contact to display it, and then tap **MORE** > **Share name card**.

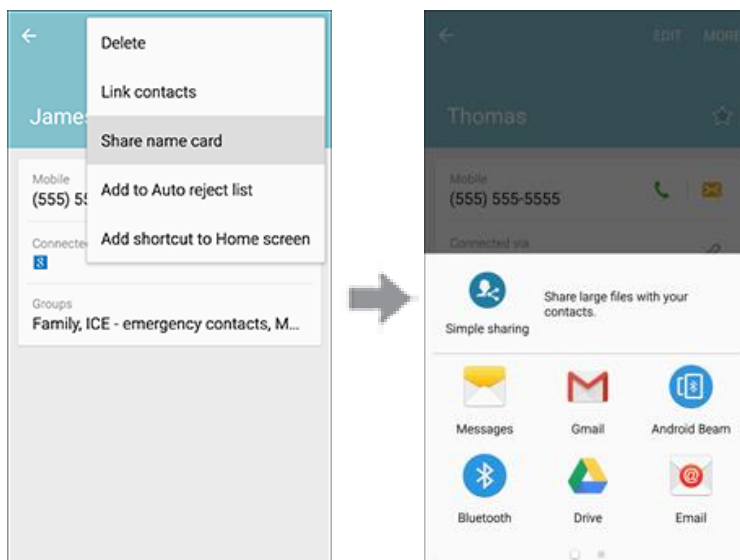


❖ You will see list of sharing methods.

3. Select a sharing method:
 - **Android Beam:** Send the information using NFC and Android Beam.
 - **Bluetooth** to send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
 - **Drive** to save the information to your Google Drive account.
 - **Email** to send the information as an email attachment. See [Compose and Send Email](#).
 - **Gmail** to send the information as a Gmail attachment. See [Create and Send a Gmail Message](#).
 - **Messages** to send the information in a text message. See [Send a Multimedia Message \(MMS\)](#).
 - **OneDrive:** Save the information to your OneDrive account.
 - **Add to OneNote:** Save the information to your OneNote account.
 - **Quick connect:** Send the information to a nearby device.
 - **Simple sharing:** Share files up to 1 GB using Contacts.
 - **Wi-Fi Direct** to send the information to another device via Wi-Fi Direct. See [Wi-Fi Direct](#).
4. Complete the required steps as prompted for the selected method.
 - ❖ The selected contact will be shared.

Profile Sharing


Share your profile information with your contacts. You can select which contacts you want to share it with, as well as select additional information you want to share.

1. From home, tap **Apps**  > **Contacts** .

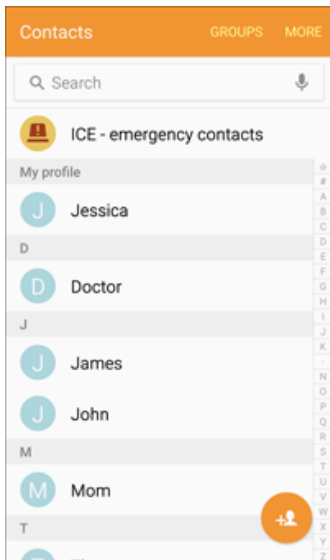


❖ You will see the Contacts list.

2. Tap your profile under My profile.

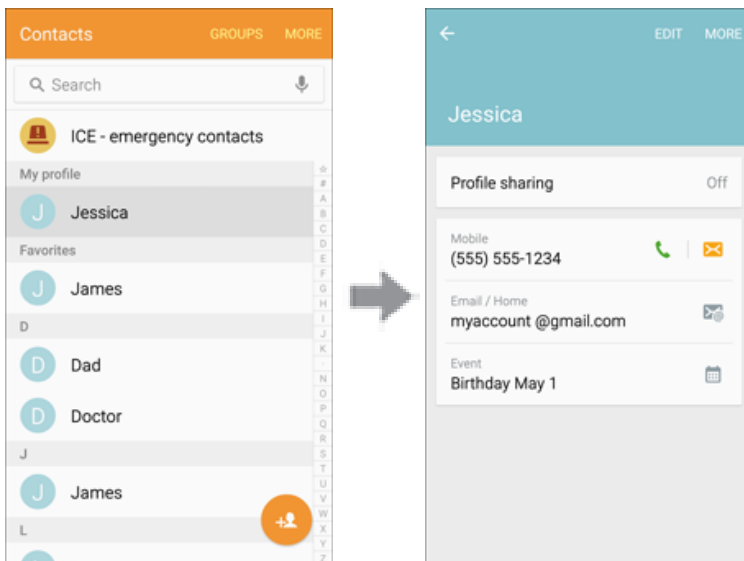

❖ Your profile displays.

3. Tap **Profile sharing**, and then tap the **ON/OFF** switch to enable the feature.

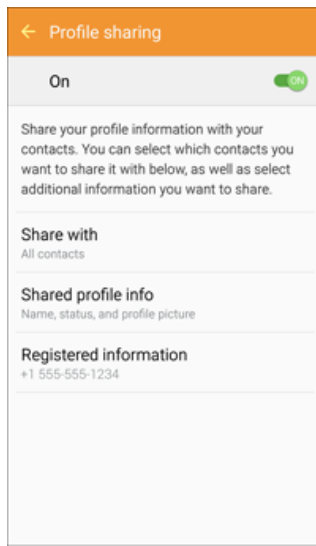

4. Set Profiling sharing options:
 - **Share with:** Share your profile with the public, all contacts, your favorite contacts, or selected contacts.
 - **Shared profile info:** In addition to your name, status, and profile picture, you can share your email, organization, address, and date of birth.
 - **Registered information:** View and set the registered information for your phone number.


Note: The first time you turn on Profile sharing, you may be prompted to agree to the Enhanced features Terms and Conditions and Privacy Policy. Review the terms and tap **AGREE** to continue.

Import Contacts

Import (load) contacts that have been backed up to device storage.


Import Contacts from Device Storage

1. From home, tap **Apps**  > **Contacts** .

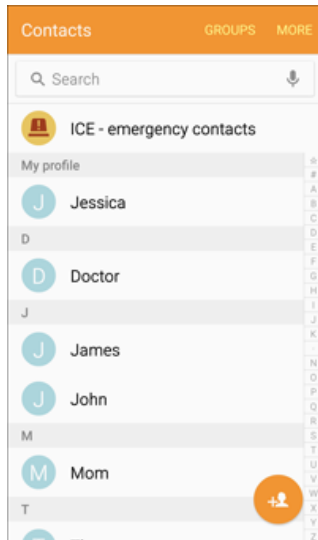

❖ You will see the Contacts list.

2. Tap **MORE** > **Settings** > **Import/Export contacts**.

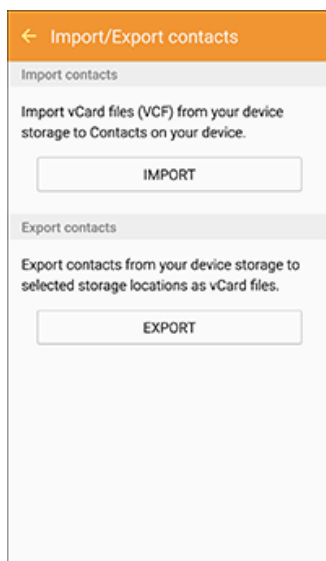


❖ You will see the Import/Export contacts menu.

3. Tap **IMPORT**.
 4. Select a destination for the imported contacts.
 5. Follow the onscreen instructions to complete the import.
- ❖ The contacts are imported and stored in the selected account.

Back Up Contacts


If you are saving contacts to an account that does not automatically back them up via the Cloud, you can manually back them up to your phone's memory for re-import if needed.

1. From home, tap **Apps**  > **Contacts** .

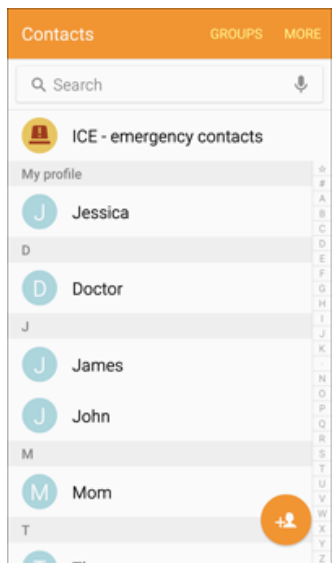

- ❖ You will see the Contacts list.

2. Tap **MORE** > **Settings** > **Import/Export**.

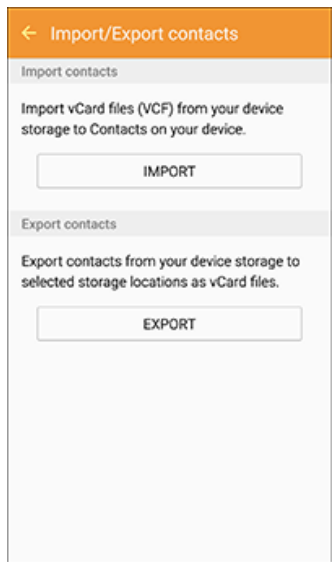

❖ You will see the Import/Export contacts menu.

3. Tap **EXPORT**.
 4. Select an export location.
 5. Follow the onscreen instructions to complete the export.
- ❖ The contacts are exported.

Messaging and Internet

With wireless service and your phone's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Hangouts.

Text and Multimedia Messaging

With Text Messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact cards (vCard), or appointments (vCalendar).


See your service plan for applicable charges for messaging.

For information about setting options for the Messages app, see [Messages Settings](#).

Send a Text Message


Quickly compose and send text messages on your phone.

1. From home, tap **Apps**  > **Messages** .

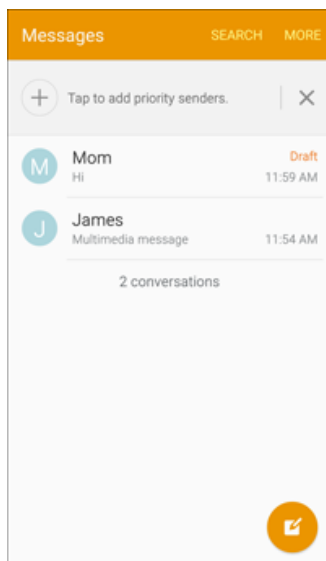

2. On the Messaging screen, tap **Compose** . The Compose screen opens.

3. Fill in one or more recipients. You can:
 - Enter phone numbers directly in the **Enter recipients** field. If you are sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your Contacts list are displayed. Tap a match to enter that number or address directly.
 - Tap **Recipients** , and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **DONE**.
4. Tap the **Enter message** field and then start composing your message.

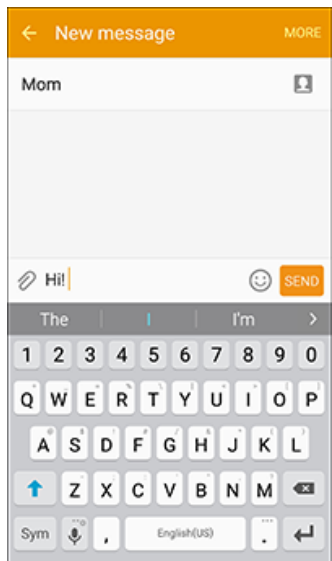


Note: You can add a subject line by tapping **MORE > Message options > Add subject**.

5. When done, tap  to send the text message.

Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files, contact cards (vCard), or appointments (vCalendar).


1. From home, tap **Apps**  > **Messages** .

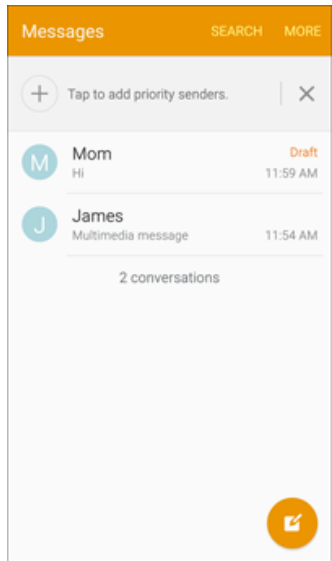

2. On the Messaging screen, tap **Compose** . The Compose screen opens.
3. Fill in one or more recipients. You can:
 - Enter phone numbers directly in the **Enter recipient** field. If you are sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your Contacts list are displayed. Tap a match to enter that number or address directly.
 - Tap the  icon, and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **DONE**.
4. Tap the **Enter message** field, and then start composing your message.

Note: You can add a subject line by tapping **MORE** > **Message options** > **Add subject**.

5. Tap  and select from the following file attachments:

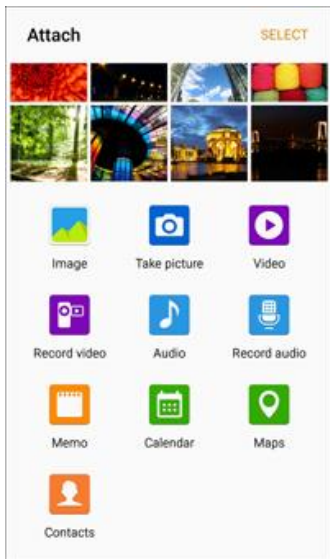

- **Image:** Attach a stored picture. See [Gallery](#).
 - **Take picture:** Take a new picture and attach it. See [Camera and Video](#).
 - **Video:** Attach a stored video. See [Gallery](#).
 - **Record video:** Record a new video and attach it. See [Camera and Video](#).
 - **Audio:** Attach a stored music file or voice recording.
 - **Record audio:** Make a voice recording and attach it. See [Voice Recorder](#).
 - **Memo:** Attach a memo. See [Memo](#).
 - **Calendar:** Select the calendar event you want to attach. See [Calendar](#).
 - **Maps:** Add your current location (requires GPS to be turned on) or a location you pick on a map to your message. See [Google Maps](#).
 - **Contacts:** Select a contact from your phone, and then select which contact information you want to attach. See [Contacts](#).
6. To make changes to or remove your attachment, touch and hold the item.
7. Tap **Send**  to send the MMS message.

Create a Slideshow

In a multimedia message, you can add slides, each containing a picture, video, or audio.

1. In the multimedia message you are composing, **MORE > Message options > Add slide** to add space for a new slide.
2. Tap the space for the slide.
3. To compose your slideshow, do any of the following:
 - **Add a picture:** Tap  > **Image** and select a picture.
 - **Add a video:** Tap  > **Video** and select a video. (You cannot add both a picture and a video on the same slide.)
 - **Add music or a voice recording:** Tap  > **Audio** and select a file.
 - **Add a new slide:** Tap **MORE > Message options > Add slide**.
 - **Preview your slideshow:** Tap **MORE > Message options > Preview**.
 - For more options, tap **MORE > Message options** and select an option.
4. When you have finished composing the multimedia message, tap **Send** .

Tip: To compose a slide show, you can also simply attach multiple items separately to the MMS message. Tap  and select a file type, location, and file and then repeat it for additional slides. Your phone will automatically compile a slide show.


Send an Enhanced Message

Enhanced messaging allows you to send a multimedia message with pictures, voice recordings, audio or video files, contact cards (vCard), appointments (vCalendar), as well as large files (up to 1 GB) to other Galaxy S 6 series phones.


Note: Enhanced messages are only supported on Samsung Galaxy S 6 and Samsung Galaxy S 6 edge phones.

Enable Enhanced Messaging

1. From home, tap **Apps**  > **Messages** .

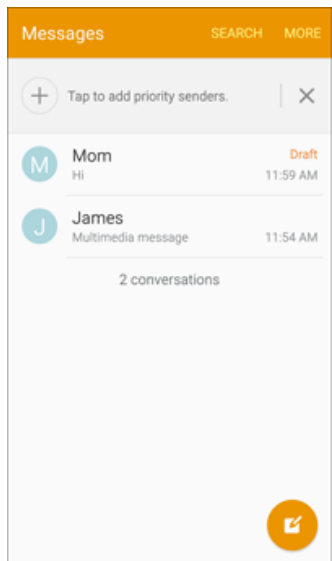

2. Tap **MORE** > **Settings** > **Enhanced messaging**.

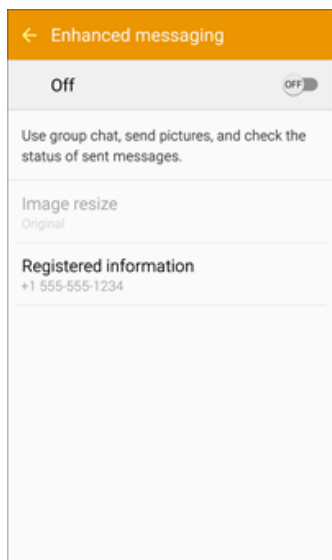


3. Tap the **ON/OFF** switch to enable Enhance messaging.
4. Set options:
 - **Image resize:** Set the standard size of images sent with Enhanced messages.
 - **Registered information:** View and set the registered information for your phone number.


Note: The first time you turn on Enhanced messaging, you may be prompted to agree to the Enhanced features Terms and Conditions and Privacy Policy. Review the terms and tap **AGREE** to continue.

Send an Enhanced Message

1. From home, tap **Apps**  > **Messages** .

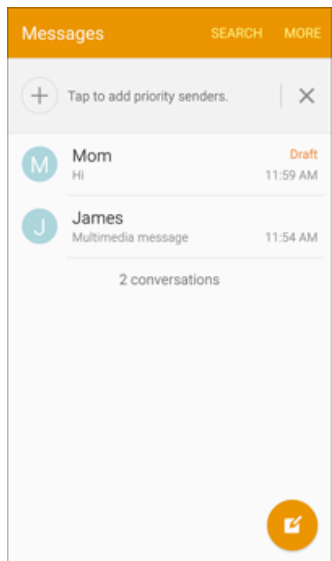

2. On the Messaging screen, tap **Compose** .

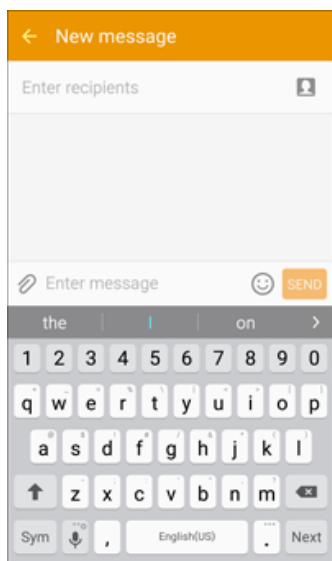


❖ The Compose screen opens.


3. Fill in one or more recipients. You can:
 - Enter phone numbers directly in the **Enter recipient** field. If you are sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your Contacts list are displayed. Tap a match to enter that number or address directly.

- Tap the  icon, and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap **DONE**.

4. Tap the **Enter message** field, and then start composing your message.

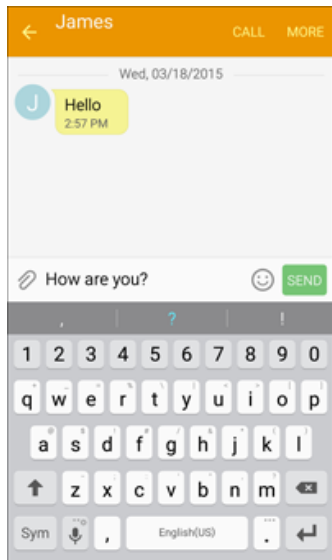

5. Tap  and select from the following file attachments:

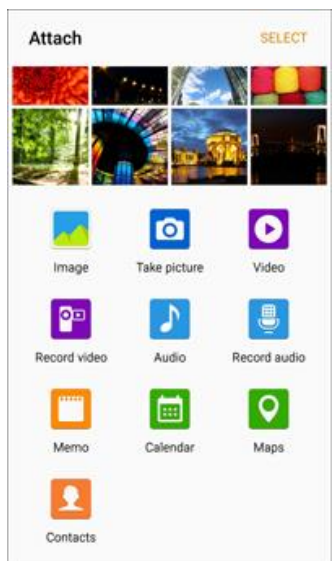

- **Audio:** Select **Record audio** to make a voice recording and attach it, or **Audio** to attach a stored music file or voice recording.
- **Calendar:** Select the calendar event you want to attach. See [Calendar](#).
- **Contacts:** Select a contact from your phone, and then select which contact information you want to attach. See [Contacts](#).

- **Picture:** Select **Take picture** to take a picture and attach it, or **Image** to attach a stored picture. You'll also see thumbnails of recent pictures above the main attachment options; tap one to add it to your message.
- **Maps:** Add your current location (requires GPS to be turned on) or a location you pick on a map to your message. See [Google Maps](#).
- **Memo:** Attach a memo. See [Memo](#).
- **My Files:** Attach a file up to 1 GB.
- **Video:** Select **Record video** to capture a video and attach it, or **Video** to attach a stored video.

6. To make changes to or remove your attachment, touch and hold the item.


7. When done, tap **SEND** to send the enhanced message.

Save and Resume a Draft Message

While composing a text or multimedia message, tap **Back**  to automatically save your message as a draft. Your message will display “Draft” on the main Messaging screen.

To resume composing the message:

1. From home, tap **Apps**  > **Messages** .

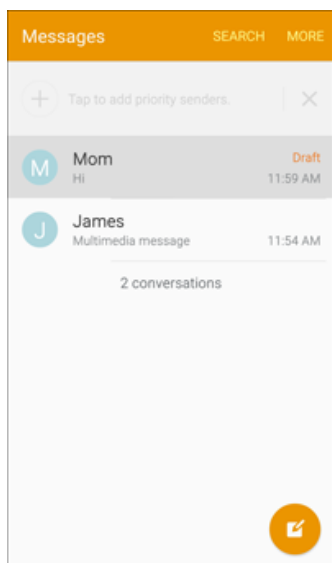

2. Tap the message to resume editing it.
3. When you finish editing the message, tap **SEND** .

New Messages Notification

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message briefly in the Status Bar when you receive a new text or multimedia message.

A new message icon  also appears in the notifications area of the Status Bar to notify you of a new text or multimedia message. The Messages application icon also displays the number of new messages .

- To open the message, drag the Status Bar down to open the Notification Panel. Tap the new message to open and read it.

– or –

From home, tap **Apps**  > **Messages** , and then tap the conversation.

For information on reading and replying to messages see [Manage Message Conversations](#).

Manage Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. Text or MMS conversations let you see exchanged messages (similar to a chat program) with a contact on the screen.

Read a Text Message

- Do one of the following:
 - On the Messaging screen, tap the text message or conversation to open and read it.
 - If you have a new message notification, drag the Status Bar down to open the Notification Panel. Tap the new message to open and read it.

To return to the Messaging screen from a conversation, tap **Back** key .


Note: To view the details of a particular message, in the conversation, touch and hold the message to open the options menu, and then tap **View message details**.

Note: If a message contains a link to a Web page, tap the message and then tap the link to open it in the Web browser.

Note: If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.

View a Multimedia Message (MMS)

1. From home, tap **Apps**  > **Messages** .

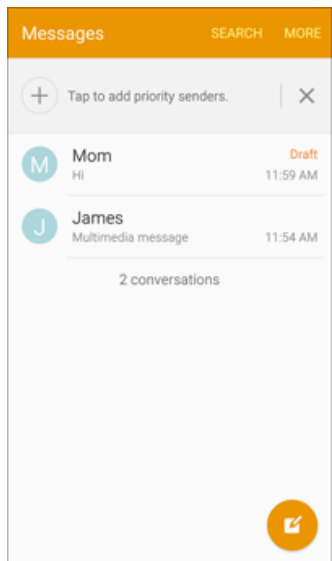


2. On the Messaging screen, tap a multimedia message or conversation to open it.
3. Tap the attachment to open it.
 - If the attachment is a vCard contact, it is imported to your phone's Contacts list. For more information, see [Contacts](#).
 - If the attachment is a vCalendar file, you can choose the calendar where you want to save the event. For information on using Calendar, see [Calendar](#).
 - For other media (like photos or videos), you can choose where to save the attachment and which app to use to open it.
4. To save the attachment to device memory, touch and hold the attachment, and then tap **Save attachment**.

Note: When Auto retrieve in MMS settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button in the message.

Note: If you are concerned about the size of your data downloads, check the multimedia message size before you download it.

Reply to a Message

1. From home, tap **Apps**  > **Messages** .

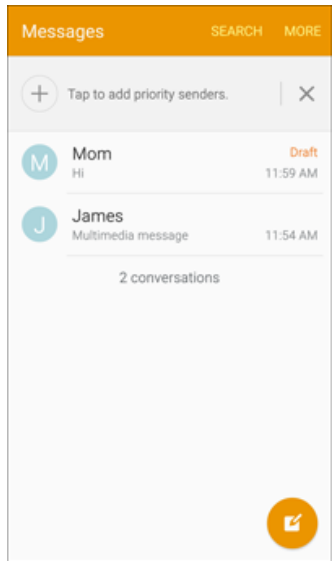

2. On the Messaging screen, tap a conversation to open it.
3. Tap the text box at the bottom of the screen, enter your reply message, and then tap **Send** .

Note: To reply to a text message with a multimedia message, open the text message and tap . The text message is automatically converted into a multimedia message.

Delete Conversations

1. From home, tap **Apps**  > **Messages** .
2. On the Messaging screen, touch and hold a conversation to delete.
3. Select any additional conversations you want to delete, and then tap **DELETE > DELETE**.

Delete Message

1. While viewing a conversation, touch and hold a message
2. Tap **Delete > DELETE**.

View Contact Information from a Message

When you receive a message from someone in your stored contacts, you can tap the contact's picture or icon in the conversation to open a menu of options. Depending on the stored contact information, you can view the contact details, place a phone call or send an email message to the contact, and more.

Create and Send Gmail

Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your phone. See [Google Account](#) for details.


! Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your phone prevents your phone from receiving Gmail.

Create and Send a Gmail Message


Use your phone to create and send Gmail messages.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

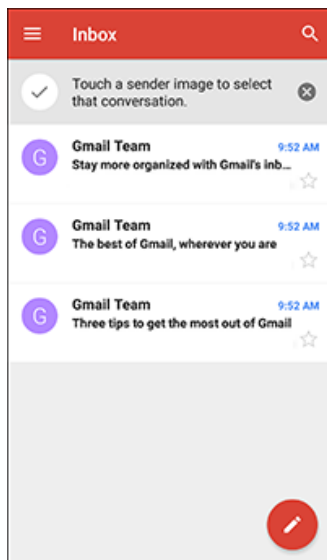


- ❖ The Gmail inbox opens.

2. In the inbox, tap **Compose** .

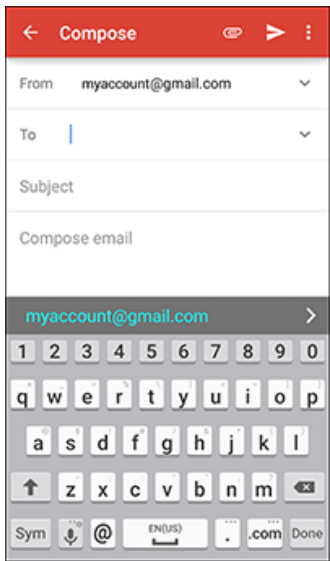

❖ The Gmail composition window opens.

3. Enter the message recipient(s), subject, and message, and then tap **Send** .

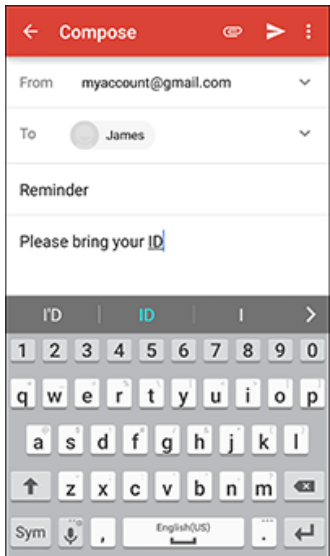

❖ The Gmail message is sent.

Gmail Composition Options

- **Adding Cc/Bcc:** In the To field, tap  to display Cc and Bcc fields.
- **Attaching Pictures or Videos:** In the mail composition window, tap **Attach file** . Locate and tap the picture or video you want to attach.
- **Save draft (Send Later):** While composing your message, tap **More options**  > **Save draft**. The message is saved as a draft for later.
- **Discard:** In the mail composition window, tap **More options**  > **Discard** > **DISCARD**.

Note: To view your draft email messages, in the inbox, tap **Menu**  > **Drafts**. To view your sent messages, in the inbox, tap **Menu**  > **Sent**.


Check Received Gmail Messages

Your phone allows you to access, read, and reply to all your Gmail messages.

Open New Gmail Messages

When new Gmail arrives, you will see  in the Status Bar.

1. Drag the Status Bar down to display the Notification Panel.

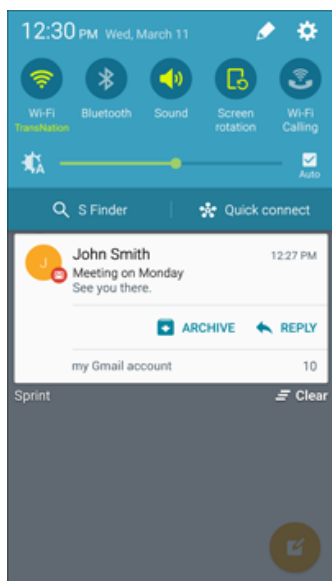


2. Tap the new message from the Notification Panel.
 - ❖ The new Gmail message opens.
 - If you have two or more new Gmail messages, tapping the notification opens the Gmail inbox.

Open Gmail Messages


You can also read and reply to all your Gmail messages from the Gmail inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

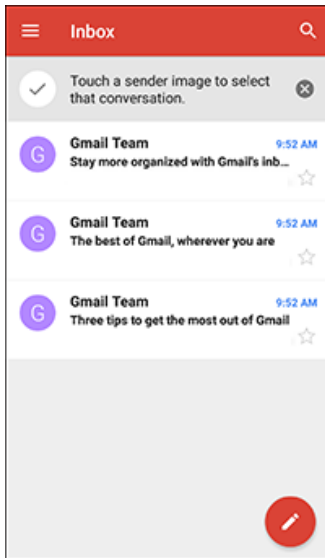

- ❖ The Gmail inbox opens.

2. Tap the message thread you want to view.

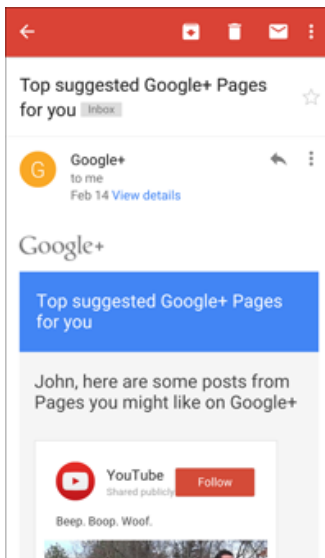

- ❖ The message thread opens, with the newest message displayed.

Options when Reviewing Gmail Messages

- **Replying to Gmail Messages:** With the Gmail message open, tap **Reply** , compose your reply message, and tap **Send** .
- To reply to all, tap **More options**  > **Reply all**.
- **Forwarding Gmail Messages:** With the Gmail message open, tap **More options**  > **Forward**, enter a recipient and an additional message, and tap **Send** .


Manage Gmail Messages

Your phone give you control over how you manage your Gmail messages, with labels, thread management, search capabilities, adding multiple Google Accounts, and more.


Use Gmail Labels

Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label “Inbox” is automatically added to the thread. By then adding the label “travel,” all threads with “travel” are shown in a list.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

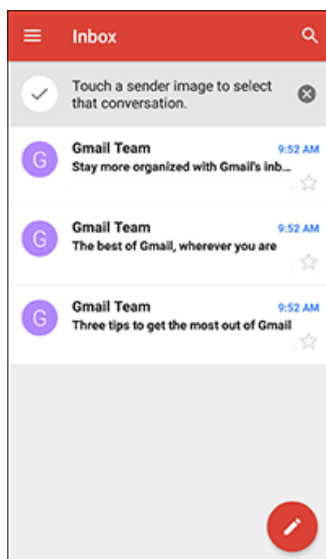

- ❖ The inbox opens.
2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Move to**.

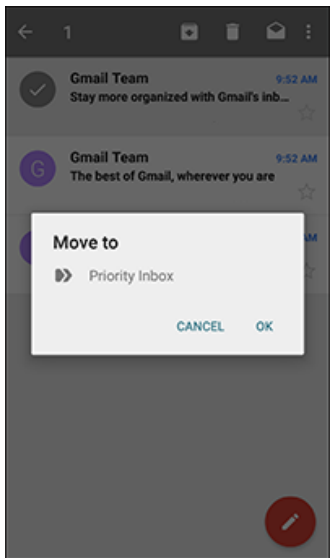


3. Tap a label for the thread.

❖ The thread is added to the selected label.

Archive Gmail Threads


Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

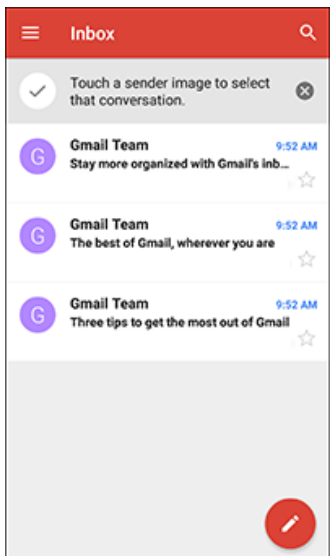

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Archive** .

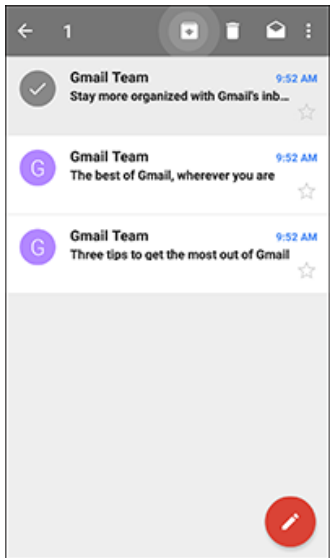


❖ The thread is now archived.

Mute Gmail Threads


If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When mail arrives that includes user's address as a recipient or in Cc, mail will again appear in the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

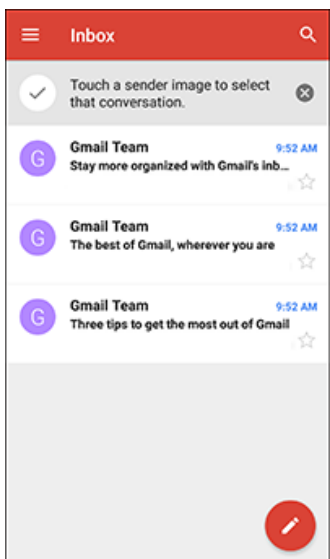

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Mute**.

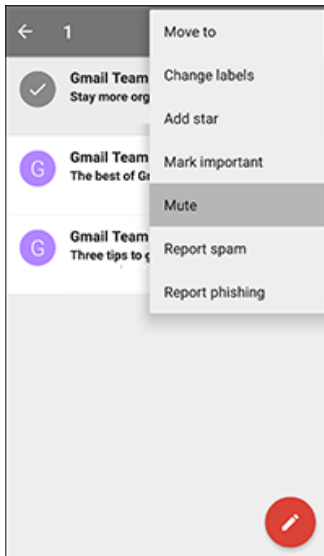


❖ The thread is now hidden.

Delete Gmail Threads


If you no longer wish to keep a Gmail conversation thread (or touch the thread's icon/picture), you can simply delete it from the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

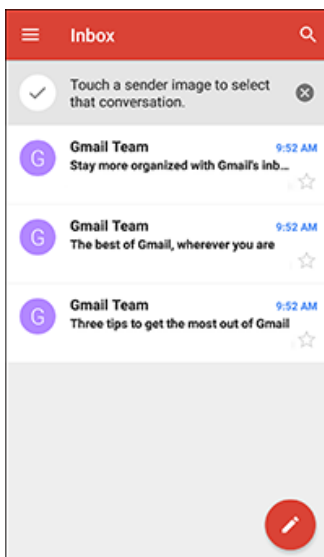

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Delete** .

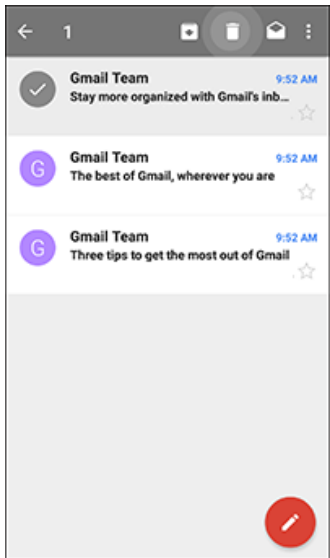


❖ The thread is deleted.

Search Gmail Messages


If you need to find a specific message or message thread, you can search Gmail from the inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

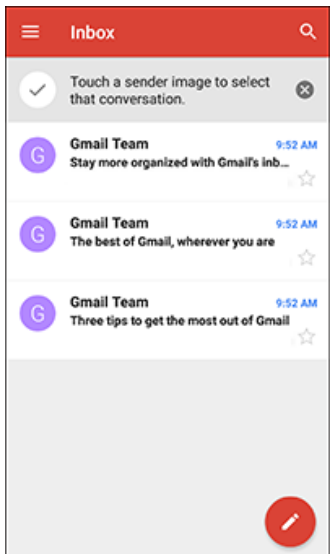


❖ The inbox opens.

2. Tap **Search** .

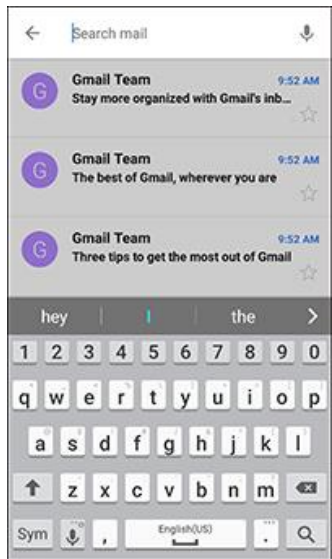

3. Enter your search text and tap **Search** .

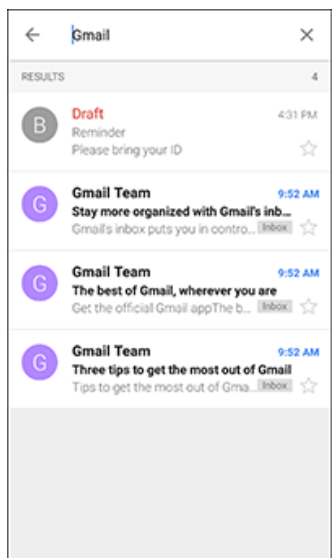


- ❖ The search results appear. Tap a message or thread from the list to display it.

Report Spam or Phishing Gmail


You can report spam or phishing Gmail messages from your phone's Gmail inbox.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

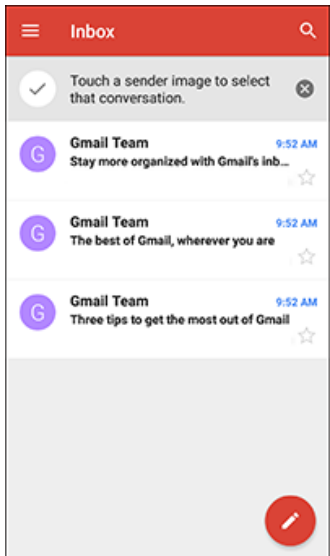

❖ The inbox opens.

2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Report spam** or **Report phishing**.

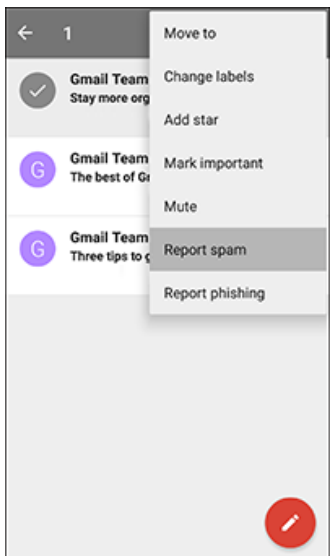


❖ The selected message is reported as spam or phishing.


Add Another Google (Gmail) Account

If you have multiple Gmail accounts you wish to view on your phone, you can add them from the **Settings** > **Accounts** menu.


1. From home, tap **Apps**  > **Settings**  > **Accounts**  > **Add account**.

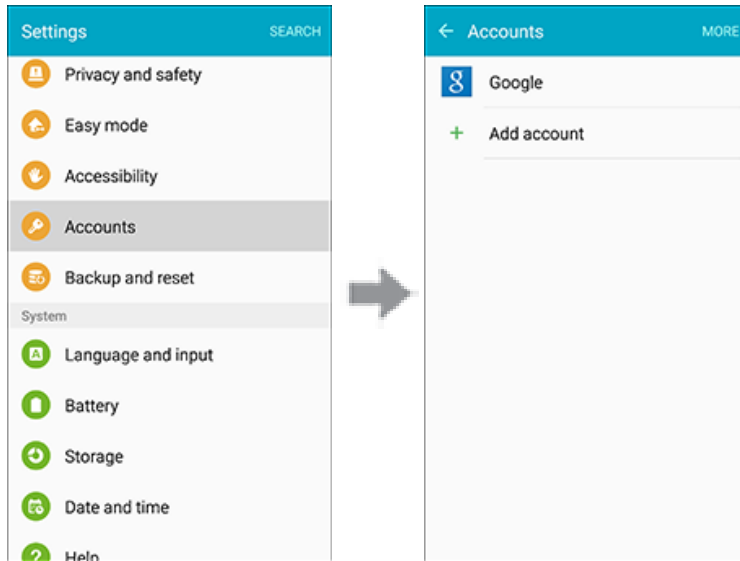

2. Tap **Google**.

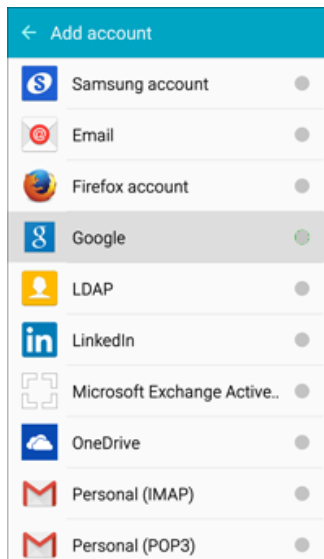

3. Enter your Gmail username and password, and then tap **NEXT**.

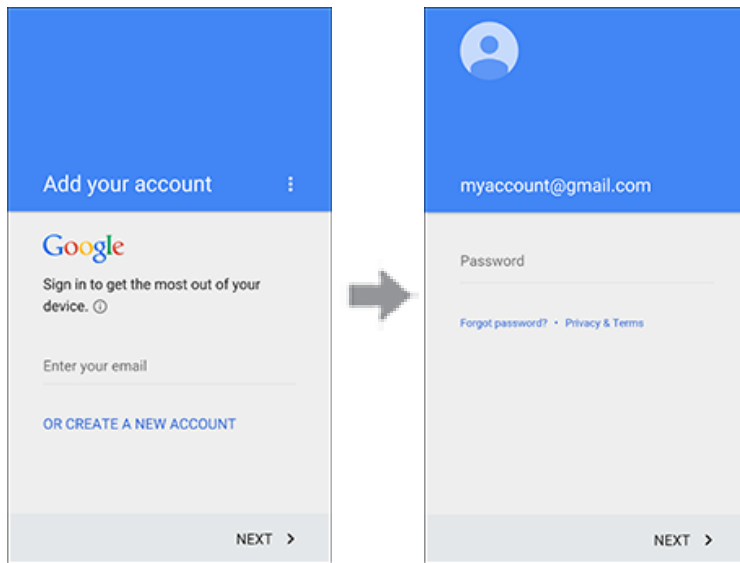


4. Follow the prompts to review and agree to the Terms of Service and Privacy Policy, and then tap **ACCEPT**.
 5. After your phone connects with the Google servers, select the items you would like to sync with your phone and then tap **NEXT**.
- ❖ You are signed in to your Google Account, and you can access both of your Gmail accounts from the Gmail app.

Switching Between Gmail Accounts


If you have more than one Gmail account set up, you can switch between them in the Gmail app.

1. From home, tap **Apps**  > **Google**  > **Gmail** .

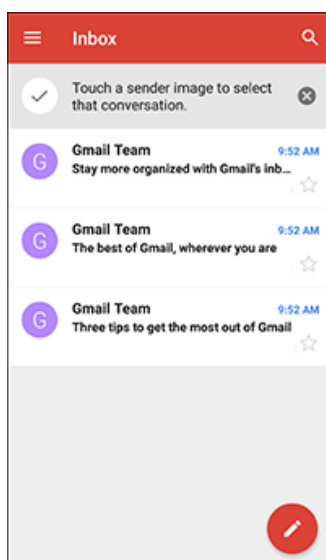

- ❖ The inbox opens.

2. Tap **Menu** .

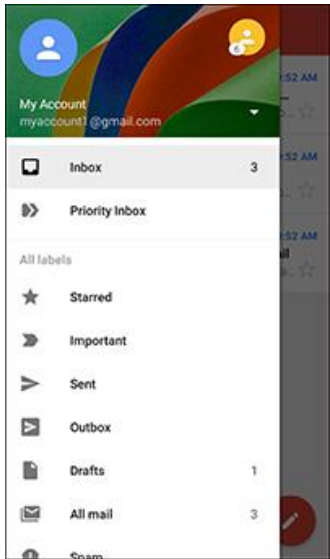

3. Tap the icon for the account you want to view from the list at the top of the menu.
- ❖ The selected account inbox is displayed.

Email


Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Set Up an Email Account

Your phone supports several types of email accounts and allows you to have multiple email accounts set up at one time.

Before setting up an email account, make sure you have the username (user ID), password, server name, etc., so you can get set up successfully.

1. From home, tap **Apps**  > **Email** .

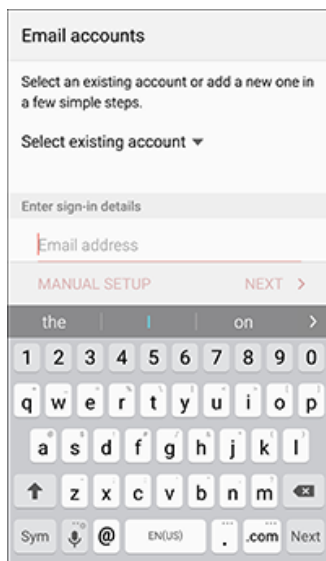

- ❖ A window for adding an account appears if no email account has been previously set up.
2. Follow the onscreen instructions to set up your email account.
 - ❖ The email account is set up and you will begin receiving email.


Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your phone.

Add an Email Account from the Email App


You can add email accounts directly from the email app, even if you have another email account set up.

1. From home, tap **Apps**  > **Email** .

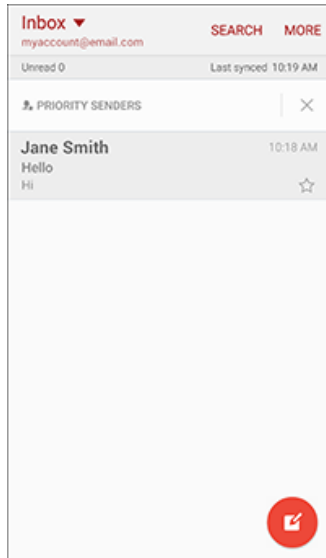

❖ The email inbox opens.

2. Tap **MORE** > **Settings** > **Add account**.

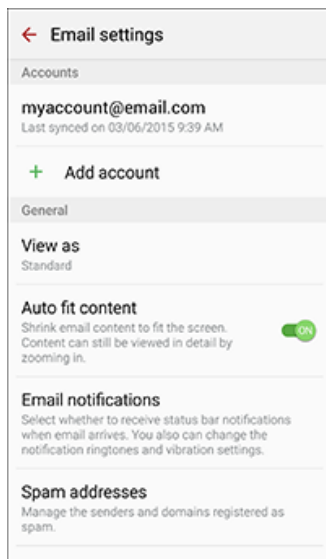


3. Follow the onscreen instructions to complete the account setup.

❖ The email account is added and you will begin receiving email for the account.


Add an Email Account from the Settings Menu

You can also set up email accounts from the **Settings > Accounts** menu.


1. From home, tap **Apps**  > **Settings**  > **Accounts**.

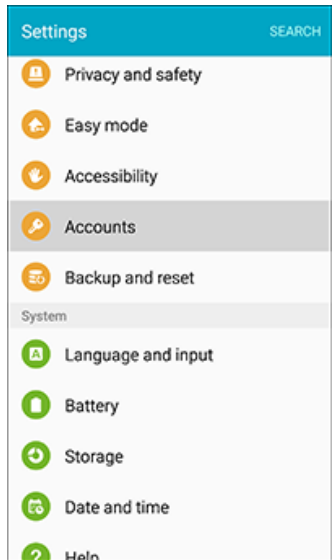

2. Tap **Add account**  > **Email**.

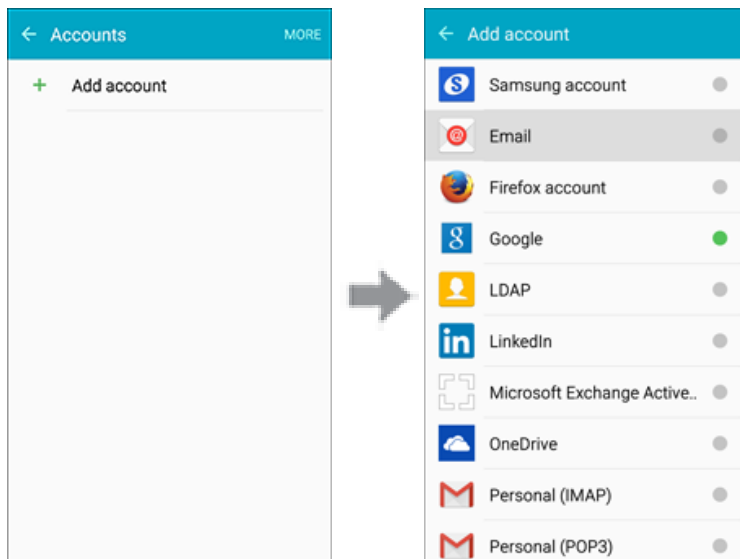


3. Enter the **Email address** and **Password** for the email account and then tap **NEXT**.

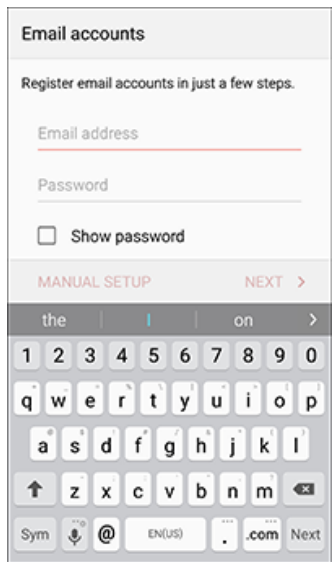


- ❖ Tapping **NEXT** prompts your phone to attempt a “regular” email setup and test the incoming and outgoing servers.

- If you have custom settings you need to configure, tap **MANUAL SETUP** and enter your settings. These may include mail type, user name, password, server, security type, etc.

4. Select your sync settings and then tap **NEXT**.

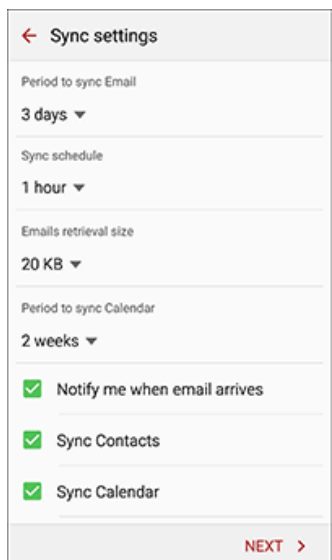

5. Enter an account name and a display name and tap **DONE** to complete setup.

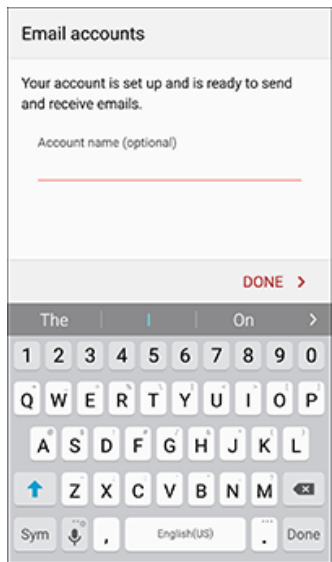

Email accounts

Your account is set up and is ready to send and receive emails.

Account name (optional)

DONE >

- ❖ The email account is set up and you will begin receiving email for the account.


Important: If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

Add an Exchange ActiveSync Account


If you synchronize your phone with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

Important: Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.


1. From Home, tap **Apps**  > **Settings**  > **Accounts** > **Add account** > **Microsoft Exchange ActiveSync**.

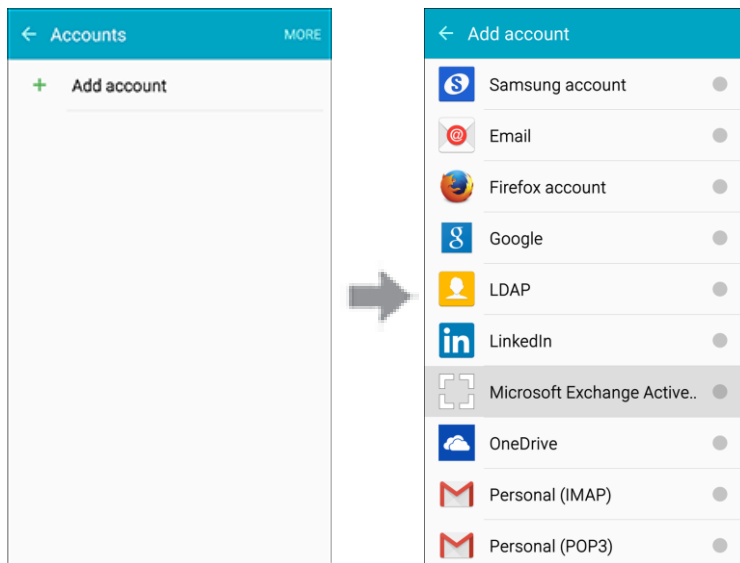

2. Enter the **Email address** and **Password** for the email account and then tap **MANUAL SETUP**.

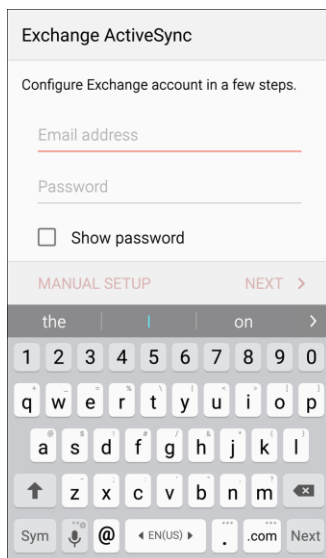

3. Enter the required information.
 - **Email address:** Enter your email address.
 - **Domain\username:** Enter your network domain and username, separated by “\”.
 - **Password:** Enter your network access password (case-sensitive).
 - **Show password:** Display the password as you enter it.
 - **Exchange server:** Enter your system’s Exchange server remote email address. Obtain this information from your company network administrator.
 - **Use secure connection (SSL):** Tap to place a checkmark in the box, if your system requires SSL encryption.
 - **Use client certificate:** Tap to place a checkmark in the box, if your system requires certification.
4. Tap **NEXT** and follow the onscreen prompts to configure options for the account.

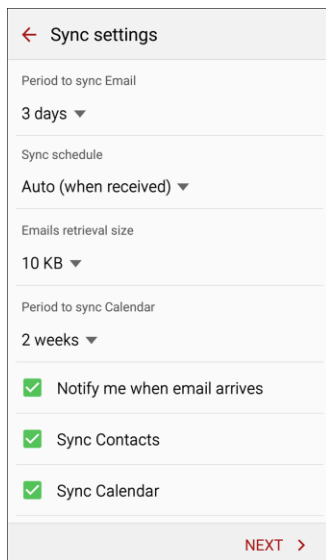

← Sync settings

Period to sync Email
3 days ▼

Sync schedule
Auto (when received) ▼

Emails retrieval size
10 KB ▼

Period to sync Calendar
2 weeks ▼

☒ Notify me when email arrives

☒ Sync Contacts

☒ Sync Calendar


NEXT >

5. Enter an account name and a display name and tap **DONE** to complete setup.
 - ❖ Your corporate email account is set up and you will begin receiving email for the account.

Compose and Send Email


Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. From home, tap **Apps**  > **Email** .

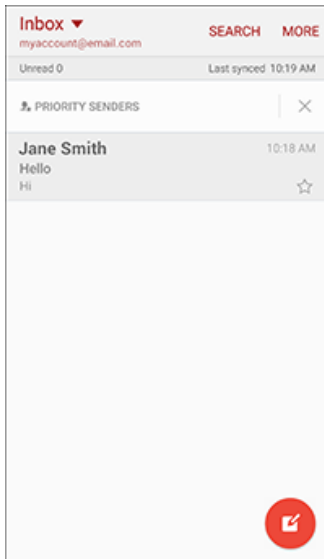


- ❖ The email inbox opens.
- If you want to switch to a different email account, tap the account name at the top of the screen and select another account.
- You can also view multiple inboxes at once. Tap the account name at the top of the screen and then tap **Combined inbox** to see messages from all your configured email accounts.

2. Tap **Compose** .

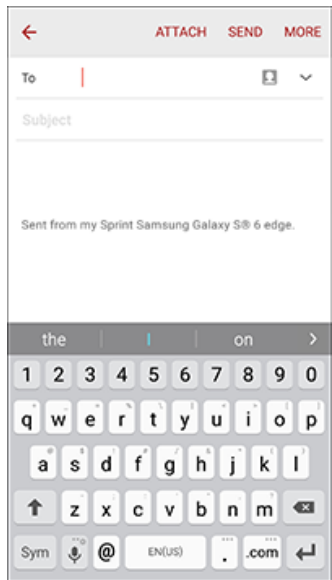

❖ The email composition window opens.

3. Enter the message recipient(s), subject, and message.
4. Tap **SEND**.

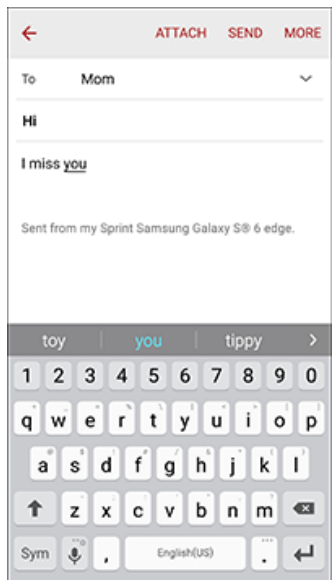


❖ The email message is sent.


Open New Email Messages

When new email arrives, you will see  in the Status bar.

1. Drag the Status bar down to display the Notification Panel.

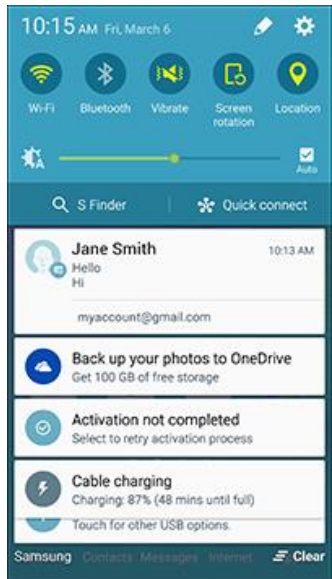

2. Tap the new message from the Notification Panel.

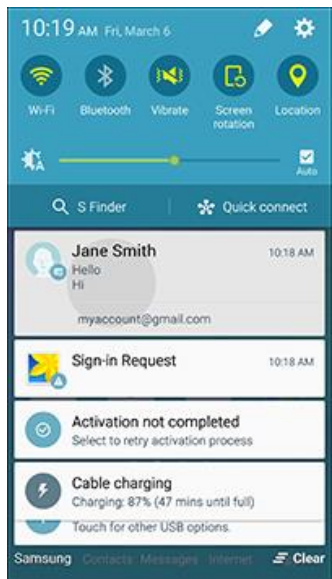


- ❖ The new email message opens.
- If you have two or more new email messages, tapping the notification opens the email inbox. Tap a message to open it.

Open Email Messages


You can also open and read email messages directly from the email inbox. Reading and replying to email on your phone is as simple as on your computer.

1. From home, tap **Apps**  > **Email** .

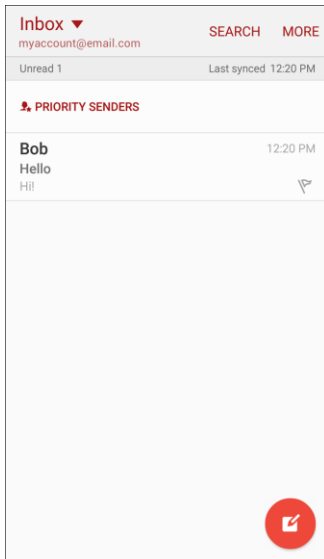

❖ The email inbox opens.

2. Tap the message you want to view.

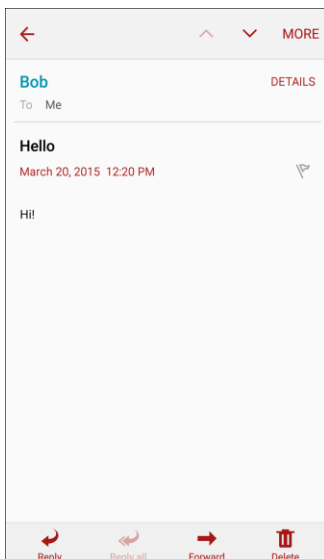

❖ The email message opens.

Tip: Tap the account name at the top of the screen to switch to a different email account.

3. Tap **Reply**  or **Reply all**  to reply to the message.


Options When Reviewing Email Messages

- **Resetting Mail as Unread:** Touch and hold a read message, and then tap **MORE > Mark as unread**.
- **Deleting Email:** From the Inbox, touch and hold a message, select any additional messages, and then tap **DELETE > DELETE**.
 - When reading an email, tap  **Delete > DELETE**.
- **Replying to Email Messages:** With an email message open, tap **Reply**  or **Reply all** , compose your reply message, and tap **SEND**.
- **Forwarding Email Messages:** With the email message open, tap **Forward** , enter a recipient and an additional message, and tap **SEND**.

Delete an Email Account

You can delete an email account from your phone if you no longer wish to receive messages for the account on your phone.

1. From home, tap **Apps**  > **Email** .

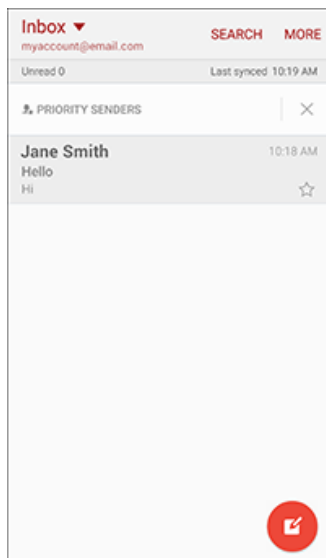

- ❖ The email inbox opens.

2. Tap **MORE > Settings**.



3. Tap the account name, and then tap **REMOVE > REMOVE**.




- ❖ The account is deleted from your phone

Manage Your Email Inbox

Your email inbox provides management options for viewing, sorting, and deleting your email messages.

View Your Email Inbox

1. From home, tap **Apps**  > **Email** .

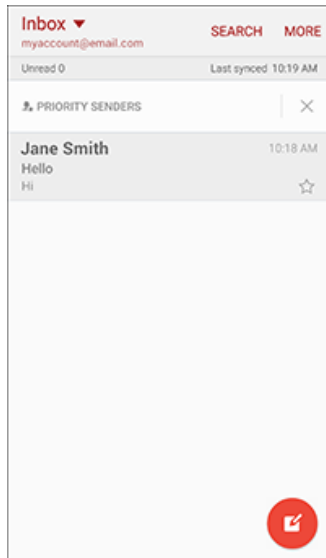

❖ The email inbox opens.

2. Tap the email account at the top of the screen to select a different inbox, or tap **Combined view** to see all your email inboxes at once.

Filter Email Messages

1. On the email account inbox, tap **MORE** > **Sort by**.
2. Select options for filtering email messages.

Delete Email Messages

1. On the email account inbox, touch and hold the message you want to delete.
 - Tap additional emails to delete.
2. Tap **DELETE**.

Priority Senders

Messages from priority senders automatically display at the top of your email inbox. Emails from priority senders display  in their subject line.

To add priority senders:

1. On the email account inbox, tap **PRIORITY SENDERS**.
2. Tap  **Tap to add priority senders**.
3. Select a recommended contact, or tap the **CONTACTS** tab to select additional contacts.
4. Tap **DONE**.

To view only emails from priority senders:


- On the email account inbox, tap  **PRIORITY SENDERS**.

Exchange ActiveSync Email Features


Set options for your corporate Exchange ActiveSync email messages, including synchronization options, out-of-office messages, account settings, and so on.

To access Exchange ActiveSync settings:


1. From home, tap **Apps**  > **Email** .

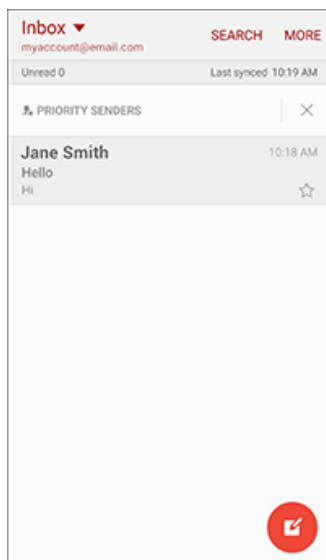

2. Tap **MORE > Settings**.

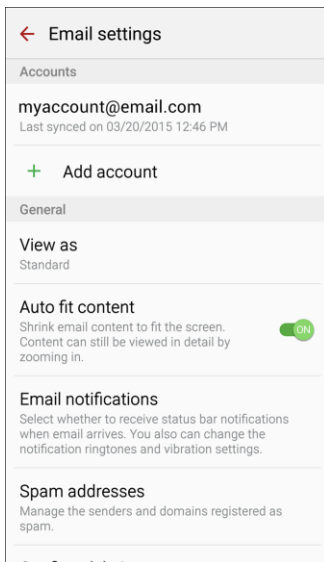

3. Tap the Exchange ActiveSync account name to view its options.

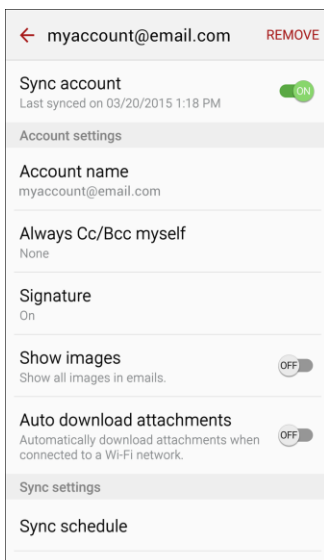

- The following options are available:
 - **Sync account:** Keep the account synchronized on your phone.
 - **Account name:** Change the account name.
 - **Always Cc/Bcc myself:** Send a copy of each email you send to yourself.
 - **Signature:** Enable and configure your signature for each email you send.
 - **Show images:** Show all images in emails.

- **Auto download attachments:** Automatically download attachments when connected to a Wi-Fi network.
- **Sync schedule:** Configure a schedule for syncing your email account.
- **Period to sync Email:** Configure how far back in time you want to sync your email account.
- **Limit retrieval size:** Set a limit to the size of email messages you want to receive on your phone.
- **Limit retrieval size while roaming:** Set a different email size limit when your phone is on roaming.
- **Out of office settings:** You can set your Out of Office status and auto-reply message right from your phone.
- **Folder sync settings:** Select which email folders to sync with the server.
- **Period to sync Calendar:** Set the time period for syncing your calendar with the server.
- **Empty server trash:** Delete the content of the trash folder on the server.
- **In case of sync conflict:** Select whether the device or the server has priority during a sync conflict.
- **Sync Contacts:** Sync your Contacts with your Exchange account.
- **Sync Calendar:** Sync your calendar with your Exchange account.
- **Sync Task:** Sync your tasks with your Exchange account.
- **Sync Messages:** Sync your messages with your Exchange account.
- **Security options:** Manage encryption and signature options for outgoing email.
- **Exchange server settings:** Modify the Exchange server settings for this email account.

Data Services General Information

(LTE and 3G Networks)

The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

Important: Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the phone some time to process your data usage request.

Sprint Spark LTE


The Sprint Spark enhanced LTE network provides your phone with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 60 Mbps. To connect your phone to Sprint Spark, you need to be in an area covered by the Sprint Spark enhanced LTE network.

For more information about the availability of Sprint Spark in your location, visit sprint.com/coverage.


Note: The availability and range of the network depends on a number of factors, including your distance to the base station, and infrastructure and other objects through which the signal passes.

Set Your Network Options

1. From home, tap **Apps**  > **Settings**  > **Mobile networks**  > **Network mode**.

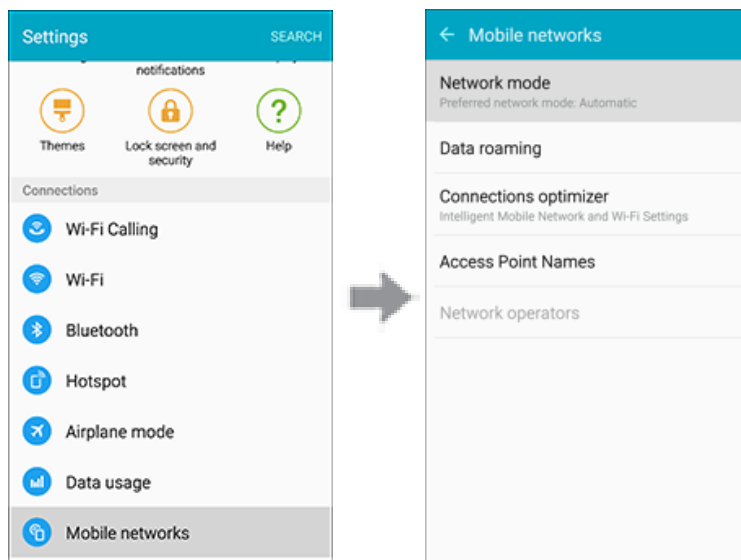

2. Select an option. (**Automatic** is the recommended setting.)

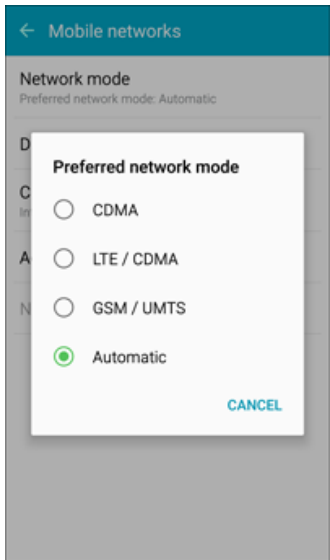

- ❖ The phone will scan for the best available Sprint network and will automatically connect to it.

When your phone is connected to the Sprint Spark enhanced LTE network, the Sprint Spark icon **LTE**  appears in the Status Bar.

Note: The Sprint Spark network is self-discoverable, which means no additional steps are required for your phone to connect to it.

Your User Name


When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com". (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you network. Your user name is automatically programmed into your phone. You don't have to enter it.

Find Your User Name

You can find your user name through your phone's device menu.

1. From home, tap **Apps**  > **Settings**  > **About device** .

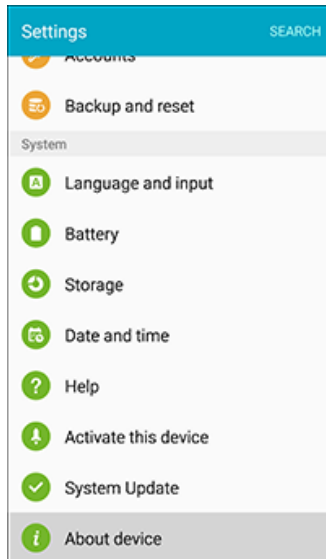

2. Tap **Status**.




- ❖ You will see your user name under the “Username” heading.


Update Your User Name

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your phone.

1. From home, tap **Apps**  > **Settings**  > **System update** .

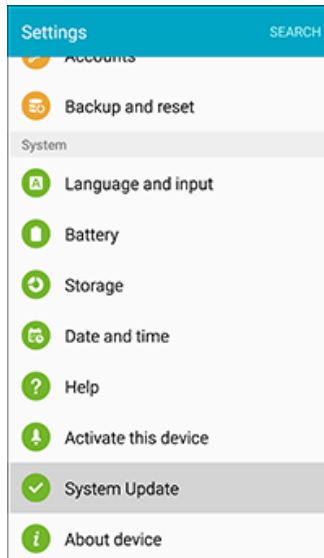

2. Tap **Update profile**.

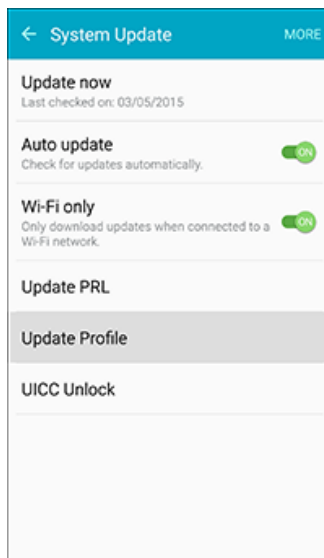

❖ Your phone will download and install the profile update.

Data Connection Status and Indicators

Your phone displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

Icon	Status
	Network (full signal): The number of bars indicates the strength of the signal. More bars mean a better signal.
	Sprint Spark Enhanced LTE data service: Your phone is connected to the Sprint Spark enhanced LTE network. The rays spin when data is being transferred.
	3G (data service): Your phone is connected to the 3G network. When the icon is animated, your phone is transferring or receiving data.

Browser

Your phone's Web browser gives you full access to both mobile and traditional websites on the go using 3G, 4G, or Wi-Fi data connections.

SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are protocols for encrypting sent/received data. While in a screen connected by SSL/TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).


SSL/TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. Sprint and the applicable Certification Authorities make no guarantees whatsoever to users regarding security of SSL/TLS.

Use the Browser

Launching the browser is as easy as tapping an icon.

- From home, tap **Apps**  > **Internet** .

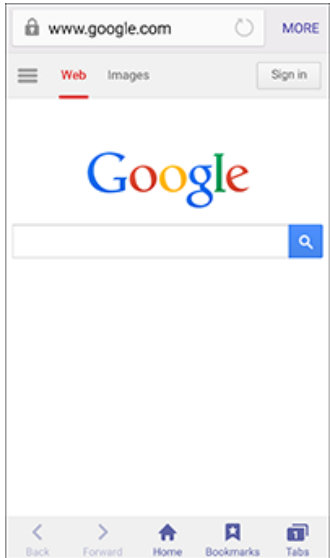


- ❖ The browser opens.
 - The first time you launch Internet, you may be prompted to enter your 10-digit wireless phone number to access the Sprint Mobile home page.
 - You can also launch the browser by tapping a URL in a text message, email message, or Gmail message.

Tip: To change the phone's default launch page to your current page, tap **MORE > Settings > Homepage > Current page**.

Add a Bookmark


Bookmark favorite sites using the browser menu options.

1. From home, tap **Apps**  > **Internet** .

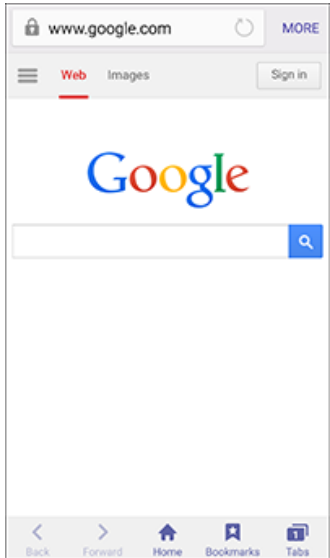

❖ The browser opens.

2. Navigate to the Web page you want to bookmark, and tap **Bookmarks**  > **ADD**.

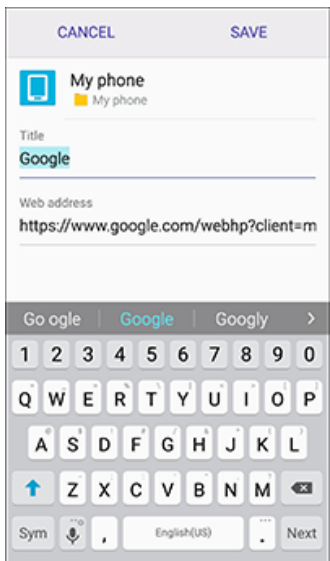

❖ The add bookmark window opens.

3. Check or change the bookmark title, URL, etc., and then tap **SAVE**.

❖ The Web page is added to bookmarks.


Bookmark Options

- **Editing Bookmarks:** From the browser, tap **Bookmarks** , touch and hold a bookmark, tap **MORE > Edit**, edit the bookmark, and then tap **SAVE**.
- **Deleting Bookmarks:** From the browser, tap **Bookmarks** , touch and hold a bookmark, and then tap **DELETE**.

View Browser History


Use the browser menu options to view your browsing history.

1. From home, tap **Apps**  > **Internet** .

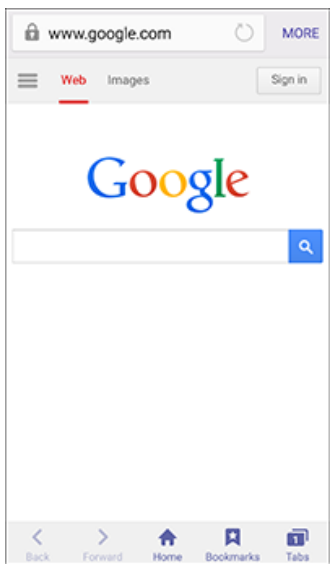


- ❖ The browser opens.

2. Tap **Bookmarks** .

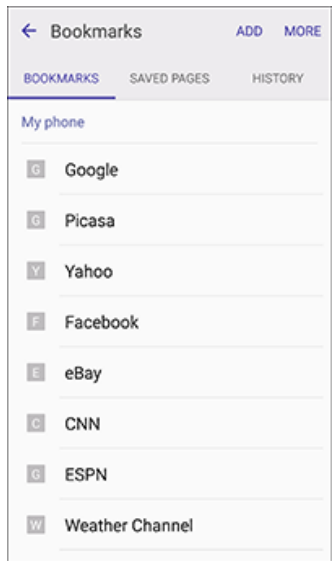

❖ The bookmark window opens.

3. Tap the **History** tab, and then tap an entry.

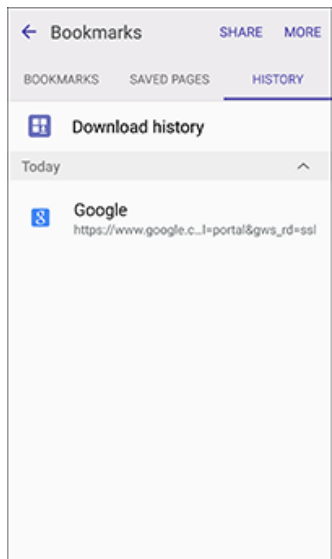


❖ The Web page opens.

Open New Browser Tab


Use tabs to switch between websites quickly and easily.

1. From home, tap **Apps**  > **Internet** .

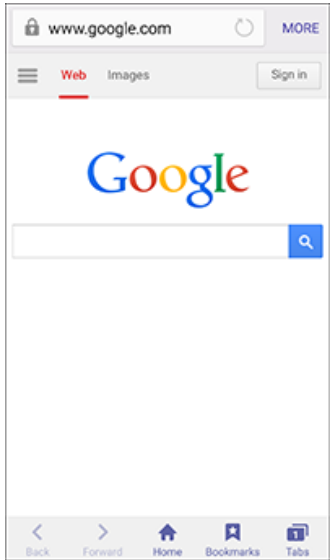

❖ The browser opens.

2. Tap **Tabs** .

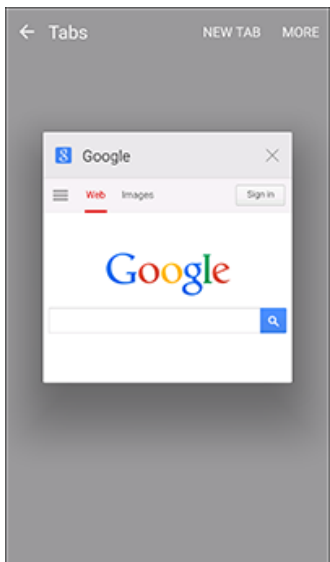

❖ The window opens.

- If you don't see **Tabs** , drag the Web page down to display the address bar on top and the options bar on the bottom.

3. Tap **NEW TAB**.

A new window appears.

- To switch windows, tap **Tabs** , and then touch a thumbnail.


Browser Settings

Configure settings for messaging. See [Internet Settings](#).

Chrome Browser


In addition to the default “Internet” Web browser, your phone supports the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your phone.

1. From home, tap **Apps**  > **Chrome** .

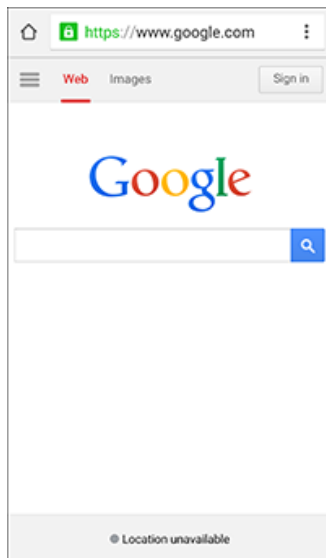

- ❖ Chrome opens.

2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL).

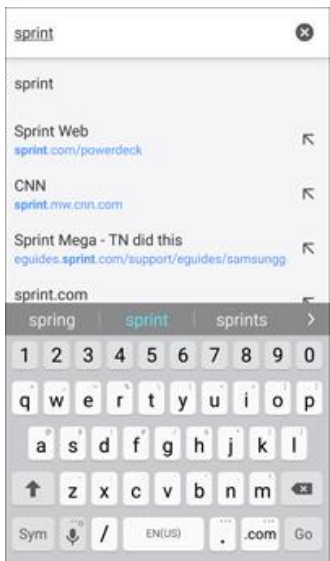

- ❖ The search results appear or a Web page opens.

Chrome Support

- To find on-phone help with Chrome, from Chrome, tap **More options**  > **Help & feedback**.
 - ❖ A Web page will open displaying Google help for Chrome.

Tip: For more information, from your computer, visit: google.com/chrome.

Camera and Video

You can use the camera or video camera to take and share pictures and videos. Your phone comes with a 16 megapixel rear camera and a 5 megapixel front camera that let you capture sharp pictures and videos.


Learn About Your Phone's Camera

For an overview of your phone's camera and its features, access the phone settings menu.

1. From home, tap **Apps**  > **Camera** .



2. Tap **Settings**  > **Help**, and tap a topic to learn more.

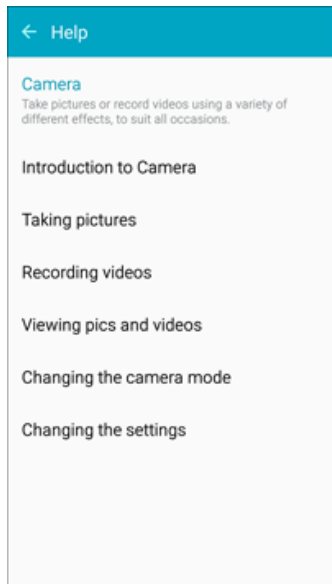

Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your phone's camera.

Capturing Pictures/Videos

- **File Format for Pictures:** File format for pictures is JPEG (.jpg).
- **File Format for Videos:** File format for videos is MPEG4 (.mp4).

Camera Cautions

If Lens Becomes Dirty: Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight: Be careful not to expose lens to direct sunlight for long periods. This may discolor color filter and affect color of images.

Flash Warning

Do not shine the flash close to eyes. Do not look directly at the flash when shining. Do not shine the flash at other people's eyes. It may affect eyesight.

Take a Picture


You can take high-resolution pictures using your phone's camera.

1. From home, tap **Apps**  > **Camera** .



❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap .

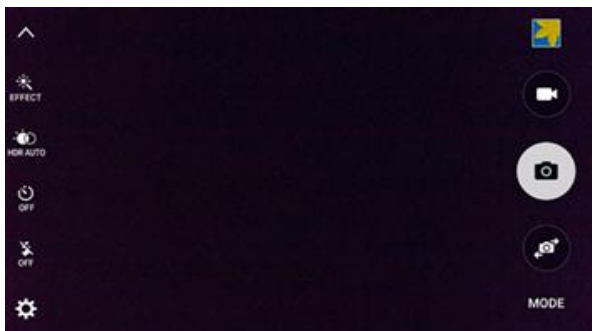


❖ The shutter clicks and the picture is captured and saved to your phone.

Tip: You can launch the camera from the lock screen. Swipe  up from the lock screen to open the camera.

Viewfinder Screen

The Viewfinder screen lets you view your subject and access camera controls and options.

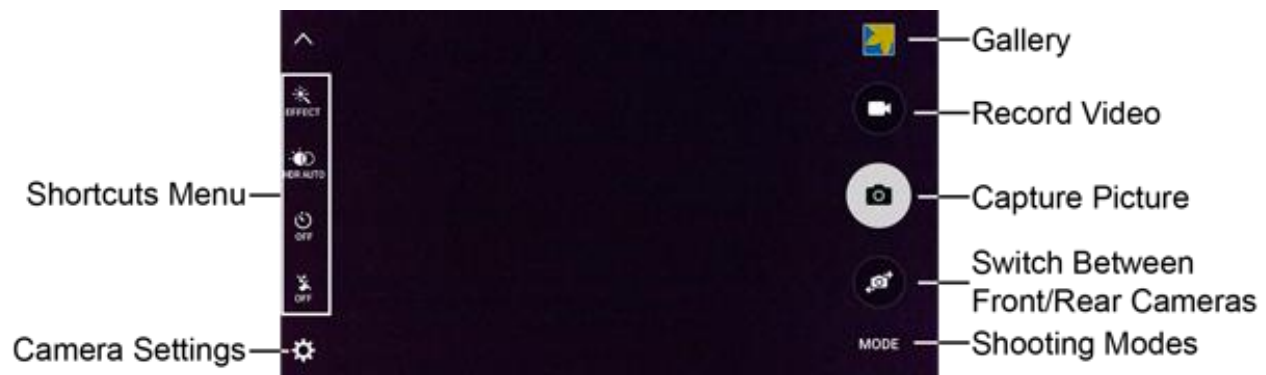

- **Shortcuts Menu:** Gives quick access to frequently-used camera settings:
 - **Effect:** Add a special graphical effect.
 - **HDR (Rich tone):** Save the picture in HDR (rich tone) only.
 - **Timer:** Take time-delayed pictures or videos.
 - **Flash:** Activate or deactivate the flash. Toggle through flash options—on, auto, or off (rear camera only).
-  **Camera Settings:** Opens the camera settings menu and lets you change additional camera settings. See [Camera Options and Settings](#).
-  **Gallery:** View your picture or video in the Gallery application.
-  **Record Video:** Begin recording video.
-  **Capture Picture:** Take a picture.
-  **Switch Between Front/Rear Cameras:** Switch between the rear camera and the front camera.
-  **Shooting Modes:** Select a shooting mode.

Record Videos


Record high-quality videos using your phone's video camera.

1. From home, tap **Apps**  > **Camera** .



❖ The camera viewfinder appears.

2. Aim the camera at your subject and then tap **Record** .

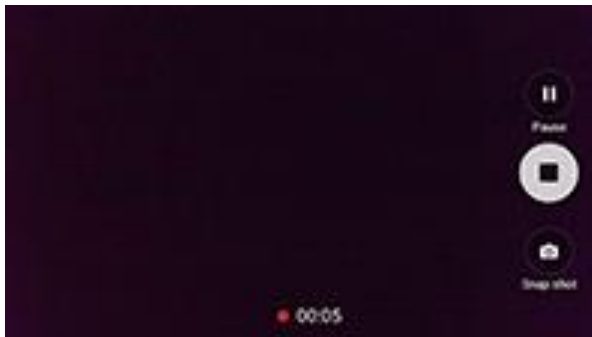

❖ Video recording begins.

3. Tap  to pause recording. Tap  to stop recording.

❖ The camera stops recording and the video is captured and saved to your phone.

Shooting Modes

Your phone's camera offers many shooting modes, to make your pictures or videos special.

1. From home, tap **Apps**  > **Camera** .



2. The camera viewfinder appears.
3. On the Camera screen, tap  to choose a shooting mode. Scroll available modes, and then tap a mode to select it.



- **Auto:** Automatically adjusts the exposure to optimize the color and brightness of pictures. In Auto mode, you can take single or burst shots (take burst shots by holding Capture to take multiple shots until you lift your finger).

- **Fast motion:** Record videos at a low frame rate for viewing in fast motion.
- **Interval shot:** Take a new picture every few seconds using the front camera.
- **Panorama:** Take multiple pictures to merge into one expansive picture. You can create a horizontal or vertical panorama picture.
- **Pro:** Adjust the ISO sensitivity, exposure value, white balance, focal length, and color tone manually while taking pictures.
- **Rear-cam selfie:** Take a self-portrait using the rear camera.
- **Selective focus:** Make objects stand out from the background by blurring items in the distance.
- **Selfie:** Take a self-portrait using the front camera.
- **Slow motion:** Record videos at a high frame rate for viewing in slow motion.
- **Virtual shot:** Create an interactive tour of your surroundings.
- **Wide selfie:** Take wide-angle selfie shots with the front camera to fit more people into your pictures.
- **Download:** Browse and download additional modes to use with Camera. Read and accept the terms, and then browse for new modes.

Note: All modes may not be shown when you tap , depending on your phone's setup and which camera is active (front or rear).

View Pictures and Videos Using Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera, downloaded, or copied to phone memory. You can also take a look at your pictures and your friends' pictures that are on your social networks.


For pictures that are on your phone, you can do basic editing such as rotating and cropping. You can also easily assign a picture as your contact picture or wallpaper and share pictures with your friends.

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery opens.

2. Tap **Time** to open a drop-down list and select other views, such as **Albums**.

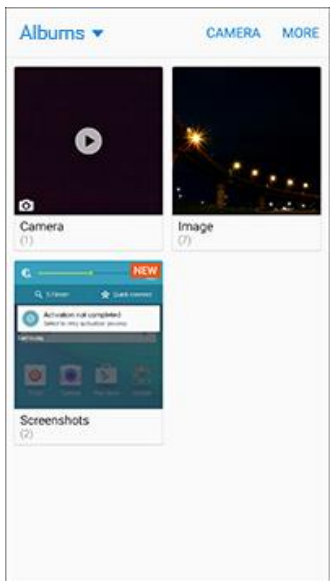


❖ The list of albums opens.

3. Tap an album to view its contents.
 - To select another album, tap the **Back** key  to return to the Albums.
4. For a picture, tap a thumbnail to view the picture. While viewing a picture full-screen you can use these options:



- **Favorite:** Tag a picture as a favorite.
 - **Share:** Choose a method for sharing the picture.
 - **Edit:** Modify your picture.
 - **Delete:** Erase the current picture.
 - **CAMERA:** Tap to open the camera app.
 - **MORE:** Choose other options, including:
 - **Details:** View file details.
 - **Slideshow:** Create a slideshow.
 - **Set as contact picture:** Set the picture as the photo for a contact.
 - **Set as wallpaper:** Set the picture as wallpaper for your Home or Lock screens.
5. For a video, tap a video to select it. When the video is displayed full-screen, you can use these options:

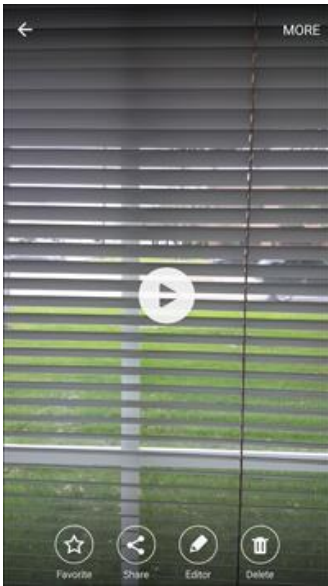

- Tap **Play**  to play the video.
- **Favorite:** Tag a video as a favorite.
- **Share:** Choose a method for sharing the video.
- **Editor:** Edit the video.
- **Delete:** Erase the current video.
- **MORE:** Choose other options, including:
 - **Details:** View file details.
 - **Slideshow:** Create a slideshow.

Pictures and Videos: Review Screen

After capturing a picture or video, from the camera screen, tap the thumbnail image at the upper right corner of the screen to see the item in the review screen. From there, you can access options such as save, view, send, or delete the picture or video.

Pictures and Videos: Options while Viewing

- **Zoom In or Out on a Picture:** Tap the screen twice or pinch the screen to zoom in or out on a picture.
- **Viewing Videos:** Use the onscreen controls to play, pause, or stop the video playback.

After selecting an album from the Albums tab, you can browse through the pictures and videos of that album. Tap a picture or video to view it in full screen.

Note: When viewing pictures, you can tap a picture or video to open a selection menu and choose what to do with the picture or video.

Edit Pictures

Whether you are browsing pictures in filmstrip or grid view in the Gallery application, you can tap a picture to open a selection menu and choose to delete the picture, rotate or crop it, and more.

Rotate and Save a Picture

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.

2. Tap the picture you want to rotate.

3. Tap **Edit**  > **Rotate**.



❖ The picture is rotated and saved to the phone.

Crop a Picture

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.


2. Tap the picture you want to crop.

3. Tap **Edit**  > **Crop**.



❖ A crop box appears on the picture.

4. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.

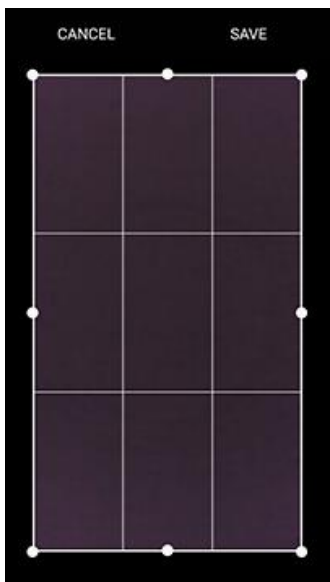

- To move the crop box to the part of the picture that you want to crop, drag the crop box to the desired size and position.

5. Tap **SAVE** to apply the changes to the picture.

❖ The cropped picture is saved in the album as a copy. The original picture remains unedited.

Photo Editor

Perform advanced edits on your pictures, including straightening, adjusting the tone, adding visual effects, and enhancing portraits.

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.

2. Tap the picture you want to edit.
3. Tap **Edit**  > **Photo Editor**.



❖ Enhancement tools display.

4. Adjust your picture with these tools.



- **Adjustment:** Straighten and freely rotate your picture.
- **Tone:** Adjust the brightness, contrast, saturation, temperature, and hue of the picture.
- **Effect:** Add color effects to your picture.
- **Portrait:** Enhance facial features of portraits.

Collage

Create a photo collage with your pictures.

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.

2. Tap a picture you want to add to a collage.
3. Tap **Edit**  > **Collage**.



4. Tap  or **ADD** to select additional pictures for the collage.
 - Tap pictures to select them.
 - Tap **DONE** when you are finished selecting.

❖ Your collage layout will be displayed.
5. Use the tools at the bottom of the screen to adjust your collage.



- **Aspect ratio**: Adjust the aspect ratio of the collage.

- **Layout:** Change the layout of the collage.
 - **Border:** Add a border to the collage.
 - **Background:** Change the background of the collage.
6. To adjust an individual picture within the collage, tap a picture and use the pop-up menu options:
- **Replace:** Replace the selected picture.
 - **Remove:** Remove the selected picture from the collage.
 - **Effect:** Assign an effect to the picture.
 - **Adjustment:** Crop, rotate, flip, reverse, or resize the picture.
- With a picture selected, you can also drag it to reposition it within its place in the collage.
7. Tap **SAVE** to save the collage to the Photo editor album.

Share Pictures and Videos

The Gallery application lets you send pictures and videos using email or multimedia messages. You can share pictures on your social networks (such as Facebook and Google+) and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.


Send Pictures or Videos by Email or Gmail

You can send several pictures, videos, or both in an email or Gmail message. They are added as file attachments in your email. For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
 3. Tap **SHARE**, and then on the sharing menu, tap **Email** or **Gmail**.

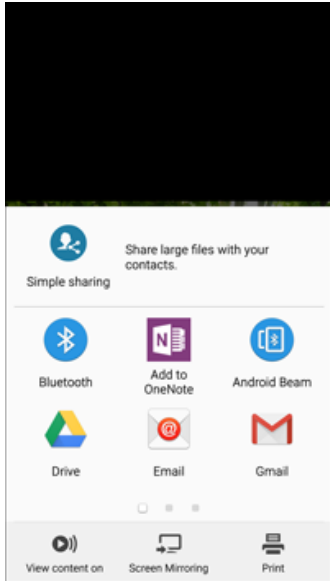

- ❖ Follow onscreen prompts to complete and send the message.


Note: If you have multiple email accounts or Gmail accounts, the default account will be used. Check the “From” line to determine which account is being used.

For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).

Send a Picture or Video by Multimedia Message


Multimedia Messaging (MMS) lets you send pictures and videos using your phone's messaging app. Although you can send several pictures or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. From home, tap **Apps**  > **Gallery** .

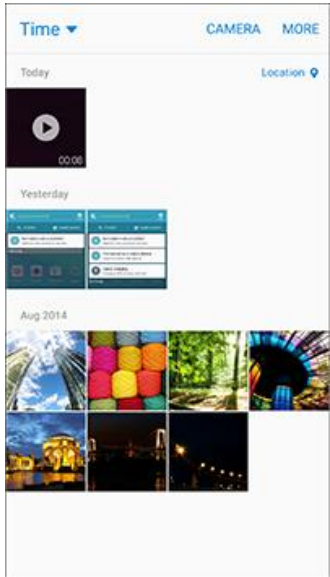

- ❖ The Gallery app opens.
2. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

3. Tap **SHARE**, and then on the sharing menu, tap **Messages**.

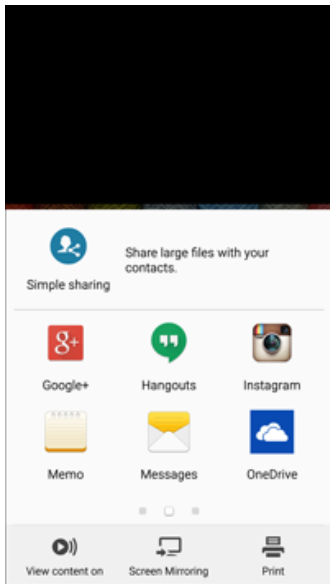

- ❖ Follow the onscreen prompts to complete and send the message.

For more information about sending multimedia messages, see [Send a Multimedia Message \(MMS\)](#).

Send Pictures or Videos Using Bluetooth


You can select several pictures, videos, or both and send them to someone's phone or your computer using Bluetooth.

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.

2. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
3. Tap **SHARE**, and then on the sharing menu, tap **Bluetooth**.

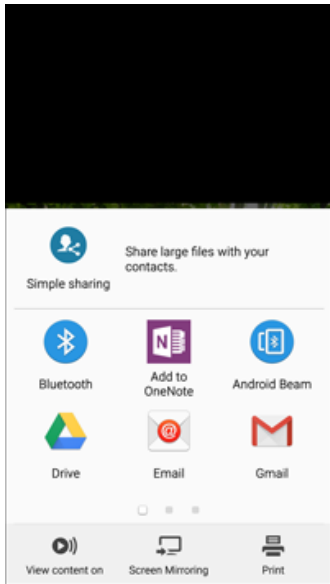


- ❖ Follow the onscreen prompts to complete and send the files.

For more information, see [Bluetooth](#).

Share Pictures or Videos via Additional Apps or Social Media


From Gallery, you can share your pictures and videos from a variety of apps and social media sites, such as Facebook, Google+, Hangouts, Instagram, and more. Available apps will vary depending on what you have installed on your phone.

1. From home, tap **Apps**  > **Gallery** .

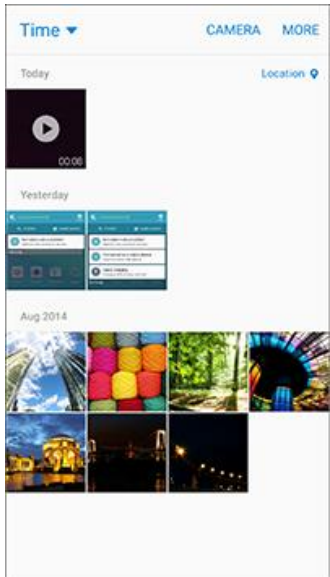

2. Tap the album that contains the photos or videos you want send.
3. Select the items you want to send.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.

4. Tap the screen, tap **SHARE**, and then tap the app you want to use.

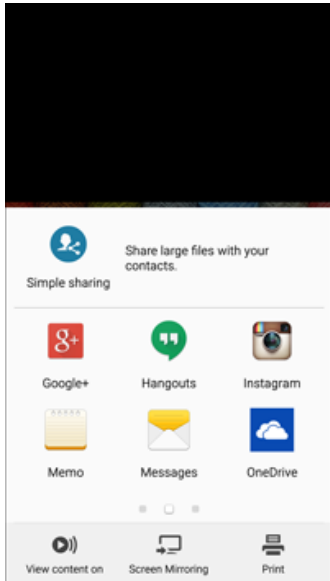

5. Follow the prompts to complete the share.

Share Videos on YouTube


You can share your videos by uploading them to YouTube. Before you do this, you must create a YouTube account and sign in to that account on your phone.

1. From home, tap **Apps**  > **Gallery** .



- ❖ The Gallery app opens.

2. Tap the videos you want to share.
 - To select multiple videos, touch and hold an image to turn on multiple select. Tap all the videos you want to include.
3. Tap **SHARE**, and then on the sharing menu, tap **YouTube**.

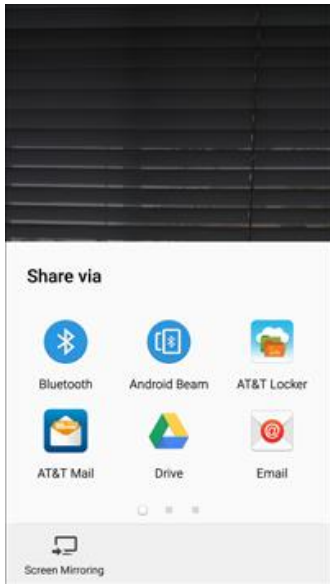

4. Enter the prompted information, such as description and tags, and select a privacy option.
5. Tap **Upload** .
- ❖ The upload is completed.


Camera Options and Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

Switch Cameras

Your phone lets you switch between the front and rear cameras.

1. From home, tap **Apps**  > **Camera** .

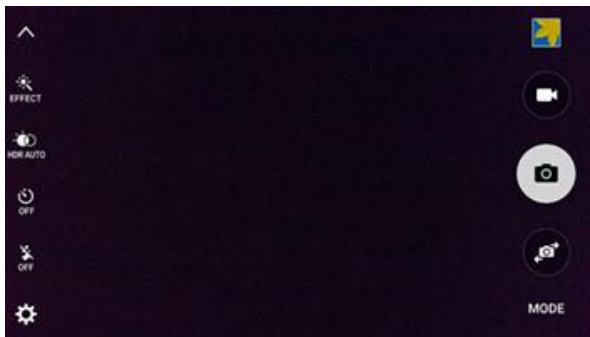

❖ The camera viewfinder appears.


2. Tap .

❖ The camera switches type.

Set Camera Options


You can configure your camera's settings to fit any situation and event.

1. From home, tap **Apps**  > **Camera** .

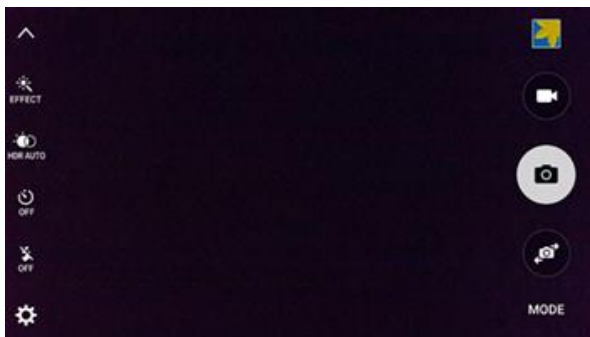

❖ The camera viewfinder appears.

2. Tap **Settings** .

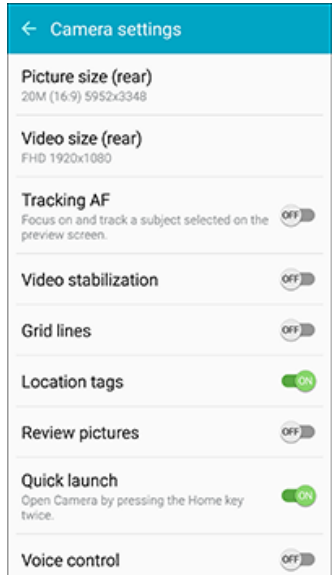

❖ The camera settings menu opens.

3. Select your desired settings (listed in alphabetical order):

Note: Not all settings will be available at all times, depending on which camera is in use (front or rear).

- **Gesture control:** Hold your hand out with your palm facing the camera to have your picture take after two seconds (front camera only).
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Help:** View help on using the camera.
- **Location tags:** Attach a GPS location tag to the photo.
- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Quick launch:** Open the camera by pressing the Home key twice in quick succession.
- **Reset settings:** Reset the camera settings.
- **Review pictures:** Set to show photos or videos after taking them.
- **Save as horizontally flipped:** Save the self-portrait or self-recording as a reversed (or 'mirrored') image (front camera only).
- **Shutter sound:** Play a tone when the capture button is tapped.
- **Tracking AF:** Focus on and track a subject selected on the preview screen (rear camera only).

- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.
- **Voice control:** Set the camera to take photos with voice commands.
- **Volume keys function:** Use the **Volume** key as the camera key, the record key, or as a zoom key.

For additional camera settings, see [Camera Settings](#).

Useful Apps and Features

The following topics detail many of your phone's tools and features such as maps and navigation, calendar, clock, social networking apps, music, memos, and more.

Sprint Zone

Stay connected to all the latest news and information from Sprint. Included here are news, feedback, featured applications and tips/tricks for your device.

- From home, tap **Apps**  > **Sprint Zone** .
- ❖ The Sprint Zone app launches.

Sprint Family Locator

Sprint Family Locator lets you locate any phone on your Sprint family plan instantly—from your mobile phone, tablet or computer.

- From home, tap **Apps**  > **Sprint Family Locator** .

Sprint Fun & Games

Download new apps and games from Sprint.

- From home, tap **Apps**  > **Sprint Fun & Games** .

Sprint TV & Movies

With Sprint TV & Movies, you can watch live TV and access movies and other on demand entertainment on the go.

Note: Coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Go to sprintchannels.mobitv.com for more information.

Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit sprintchannels.mobitv.com for more information on channels and pricing.

Watch TV


1. From home, tap **Apps**  > **Sprint TV & Movies** .
2. Follow the prompts to browse categories and find programs.
 - Depending on your settings, your phone may prompt you to accept a data connection.
 - Browse horizontally through the category options in the center of the screen to see what's available. For quick access, touch a featured item in the center of the screen or select a live channel from the bottom bar.
 - Scroll up and down in a category list and then touch a clip or channel to view the program.

Note: The first time you access a channel that requires a subscription, you will be prompted to purchase access. Touch **Subscribe** to purchase access, or touch **Preview** to see a preview of the selected channel.

Calculator


Your phone's convenient built-in calculator lets you perform basic mathematical equations.

1. From home, tap **Apps**  > **Calculator** .

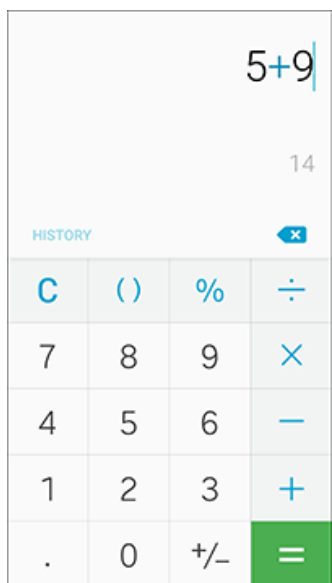


- ❖ The calculator app launches.

2. Tap onscreen keys for calculations.

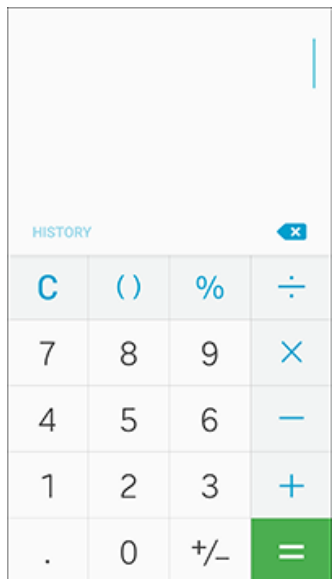

❖ Calculation results appear.

3. To use the scientific calculator, make sure Screen rotation is turned on (Notification Panel > Screen rotation) and rotate the screen to the landscape orientation.

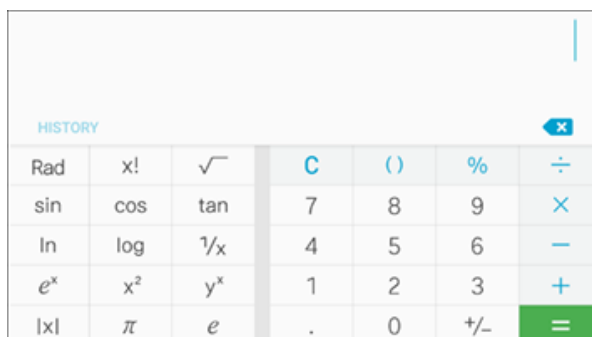

❖ Keys for the scientific calculator appear.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your phone's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, Google Calendar, and Outlook calendar.

In order to sync with your Google calendar, you must sign in to a Google account on your phone. See [Google Account](#).


Calendar Operations

- **View Today's Calendar:** From the Calendar, tap **Today**.
- **Change Calendar View:** From the Calendar, tap the drop-down menu in the upper left corner, and then tap **Year**, **Month**, **Week**, **Day**, or **Tasks** to change the current view.
- **View the Next/Previous Time Period (Year/Month/Week/Day view):** From the Calendar, flick the screen left or right.

Add an Event to the Calendar


Add events to your calendar directly from the Calendar application.

1. From home, tap **Apps**  > **Calendar** .

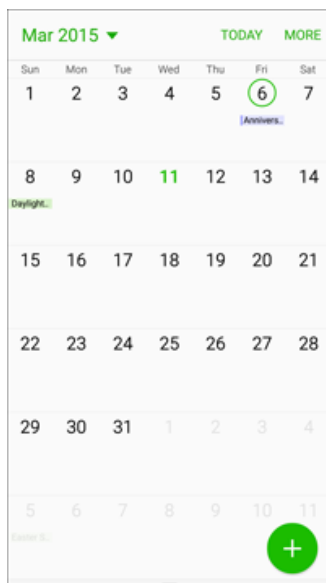


- ❖ The Calendar app opens.

2. Tap **New** .

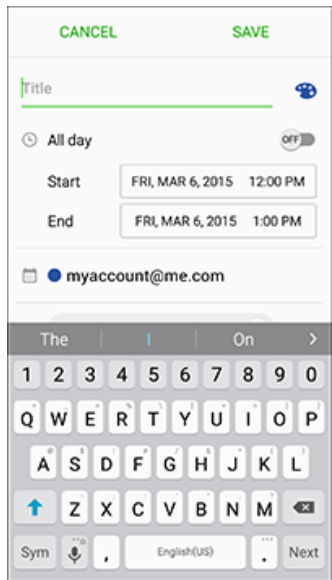

❖ The add event window opens.


3. Enter an event title, start date/time, end date/time, etc., and then tap **SAVE**.

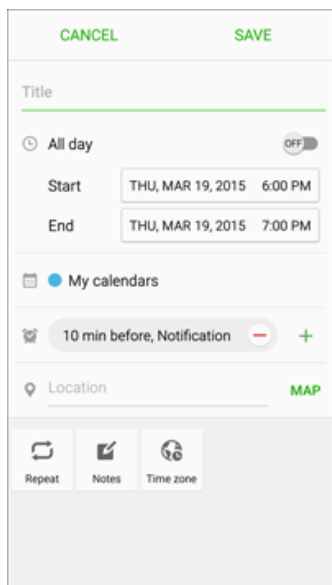

❖ The event is added to your calendar.

Selecting a Calendar

- If you have more than one calendar, select a calendar by tapping the current Calendar on the Add Event screen.

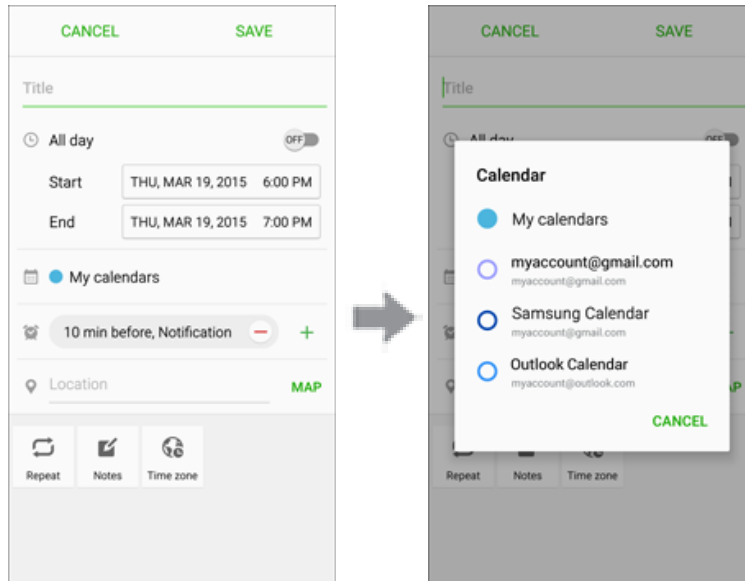

- Select **My Calendars** to create an event that will appear only on your phone.
- Select your Google Account to create a Google Calendar event. If you have several Google Calendars on the Web, select one in which to add your event.
 - You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the Calendar application on your phone. For more information about creating and managing multiple Google Calendars, visit calendar.google.com.
- Select **Samsung Calendar** to create an event that will sync with your Samsung account.
- Select your Outlook or Exchange account to create an event that will sync with these account types.

Note: Available options differ depending on the type of account selected for an event.

View Calendar Events


You can display the Calendar in year, month, week, day, or task view. To change the Calendar view, tap the drop-down menu at the upper-left corner and tap an option.

1. From home, tap **Apps**  > **Calendar** .



❖ The Calendar app opens.

2. Tap a date and then tap an event.

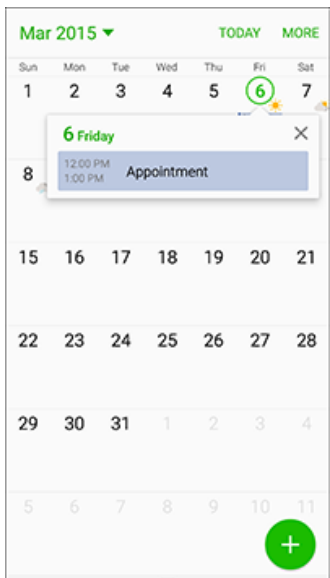

❖ The event details appear.

- Tap the event to view details and edit the event.


Share Calendar Events

Once you've created a Calendar event, you can share it with others via a variety of methods.


1. From home, tap **Apps**  > **Calendar** .




2. Tap a date and then tap an event to see its details.

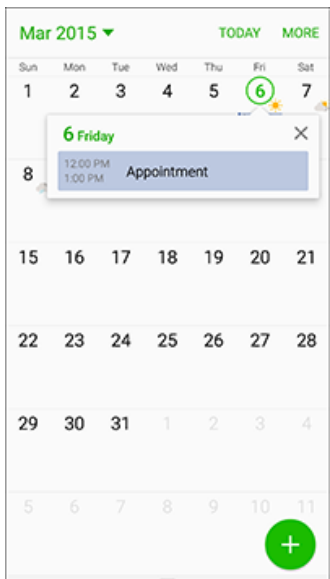

3. From the event details screen, tap **SHARE**.

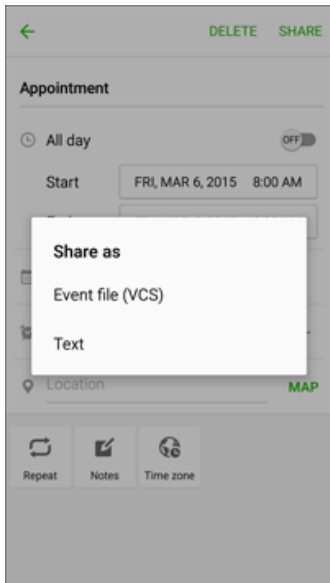


4. Choose a Share as option (Event file (VCS) or Text).
5. Select a sharing method and follow the prompts to send the Event information.

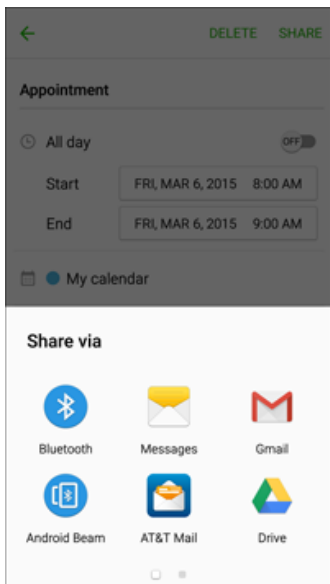

Sync Calendars

You can select which calendars you'd like to sync on your phone, along with what types of information you want to sync.

1. From home, tap **Apps**  > **Calendar** .

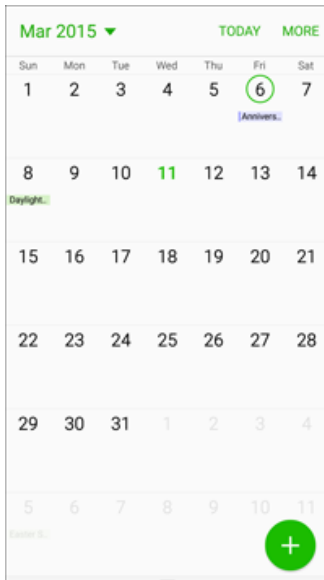


❖ The Calendar app opens.

2. Tap **MORE** > **Manage calendars**.




3. Select sync options by tapping the **ON/OFF** switch next to each item.

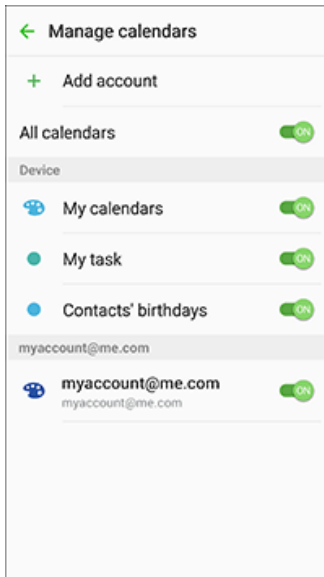

❖ The sync settings have been updated.

4. To manually sync your calendars, swipe down on the screen.

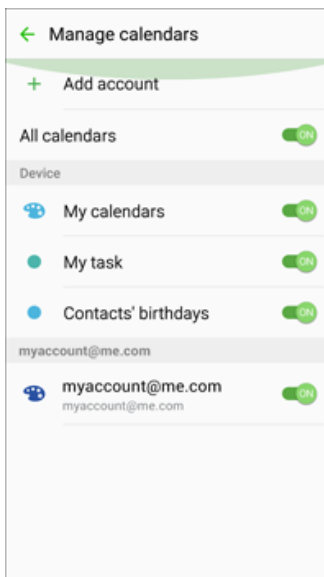

❖ The selected calendars sync.

Synchronize an Exchange ActiveSync Calendar

If you have set up a Microsoft Exchange ActiveSync account on your phone, you can also synchronize Exchange ActiveSync calendar events on your phone. Calendar events on your Exchange ActiveSync will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

1. To check if Exchange ActiveSync items are set to be synchronized, From home, tap **Apps**  > **Settings**  > **Accounts**  > **Microsoft Exchange ActiveSync**.
 - If Microsoft Exchange ActiveSync doesn't appear under the Accounts heading in the Settings menu, you do not have an Exchange ActiveSync account configured on the phone. For information about adding an account, see [Add an Exchange ActiveSync Account](#).
2. If your Exchange ActiveSync account is set for synchronization, the ON/OFF switch next to **Sync Calendar** will be ON .

Clock

Your phone has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.


Checking the Time

You can always check the time on your phone. The current time displays in the upper right corner of the Status Bar. Many widgets and Lock screens also display the time and provide options for how time is displayed.


Setting Date and Time

Your phone automatically receives the current date and time from the wireless network. You can set the date by hand by overriding the default setting.


1. From home, tap **Apps**  > **Settings** .

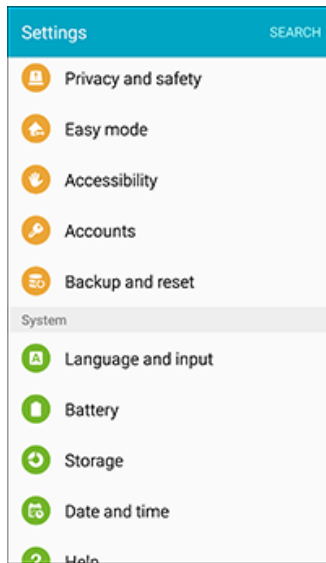

2. Tap **Date and time**.

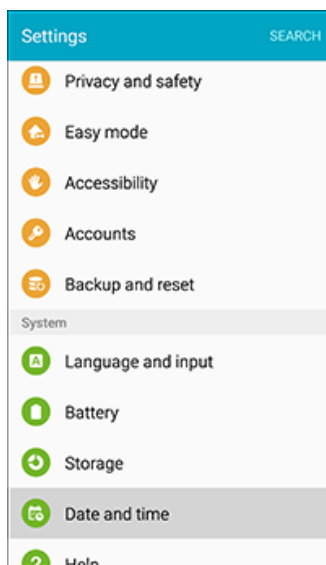

3. Set available date and time options.

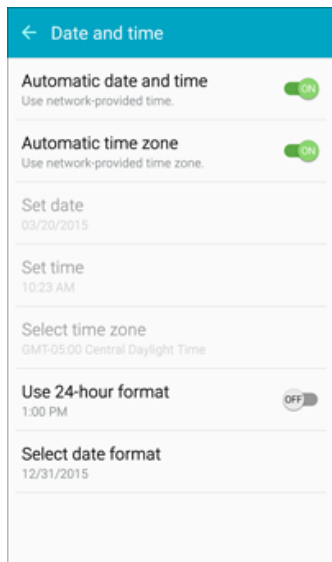


- To set the date and time, tap the **ON/OFF** switch to turn **Automatic data and time** off.
- To select a time zone, tap the **ON/OFF** switch to turn **Automatic time zone** off.
- ❖ Your date and time settings are applied and saved.


Set Alarms

Set multiple alarms using your phone's Clock app.

1. From home, tap **Apps**  > **Clock**  > **Alarm**.

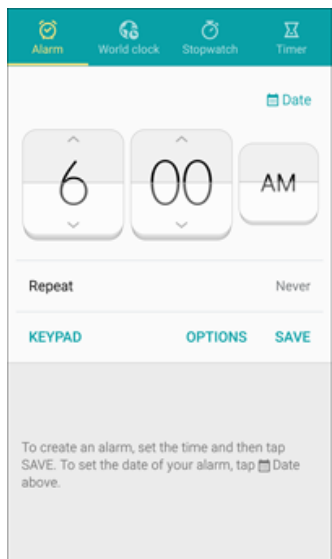

2. Set the alarm options, including time, days, and repeat pattern. For more options, tap **OPTIONS**.

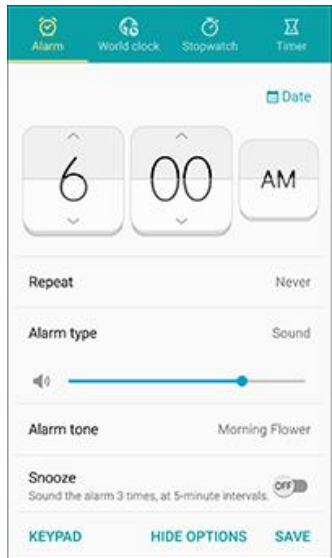

3. When finished, tap **SAVE**.

❖ You will see the alarm icon  in the Status Bar.

Phone at Alarm Time

- At the set alarm time, the phone sounds the alarm and/or vibrates.
- When the alarm sounds, drag  to left or right to dismiss it.

World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. From home, tap **Apps**  > **Clock**  > **World Clock**.




2. Tap a city, and then tap **Add City**  to add it to your list.
3. Repeat to add multiple cities.

Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. From home, tap **Apps**  > **Clock**  > **Stopwatch**.

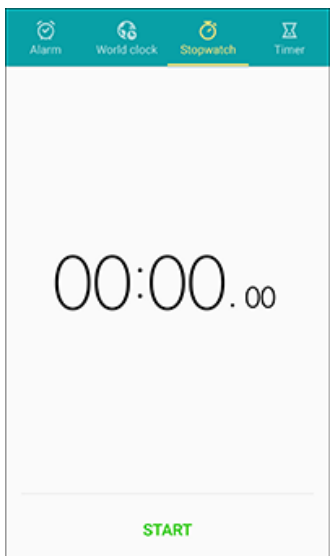


2. Tap **START** to begin timing.
3. Tap **STOP** to stop timing.
 - Additional options include **LAP** to keep track of laps, **RESUME** to continue timing, and **RESET** to reset the stopwatch to zero.

Timer

The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From home, tap **Apps**  > **Clock**  > **Timer**.

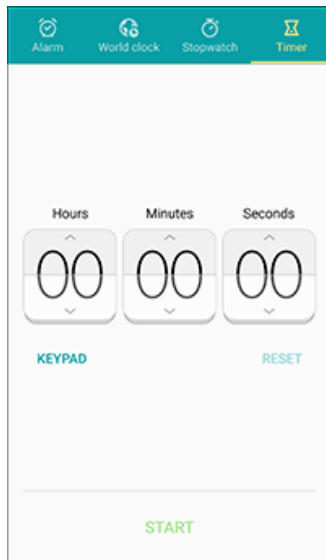

2. Tap **KEYPAD** and then use the keypad to set the length of the timer.
3. Tap **START** to begin the timer.

Galaxy Apps

Discover apps designed exclusively for your Galaxy phone.

Note: You must sign in to a Samsung account in order to download Galaxy Apps.

- From home, tap **Apps**  > **Galaxy Apps** .

Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera or downloaded.

You can do basic editing such as rotating and cropping. You can also set a picture as your contact picture or wallpaper and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply tap an album to view the photos or videos in that album.

If you have downloaded any photos and videos, these will be placed in the **All downloads** album.

1. From home, tap **Apps**  > **Gallery** .



❖ The Gallery app opens.

2. From the main Gallery screen, you can use these options:
 - Tap a picture or video to display it in full screen view.
 - Touch and hold thumbnails to select them (indicated by a check mark).
 - Tap the drop-down list in the upper-left corner (Time is the default view) to choose another display style. You can view by Albums, Events, Categories, or Locations.
 - Tap **CAMERA** to launch the Camera to take pictures or record video.
 - Tap **MORE** for options. Available options depend on which Gallery screen you are viewing, and may include:
 - **Edit:** Depending on the view, tap albums or items to select them. After selection, you can tap **MORE** again for options you can use with the selected item(s).

- **Share:** Share albums, pictures, or videos.
- **Search:** Search for a picture or video.


For more information about using Gallery, see [View Pictures and Videos Using Gallery](#), [Edit Pictures](#), and [Share Pictures and Videos](#).

Google Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, as well as for video calling. Log in to a Google account beforehand (see [Google Account](#)).

Using Hangouts

1. From home, tap **Apps**  > **Google**  > **Hangouts** .

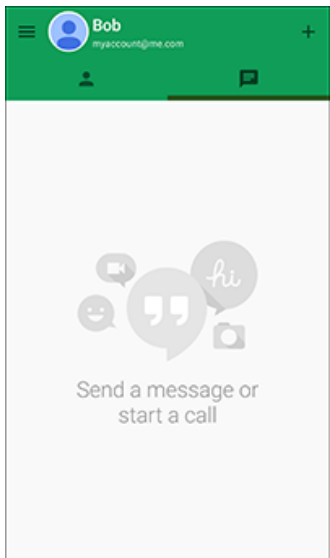


- ❖ The Hangouts app will open.

2. Tap **Add**  to start a new Hangout.



3. Type a name, email, number, or circle, or select a contact from the list.

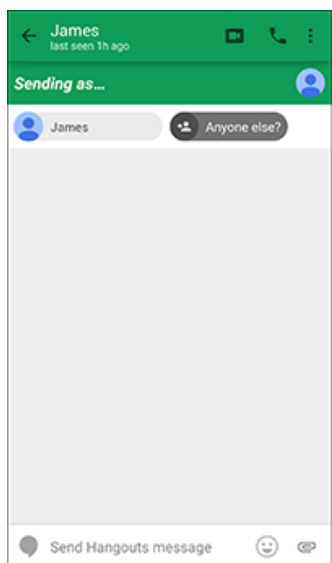

4. Type a message or tap  to start a video chat.
- ❖ A chat window or a video chat window opens.
 - Each time text is entered, the corresponding friend appears.
 - If a friend is not in a Hangout, you will see a message. Tap **Send invitation** to invite them to join the Hangout.

Hangouts Operations

- **Ending a Video Chat:** In the video chat window, tap .
- **Disabling Chat History:** If you don't want to keep chat history, in the chat window, tap **More options**  > **Turn history off**.
- **Delete Chat History:** To delete all your chat history, in the chat window, tap **More options**  > **Delete** > **DELETE**.

Note: You can use Hangouts as your phone's default messaging app, or as a standalone IM app. If you set Hangouts as the default messaging app, the Messages app will be disabled. For more information, see [Default Messaging App Settings](#).

Google Maps


Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

Note: To use Google Maps, you will need to have your phone's Location feature turned on. See [Location Settings](#) for information about enabling Location on your phone.

View Maps of Specified Places

Use Google Maps to locate and map a specific address or destination.


1. From home, tap **Apps**  > **Google**  > **Maps** .

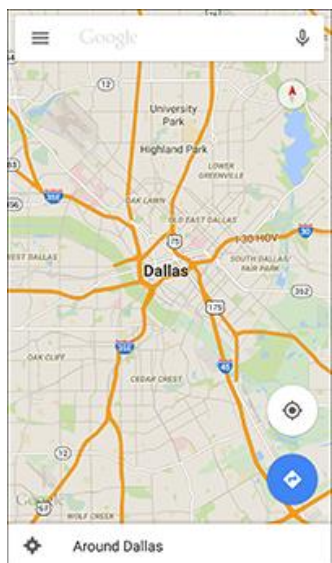


- ❖ Google Maps opens.

Note: The first time you access Maps, you may be prompted to accept the Terms of Service and Privacy Policy. Tap **ACCEPT & CONTINUE** to continue.

2. Tap in the search box to start a search.

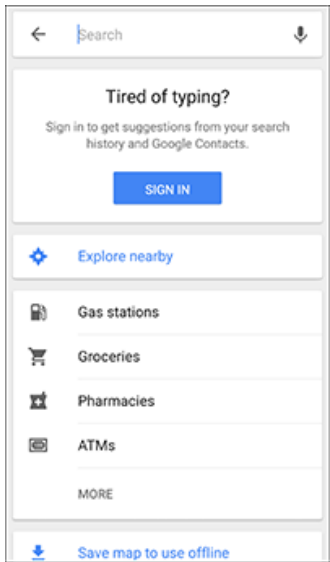

3. Enter an address, city, facility name, etc., and then tap a candidate in the results list.

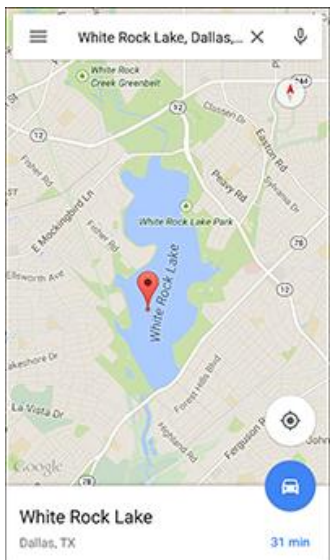

- ❖ A map of the specified location opens.

Google Maps Operations

- **Viewing Current Location:** From the Maps app, tap .
- **Obtain Useful Area Information for Current Location:** Tap the **Search** field, enter the information you are looking for, and then tap a result to view it.
- **View Traffic Information, Aerial Photos, Etc.:** Tap **Menu**  and then tap **Traffic**, **Satellite**, **Google Earth**, etc.
- **Check Route to Destination:** Tap , enter your current location and your destination, and then tap a method of transport (car, public transit, bicycle, or on foot) to see available routes.
- **Check Detailed Operation for Maps:** From the Maps app, tap **Menu**  > **Help**.

Google Play Books

Discovering your favorite books and authors has never been easier. With Google Play Books, you can shop the world's largest selection of eBooks and read them anywhere you like.

- From home, tap **Apps**  > **Google**  > **Play Books** .

Google Play Games

Google Play Games is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. It brings all of your gaming on Google Play together in a unified Android experience.

- From home, tap **Apps**  > **Google**  > **Play Games** .

Google Play Movies & TV

Google Play Movies & TV allows you to watch movies and TV shows purchased on Google Play. You can stream instantly on your Android phone or download so you can watch from anywhere, even when you are not connected. Also, get quick access to your personal video collection, including those taken on your phone.

Learn more about Google Play Movies & TV at play.google.com/about/movies.

- From home, tap **Apps**  > **Google**  > **Play Movies & TV** .

Google Play Music


The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.

Note: For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

Using Google Play Music

Use the Google Play Music app to listen to all your music on your phone. Compatible music file formats include: MP3 (.mp3), AAC (m4a), WMA (.wma), FLAC (.flac), OGG (.ogg), DRM protected AAC (m4p), and ALAC (.m4a).


1. From home, tap **Apps**  > **Google**  > **Play Music** .

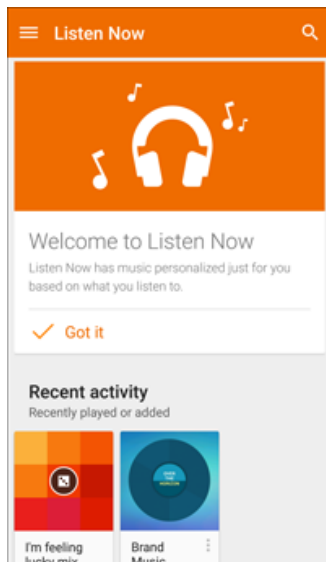

- ❖ The Play Music app opens to the Listen Now screen. To view additional music options, tap **Menu**  and select an option (My Library, Playlists, Instant Mixes, or Shop).
2. Tap an item from the category window and then tap a song.
 - ❖ The song begins playing.

Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.

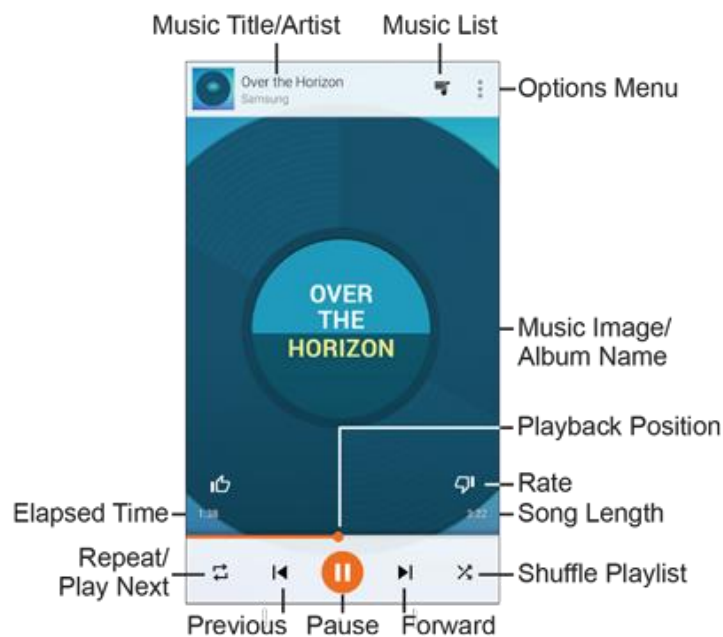


Feature	Description
Elapsed Time	Amount of time the song has been playing.
Forward	Play the next song.
Music Image/Album Name	Display music images and album names (if available).
Music List	View current playlist or queue
Music Title/Artist	Displays music title and artist (if available).
Options Menu	Access the options menu.
Play/Pause	Play or pause the current song.
Playback Position	Current point in the song. Slide to move forward or backward.
Previous	Play the previous song.
Rate (Thumbs Up/Thumbs Down)	Rate the current song.
Repeat/Play Next	Repeat the current song or play the next song queued.
Shuffle Playlist	Shuffle the current playlist or queue.
Song Length	The length of the song.

Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.

1. From home, tap **Apps**  > **Google**  > **Play Music** .

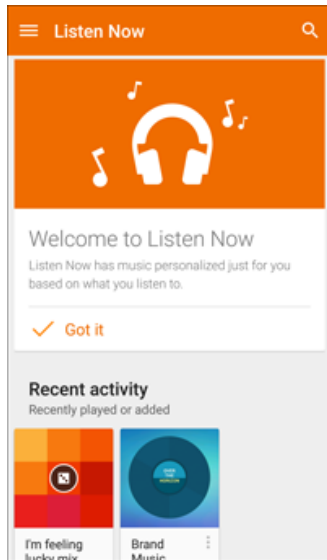

❖ The Play Music app opens to the Listen Now screen.

2. Tap **Menu**  to view your library, playlists, or access Google Play Music online.
3. From a list displaying songs, tap **More options**  next to a song you want to add to a playlist.
4. Tap **Add to playlist** > **New playlist**.
5. Enter a Name, Description, and accessibility option for the playlist, and then tap **CREATE PLAYLIST**.
6. To add more songs, tap **More options**  next to a song and then tap **Add to Playlist** > [playlist name].

Adding Currently Playing Music to a Playlist

- From the player view, tap **More options**  > **Add to playlist** and then tap the name of a playlist.
 - ❖ The music is added to the playlist.

Google Play Newsstand

With Google Play Newsstand, discover more of the news and magazines you care about all in one app on your phone. Enjoy breaking news and in-depth articles featuring audio and video. From sports, business, cooking, entertainment, fashion and more it's all in one place.

- From home, tap **Apps**  > **Google**  > **Play Newsstand** .


Google Search

Search information saved on the phone and in phone applications as well as on the Internet.

Use Google Search


Type search terms in the Google Search bar to find information on your phone and around the globe.

1. From home, tap the Google search bar or tap **Apps**  > **Google**  > **Google** .

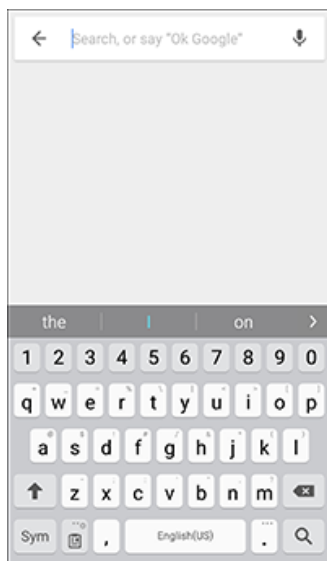

- ❖ The Search window opens.

- If a description for Google Now appears, tap **What can Google Now do?** and read the information. Tap **YES, I'M IN** on the last page if you want to use Google Now.

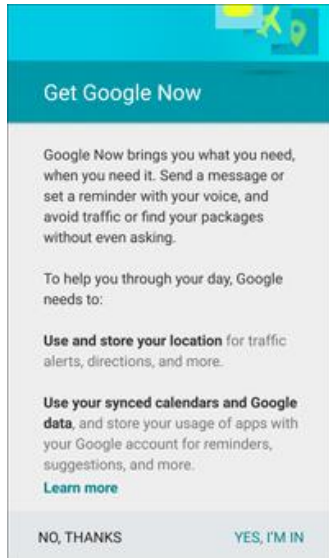

2. Type your search keywords and tap **Search** .

❖ Search results appear.

- To search by voice, tap  in the search bar and speak your search terms.

Google Search Options


Note: To set Google Search options, from the main Google Search screen, press the **Back** key .

- **Changing Search Information:** In the search window, tap **Menu**  > **Settings** > **Phone search** and select where to search.
- **Using Google Now:** Google Now automatically searches for information based on search keywords used, your current location, etc., and presents search results in the search screen. Google Now also informs users of scheduled events.
 - To enable Google Now, in the search window, tap **Menu**  > **Settings**. Tap **Now cards**, and then tap the **ON/OFF** switch next to **Show cards**.
 - To disable Google Now, in the search window, tap **Menu**  > **Settings**. Tap **Now cards**, and then tap the **ON/OFF** switch next to **Show cards**. Tap **TURN OFF** to confirm.

Use Google Voice Search

Use your voice to search instead of typing, with Google Voice Search.

1. From home, tap **Apps**  > **Google**  > **Voice Search** .

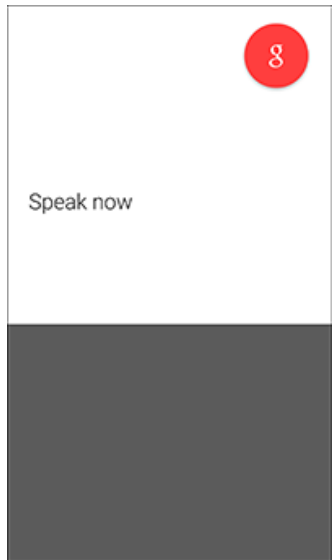

- ❖ The Voice Search window opens.
2. Speak your search terms.
- ❖ Search results appear.

Lookout Security


Lookout Security provides mobile device-specific security features that are coupled with a minimal performance hit. Lookout Mobile Security provides key security options that are unique to the mobile market. Along with the antivirus and anti-malware tech, there's a lost and stolen phone locator service, an application privacy adviser, and a backup service.

- From home, tap **Apps**  > **Lookout** .

Memo

Use your phone's memo app to save text, memos, lists, and more.

1. From home, tap **Apps**  > **Samsung**  > **Memo** .

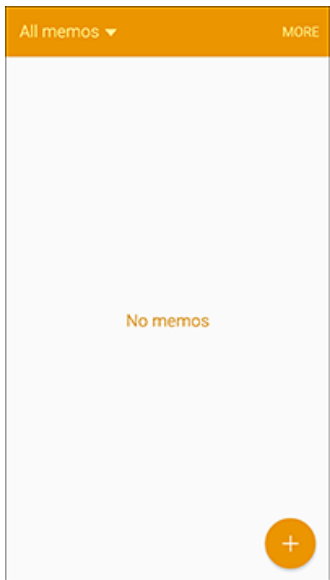

❖ The memo list appears.

2. Tap  and enter your memo title and text.



3. Tap **SAVE**.

❖ The memo is saved.

Milk

Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free.

- From home, tap **Apps**  > **Samsung**  > **Milk** .

Music


The Music app plays music files. Use Music to browse your music library, play songs, and create playlists. You can also set songs as ringtones for incoming calls, or as alarm tones.

Note: For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

When you close the Music screen, playback will continue in the background, so you can listen to music while you use other features of your phone. When music is playing in the background, you can access playback controls from the Notification Panel.


Play Music

1. From a Home screen, tap  **Apps** > **Music** .

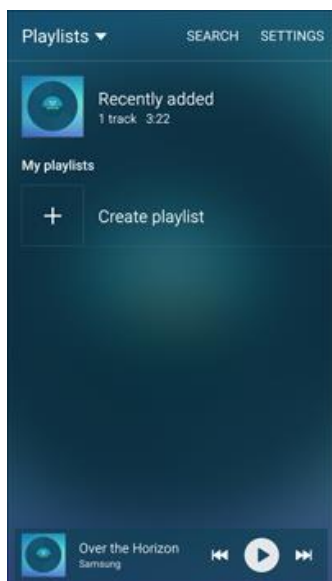

- ❖ The music app opens to the Playlists category.
 - The default categories are **Playlists**, **Tracks**, **Albums**, **Artists**, **Genres**, **Folders**, and **Composers**. Tap the drop-down list at the upper left corner and tap a category to display it.

2. Scroll through the list and tap a song to begin. While playing music, use these controls:

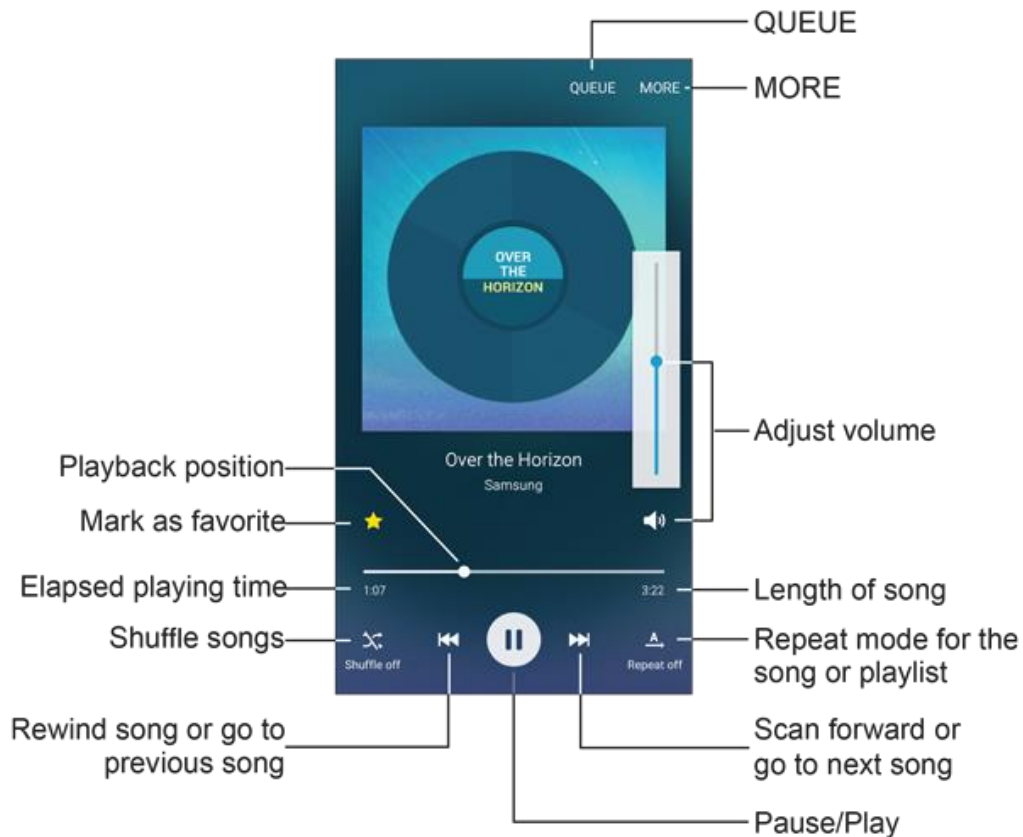


- Tap to pause playback. To start playback again, tap .
- Tap to move to the previous song. Tap to move to the next song.
- Tap the repeat button to control playback. Choose to play all songs once. Choose to repeat all songs. Choose to repeat the current song.
- Tap the shuffle button to control the order songs are played. Choose to play songs in the order they appear in the list. Choose to play songs in random order.
- Tap to mark a song as a favorite. Whenever a song is a favorite, the star is bright. Favorite songs are included in the Favorites playlist.
- Tap to set the volume. You can also set volume by pressing the **Volume** key on the side of the phone.

Use Playlists

Create playlists to group songs, so you can listen to them together.

1. From a Home screen, tap  **Apps** >  **Music**.

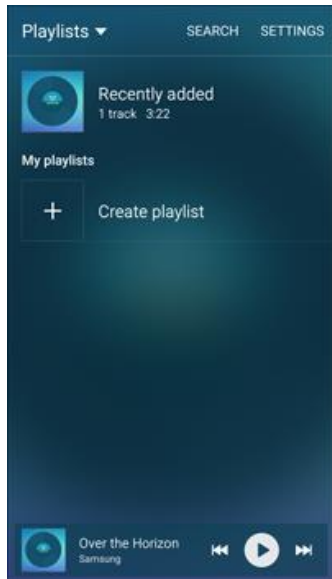

2. Tap the drop-down list in the upper left corner, tap **Playlists**, and then use these options:
 - Tap an existing playlist to play its songs.
 - Tap  **Create playlist** to create a new playlist.
 - Enter a name for the playlist and tap **CREATE**.
 - Tap songs from the Tracks list to add them to the playlist. When you're done adding songs, tap **DONE**.
 - ❖ The new playlist is saved under My playlists.

Tip: To edit a playlist, tap it from the list and then tap **ADD** to add more songs, or tap **MORE** to access the Edit, Rename, and Settings options for the playlist.

Music Options and Settings

1. From a Home screen, tap  **Apps** > **Music** .
2. Tap **MORE** for options. Available options depend on the category:
 - **Edit:** Edit the song or playlist.
 - **Add to playlist/Create playlist:** Depending on the tab, you can add songs to a playlist, or create a new playlist.
 - **Add to Favorites:** Mark this song or playlist as a Favorite.

- **Delete:** Delete the song or playlist.
- **Play on other device:** Stream the song to nearby devices.
- **Listen via Bluetooth:** Play music through a Bluetooth-compatible device that is paired with your phone. For more information about using Bluetooth, see [Bluetooth](#).
- **Details:** View file details.
- **Settings:**
 - **SoundAlive:** Choose a setting to match the type of music you're playing.
 - **Play speed:** Touch and drag the slider to set the default speed for music playback.
 - **Music auto off:** Choose a time period for music to play, after which Music will close.
 - **Smart volume:** When enabled, Music automatically adjusts the volume of all songs to an equal level.

My Files

My Files allows you to manage your sounds, images, videos, Bluetooth files, Android files, and other data in one convenient location. This application allows you to launch a file if the associated application is already on your phone.

1. From home, tap **Apps**  > **Samsung**  > **My Files** .
2. Folders display, including:
 - **Recent files:** View recently saved files.
 - **Images:** View image files.
 - **Videos:** View video files.
 - **Audio:** View audio files.
 - **Documents:** View document files.
 - **Download history:** View all apps and files that have been downloaded to the phone.
 - **Shortcuts:** Contains shortcuts to files or folders that you have added. This option only appears if you have added shortcuts to the My Files main screen.
 - **Local storage:** View folders and files in their storage locations.
 - **Cloud storage:** View folders and files store on the Internet.

Note: Different folders may appear depending on how your phone is configured.

To view files in My Files:

1. From home, tap **Apps**  > **Samsung**  > **My Files** .
2. Tap a category to view its files or folders.

3. Tap a file or folder to open it.

OneDrive

OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use.

- From home, tap **Apps**  > **Microsoft**  > **OneDrive** .

OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive.

- From home, tap **Apps**  > **Microsoft**  > **OneNote** .

Peel Smart Remote

Use the Peel Smart Remote app on your phone to control your TV, set-top box, DVR, stereos, and other electronic devices.

1. From home, tap **Apps**  > **Samsung**  > **Peel Smart Remote** .
2. Tap **START** and follow the prompts to enter your ZIP code, select a television or cable service provider, set personalization preferences, and program your television, cable/satellite box, and more.

S Voice

S Voice is a voice recognition application you can use to activate a wide variety of functions on your phone.

This is a natural language recognition application. You can ask questions (Is it raining in Dallas?) or speak commands (Show me where to find cheap gas).

1. From home, tap **Apps**  > **S Voice** .
2. Review and accept the terms and conditions, and then tap **NEXT**.
3. Tap **START** and follow the instructions to set up a wake-up command.
4. To use S Voice, speak a command. The screen gives you some examples.
5. Tap  if the phone does not hear you, or to give it a command.

Note: You may have set up the S Voice wake-up command during the phone's setup screens.

Video


Play videos stored on your phone, or from your other devices (you must sign in to your Samsung account to play videos synced from your other devices).

1. From home, tap **Apps**  > **Video** .
2. Scroll through the videos stored on your phone. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

Use Pop-Up Play

Multitask with Pop-Up Play by transforming your video player into a pop-up window floating on the screen. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From home, tap **Apps**  > **Video** .
2. Tap a video to view it.
3. Tap the screen to display playback options, and then tap **Pop-up**.

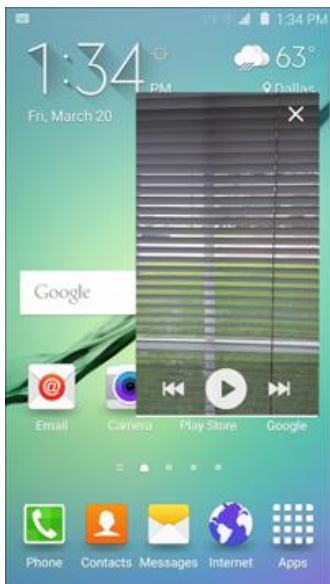


- ❖ The video will continue playing in a floating window. Drag the window to any location on the screen, and use two fingers to pinch or spread to resize the floating window.

Voice Recorder

The Voice recorder allows you to record an audio file up to one minute long and then immediately share it. Recording time will vary based on the available memory within the phone.

Make a Voice Recording


1. From a Home screen, tap **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap the drop-down list in the upper left corner to choose the appropriate recording mode:

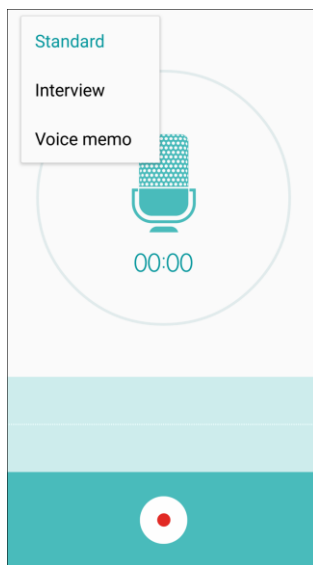

- **Standard:** This recording mode picks up any sounds detected by the microphones.
 - **Interview:** The top and bottom microphones are used for two-directional recording. The top and bottom of the device pick up equal amounts of sound. Microphones can be muted during recording and playback.
 - **Voice memo:** Voice input is converted to text on screen. The maximum recording time is five minutes.
3. Use the Voice Recorder controls:
 - To start recording, tap  **Record** and speak into the microphone.
 - To pause recording, tap  **Pause**. To end the recording, tap  **Stop**.
 - To cancel the recording, tap  **Cancel**.
 - Tap block incoming calls while recording, tap **MORE** > **Turn on Call rejection**.
 - To mark a spot in the recording so you can find it later, tap  **Bookmark**.

Play Back a Voice Recording

1. From a Home screen, **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap  **Recordings**.
3. Tap a recording to play it back.

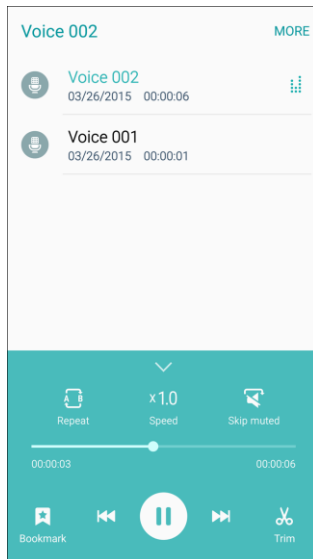

4. During playback, you have the following tools available:
 - **Repeat:** Tap to repeat the recording once it reaches the end.
 - **Speed:** Tap to change the playback speed.
 - **Skip muted:** Tap to skip muted portions of the recording.
 - **Bookmark:** Tap to mark spots in the recording for later reference.
 - **Trim:** Tap to open the trim tool, which allows you to trim down the recorder using sliders.

Share a Voice Recording

1. From a Home screen, tap **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to display options.
3. Tap **MORE** > **Share**, and then follow the prompts to choose a method and share the file.

Modify a Voice Recording

1. From a Home screen, tap **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to select it.
3. Tap **MORE** to display options:

- **Share:** Share the voice recording.
- **Rename:** Change the name of the voice recording.
- **Write to Voice Label:** You can save the voice recording to a Voice Label via NFC.

Voice Recorder Options

1. From a Home screen, tap **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap **Recordings**  to view a list of recordings.
3. Tap **MORE** for options:
 - **Edit:** Tap on recordings to select them. After selection, you can delete, rename, or write the recording to a Voice Label.
 - **Share:** Select voice recordings to share.
 - **Search:** Search for a voice recording by file name.

Delete a Voice Recording

1. From a Home screen, tap **Apps**  > **Samsung**  > **Voice Recorder** .
2. Tap **Recordings** , and then touch and hold on a recording to select it.
3. Tap **DELETE** > **DELETE**.


YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.

View YouTube Videos

You can use the YouTube app to view videos on YouTube even if you aren't signed in to a YouTube account.

1. From home, tap **Apps**  > **YouTube** .

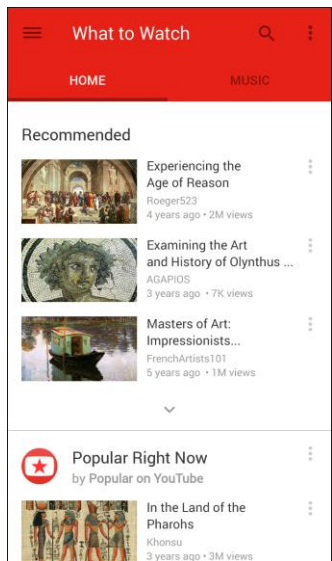


- ❖ The YouTube app launches.
2. Search through the YouTube channels and tap a video you want to see.
 - ❖ The video plays on your phone screen.
 - Tap the screen to pause or resume play while watching.

Post a Video to YouTube

You can post videos to your YouTube account from your phone. Before posting, you must set up a YouTube account and sign in to it on your phone.

1. From home, tap **Apps**  > **YouTube** .

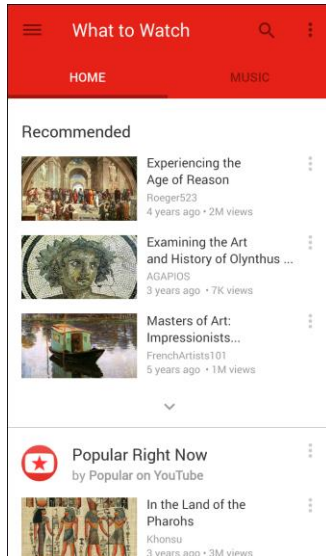

❖ The YouTube app launches.

2. Tap **Options**  > **Uploads**.



❖ The Uploads menu appears.

3. Tap **Upload**  to select a video from your phone.
 - Enter a title, description, and tags, and select a privacy setting.

4. Tap **Upload** .

❖ The video is uploaded to your YouTube channel.

1Weather

Check weather and forecasts with 1Weather: Widget Forecast Radar, which combines a groundbreaking UI with a power set of weather tools.

- From home, tap **Apps**  > **1Weather** .

Amazon

Shop Amazon.com from your phone.

- From home, tap **Apps**  > **Amazon** .

App Pass

Sprint's App Pass is a subscription service giving you unlimited access to a hand-selected catalog of premium apps and games across two devices.

1. From a Home screen, tap **Apps**  > **App Pass** .
2. Follow the prompts to install the app, and then tap **Get Started!** to subscribe to the service.

eBay

At eBay, we work hard every day to build a world-class online shopping experience on Android the eBay app is packed full of features that make it easy to browse, buy, sell, and manage your eBay experience whenever and wherever you are.

1. From a Home screen, tap **Apps**  > **eBay** .
2. Follow the prompts to update the app, and then sign in with your eBay account or register for a new account to get started.

Messaging Plus

Messaging Plus provides high quality video calling, group chat, and media sharing along with easy registration, a full emoji keyboard, and other convenient features.

- From home, tap **Apps**  > **Messaging +** .

Note: You can assign Messaging Plus as your phone's default messaging app, or as a standalone IM app. If you set Messaging Plus as the default messaging app, the Messages app will be disabled. For more information, see [Default Messaging App Settings](#).

NASCAR Mobile 2014

The NASCAR Mobile 2014 app is the official mobile app of NASCAR. Follow NASCAR news, video highlights, and immerse yourself even further into the NASCAR experience with driver stats and live leaderboards.

- From home, tap **Apps**  > **NASCAR Mobile 2014** .

NBA Game Time

Follow the excitement of the NBA Season with NBA Game Time, the award-winning, official, free app of the NBA.

- From home, tap **Apps**  > **NBA Game Time** .

NextRadio

Listen to your favorite local radio stations with NextRadio – FM radio on your smartphone! Tune in to any FM frequency in your area and listen to the radio without the buffering and cost of streaming music.

- From home, tap **Apps**  > **Next Radio** .

Note: To listen to radio from your phone, you must plug in either headphones or a speaker cable to the headphone jack on top of the phone. To listen through the phone's speaker (after plugging in headphones), tap **Menu**  > **Output to Speaker**.

Scout

Scout by Telenav is a daily personal navigator that helps you get where you're going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.

1. From a Home screen, tap **Apps**  > **Scout** .
2. Follow the prompts to update the app and customize your experience with favorite teams and more.

Note: To use Scout, you will need to have your phone's Location feature turned on. See [Location Settings](#) for information about enabling Location on your phone.

Spotify

Spotify gives you millions of songs at your fingertips. The artists you love, the latest hits, and new discoveries just for you. Hit play to stream anything you like.

1. From a Home screen, tap **Apps**  > **Spotify** .
2. Follow the prompts to update the app, and then log in to your Spotify account or sign up for a new account from your phone.

Facebook


Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Sign In to Facebook

1. From home, tap **Apps**  > **Facebook** .

– or –

From home, tap **Apps**  > **Settings**  > **Accounts** > **Add accounts** > **Facebook**.

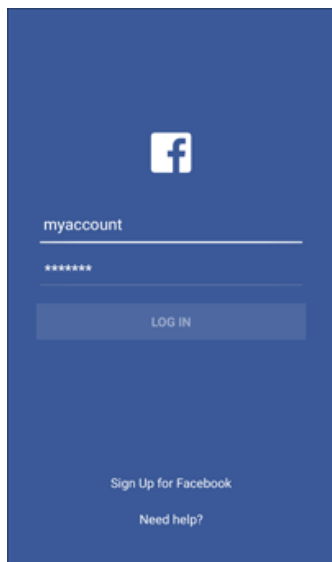

2. If you have a Facebook account, enter your user id and password, and then tap **LOG IN**.

– or –

To create a new Facebook account, tap **Sign Up for Facebook**, tap **Continue**, and then follow the instructions.

❖ You are signed in to Facebook.

Uber

Search and find transportation service using the Uber app. Request a ride and get picked up within minutes.

- From home, tap **Apps**  > **Uber** .

Connectivity

The following topics address your phone's connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, IR connectivity, and more.

Transfer Files Between Your Phone and a Computer

You can use the supplied USB connector to connect your phone directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your phone with any of the music apps, just attach your phone to the computer and copy the files to the music folder.

Data exchange may use the methods outlined in the following table:

Method	Description
Media Device (MTP)	Transfer files between your phone and PC such as pictures, videos, and music.
Camera (PTP)	Transfer picture and video files between your phone and PC.
Mass Storage Mode	Exchange data with a PC using your phone as an external storage device.

Transfer Files Between the Phone and a Computer

1. Connect your phone to your computer using the supplied USB/charging cable.



- Insert the larger end of the cable to the charger/accessory port at the bottom of the phone.

- Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging head to access it.

2. Drag the Status Bar down to display the Notification Panel.



3. You will see either **Connected as a media device** or **Connected as a camera**.

The files on your phone can now be accessed via your computer.

- For most transfers, you'll want to use **Connected as a media device**.
 - To change the option, tap the notification in the Notification Panel to open the **USB computer connection** window, and then tap the desired option.
4. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.
 5. Select **Phone** for internal phone storage.
 6. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
 7. When you are done, disconnect your phone from your computer.
 - ❖ The transferred files are now saved to your phone.

Note: You can also copy files from your phone to your computer, for example, if you want to save pictures or videos from your phone on your computer.

Wi-Fi


Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wireless Network

Use the Wireless & networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. From home, tap **Apps**  > **Settings** .

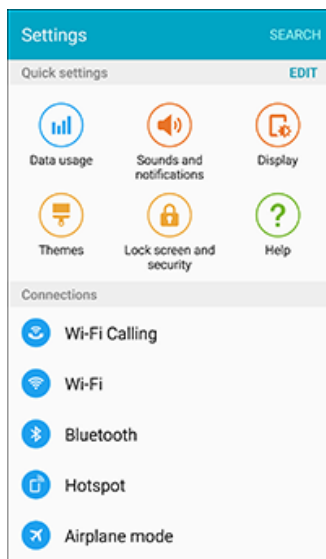


2. Tap **Wi-Fi** .



❖ The Wi-Fi settings menu appears.


3. Tap the **ON/OFF** switch to turn Wi-Fi on.

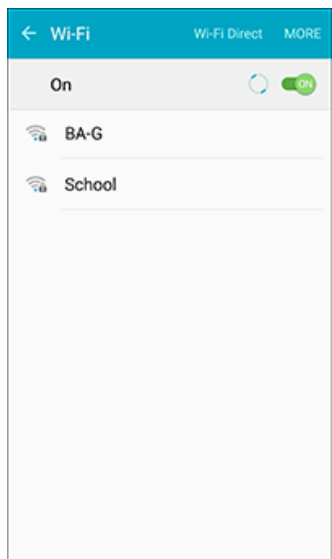

❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

- To disable Wi-Fi, tap the **ON/OFF** switch again.

4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **CONNECT**.

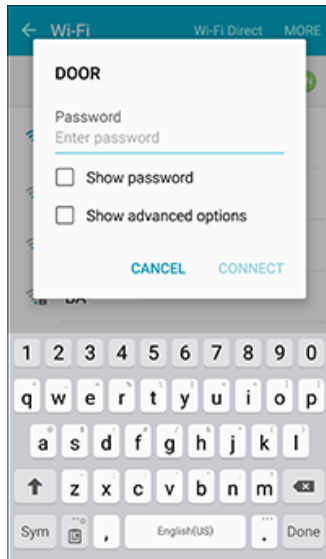


- ❖ Your phone is connected to the Wi-Fi network. You will see  in the Status Bar.
- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

Note: The next time your phone connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your phone to its factory default settings or you instruct the phone to forget the network.

Wi-Fi Settings

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. From home, tap **Apps**  > **Settings** .

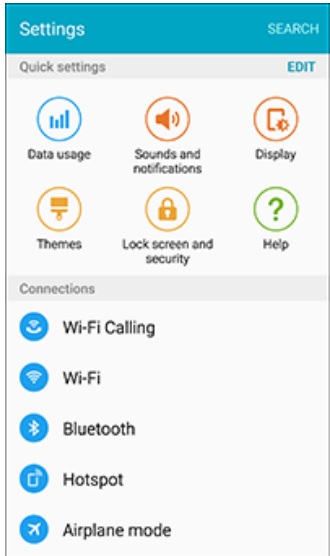

2. Tap **Wi-Fi** .




- ❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.



- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
- To disable Wi-Fi, tap the **ON/OFF** switch again.

4. Tap **MORE > Advanced**.

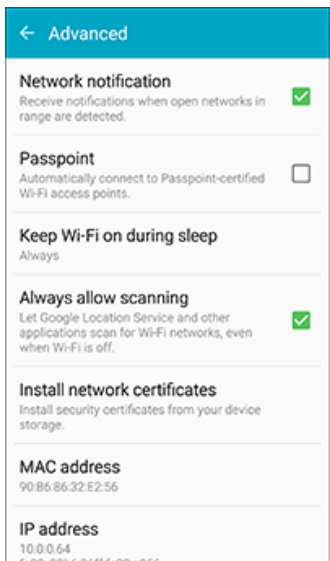


- ❖ The advanced Wi-Fi settings menu appears.
5. Configure your Wi-Fi settings.
- ❖ Your Wi-Fi settings changes are saved.


Disconnect Wi-Fi

You may want to remove a connected Wi-Fi network.

1. From home, tap **Apps**  > **Settings** .

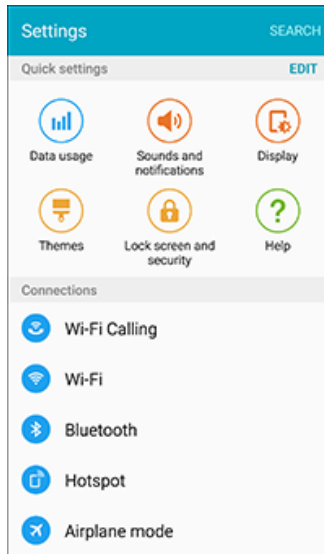


2. Tap **Wi-Fi** .

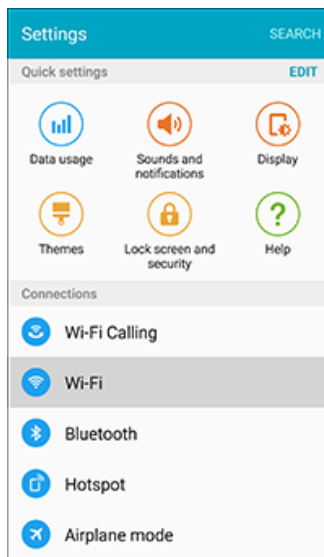

- ❖ The Wi-Fi settings menu appears.

3. Press and hold the name of the connected access point, and then tap **Forget network**.

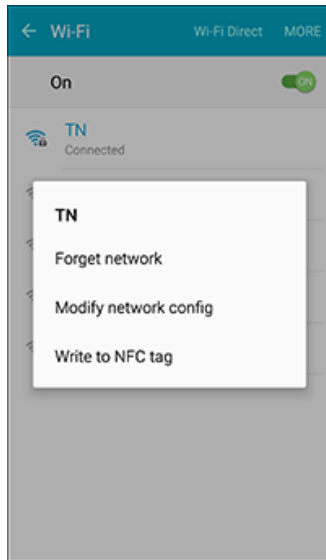


- ❖ Wi-Fi is disconnected and the network settings are removed.
- After “forgetting” an access point, you need to enter the correct password (and other network settings, if required) to reconnect.

Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices using only Wi-Fi, without a wireless access point (network) or via the Internet.

1. From home, tap **Apps**  > **Settings** .

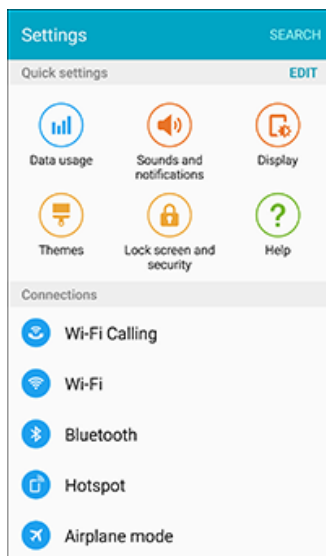

2. Tap **Wi-Fi** .




❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.




❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

4. Tap **Wi-Fi Direct**.

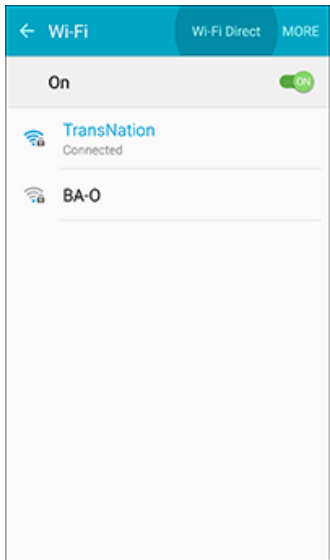

- ❖ The Wi-Fi Direct settings menu appears.
- Wi-Fi Direct and Wi-Fi are unavailable at the same time.

5. If a device is found, tap the device entry to connect.

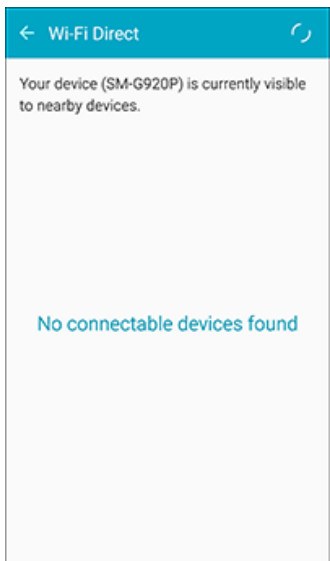

- If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.
6. Accept the connection on the other device.
- ❖ The phone is connected via Wi-Fi Direct.
 - If a connection is not accepted after a certain period, the connection request is cancelled.
 - To stop a connection, tap the device name on the Wi-Fi Direct list.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

Bluetooth Hints

Problem: I can't use Bluetooth.

Solution: Is your phone in airplane mode? Bluetooth is unavailable in airplane mode.

Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
Audio output	Listen to music, etc., wirelessly.
Hands-free calls	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
Data exchange	Exchange data with Bluetooth devices.


Enable Bluetooth

Use the settings menu to enable or disable your phone's Bluetooth capabilities.


- Wireless connection to all Bluetooth functions is not guaranteed for the phone.
- The phone may not connect properly depending on the other device.
- Noise may be experienced with wireless calls and hands-free calls depending on the conditions.

To enable Bluetooth:

1. From home, tap **Apps**  > **Settings** .

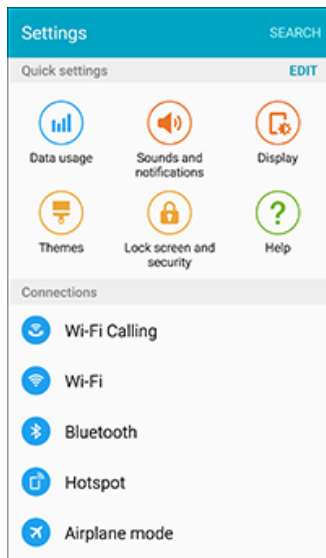


2. Tap **Bluetooth** .

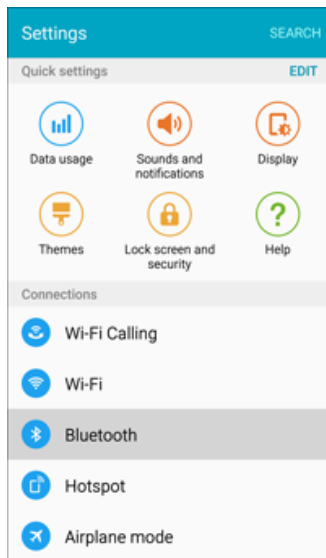

❖ The Bluetooth settings open.

3. Tap the **ON/OFF** switch to turn Bluetooth on.

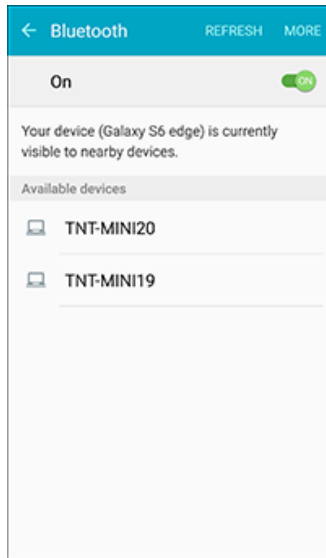

- ❖ Bluetooth is enabled.
- To disable Bluetooth, tap the **ON/OFF** switch again.

Tip: You can also turn Bluetooth on or off with the Quick settings button in the Notification Panel. Drag the Status Bar down to display the Notification Panel and then tap **Bluetooth** to turn Bluetooth on or off.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless phone is prohibited, such as aboard an aircraft and in hospitals.


Pair Bluetooth Devices

Search for and pair nearby Bluetooth devices. Saved Bluetooth devices can be connected simply.


Note: Before pairing, turn on Bluetooth on the other device and make sure it is visible or discoverable.

To pair Bluetooth devices:

1. From home, tap **Apps**  > **Settings** .

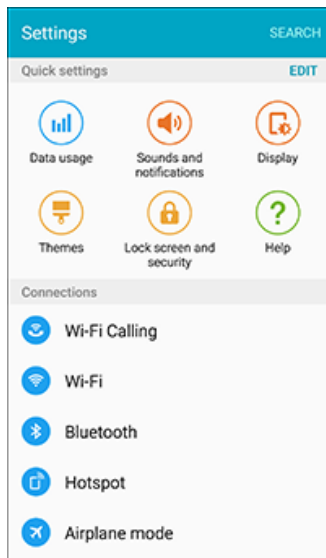


2. Tap **Bluetooth** .

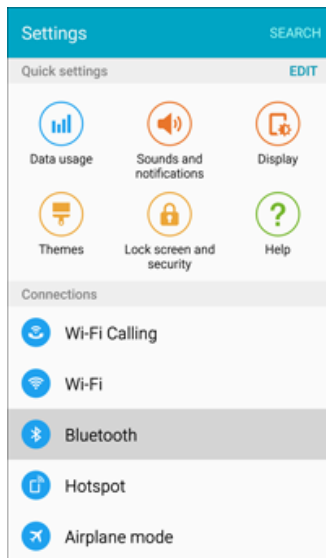

- ❖ The Bluetooth settings open.
- Nearby devices that are visible or discoverable appear in the “Available devices” list.
- If a target device is not detected, tap **REFRESH** to search again.


3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device. Methods to accept a Bluetooth connection differ depending on the device used.

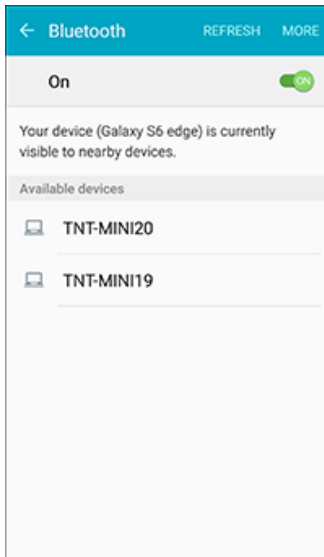

- ❖ The Bluetooth device is paired to your phone.

Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap **Settings** ⚙️ next to the paired device you wish to unpair.

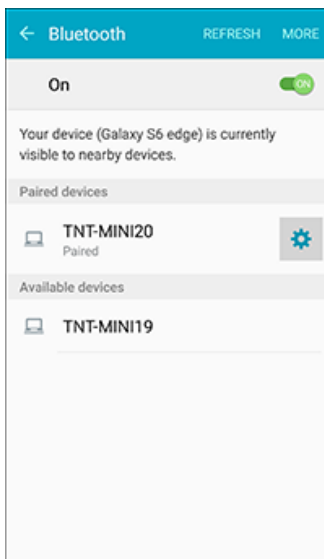


2. Tap **Unpair**.

- ❖ The device is unpaired from your phone. To make another connection with the device, you will need to pair again.


Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

1. From home, tap **Apps**  > **Settings** .

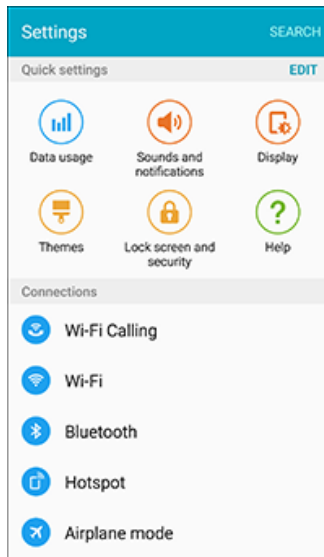

2. Tap **Bluetooth** .

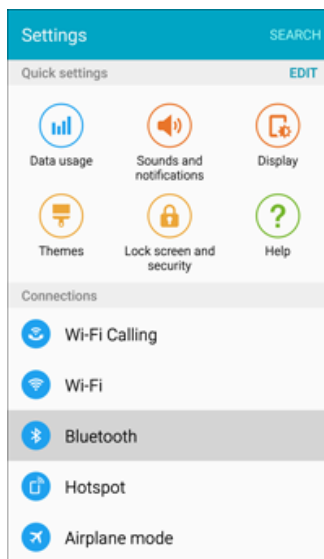

- ❖ The Bluetooth settings open.
 - Paired Bluetooth devices appear in the “Paired devices” list.
3. Tap a device from the “Paired devices” list.
 - ❖ Your phone connects to the paired device.

The pairing and connection status is displayed below the device's name in the Bluetooth devices section.

When the device is connected to your phone, the Bluetooth connected icon  is displayed in the Status Bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Share Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or notebook computer.

Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:


- Images and videos
- Calendar events
- Contacts
- Audio files

The instructions below illustrate sharing information via Bluetooth by describing how to share a contact.

Sending Contacts Data via Bluetooth


Note: Your phone must be paired with another Bluetooth-enabled device in order to send information.

1. From home, tap **Apps**  > **Contacts** .

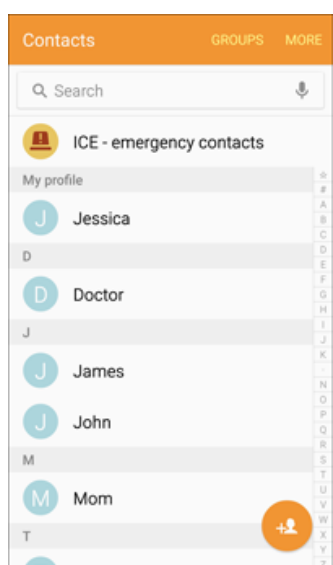


- ❖ You will see the Contacts list.


2. Tap a contact to send.

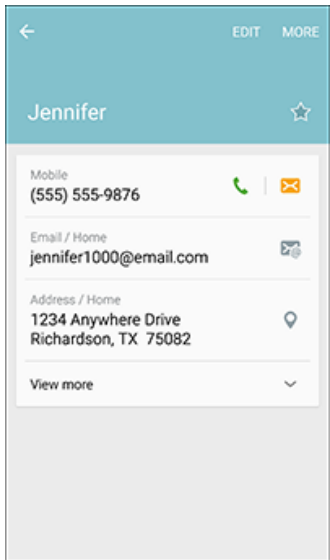

3. Tap **MORE** > **Share name card** > **Bluetooth**.

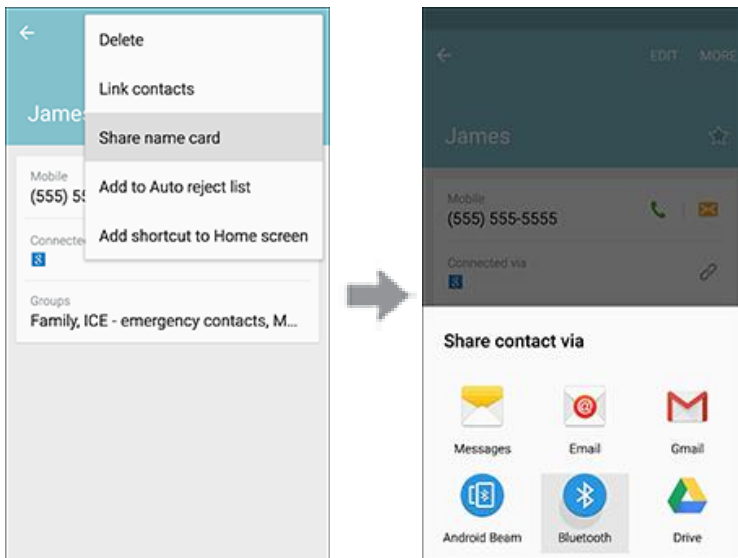

4. Tap a paired device to receive the data.

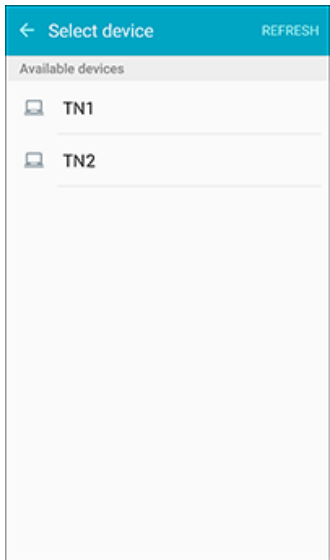


- ❖ The contact information is sent.
- If you see a message to confirm, follow the onscreen instructions.

Receiving Data via Bluetooth

Note: Your phone must be paired with another Bluetooth-enabled device in order to send information.

1. When another device attempts to send a file to your phone via Bluetooth, you will see a request to accept the file.

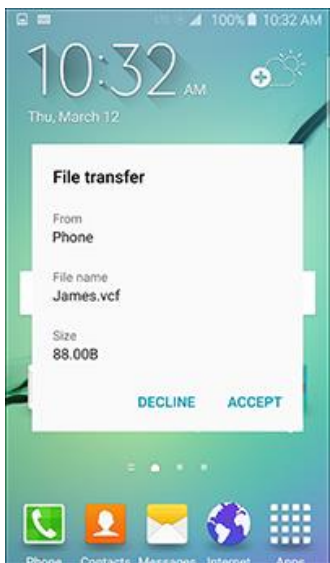

2. Tap **ACCEPT**.

- ❖ The file is sent to your phone.

- When your phone receives a file, you will see a notification. To open the file immediately, drag the Status Bar down to display the Notification Panel, and then tap the notification.
- When you open a received file, what happens next depends on the file type:
 - Media files and documents are usually opened directly in a compatible application.
 - For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
 - For a vCard contact file, received contacts are stored in the Contacts list.

Sprint Worldwide Wireless Service

With your phone and global roaming service from Sprint Worldwide Wireless Service, you can make phone calls and use wireless data services around the globe on compatible CDMA and GSM/UMTS networks. For a country-specific travel guide, select your phone and destination from sprint.com/traveltips.

Get Information for Sprint Worldwide Service

View contact information for Sprint Worldwide.

- From a Home screen, tap **Apps**  > **Sprint Worldwide** .

Activate Sprint Worldwide Service on Your Account

Before using your phone in global roaming mode, you must activate Sprint Worldwide service.

To activate Sprint Worldwide service:

- Chat with or email an international support rep by visiting sprint.com/swwsupport.

– or –

Call Sprint Worldwide Customer support at **1-888-226-7212**.

Your Phone's SIM Card for International Roaming

Your phone comes with a preinstalled SIM (Subscriber Identity Module) card to support roaming on compatible GSM networks.

Note: Your SIM card should be preinstalled. If you need to reinstall your SIM card, follow these instructions. The SIM included contains information specific to your phone and should be retained with the phone for use on GSM networks.

1. Insert the removal tool into the hole on the SIM tray, and push until the tray pops out.



2. Place the SIM card on the tray, and slide the tray back into the slot.

Caution: Make sure that the card's gold contacts face down into the device and that the card is positioned as shown.

Set Network Mode Options

In order to roam internationally on different types of network technology (CDMA/LTE and GSM/UMTS), you may need to set your phone's network mode to allow use of a specific technology. Once set, your phone is designed to enter global roaming mode automatically when you activate your Sprint Worldwide service, meaning that it should automatically connect to an appropriate CDMA/LTE or GSM/UMTS network when you travel.

To set your network mode options manually:

1. From a Home screen, tap **Apps**  > **Settings**  > **Mobile networks**
2. Tap **Network mode** to configure options:
 - To allow connections to CDMA or LTE networks only, tap **CDMA** or **LTE/CDMA**.
 - To allow connections to GSM or UMTS networks only, tap **GSM/UMTS**.
 - To allow connections to available CDMA/LTE or GSM/UMTS networks, tap **Automatic**. This is the recommended setting for international use.

Make and Receive Worldwide Calls

When travelling on international networks, you can place and answer calls as you would on the Sprint network (see [Place and Answer Calls](#)), although some additional instructions may be required to place a call. Some features and services are not available in all countries. For more information on services that are available while roaming, visit sprint.com/swv.

Make Calls Using Plus (+) Code Dialing

Placing calls from one country to another country is simple with the Plus (+) Code Dialing feature. When placing international calls, you can use Plus Code Dialing to enter the appropriate international access code for your location (for example, 011 for international calls placed from the United States).

Note: Plus Code Dialing is only available when roaming internationally on GSM networks and on certain CDMA networks in the United States, Canada, and the Caribbean.

Note: International access codes and dialing information are available online at sprint.com/sww.

To use Plus Code Dialing to place an international call:

1. From a Home screen, tap **Phone**  to display the phone screen.
2. Dial the appropriate sequence for your location:
 - If you are on the GSM network, touch and hold  to insert a “+” on the dialer screen. (The “+” symbol automatically inserts the international access code for the country from which you are calling.)
 - If you are on the CDMA network outside Canada or the Caribbean, enter the international access code for the country from which you are calling.
3. Tap  to insert the US country code, and then enter the area code and number.
4. Tap  to place the call.

Sprint International Voicemail Service

Your Sprint voicemail will follow you as you travel. All of your unanswered calls will be forwarded to your Sprint voicemail. You will need to be sure your voicemail box is already set up and that you know your voicemail password.

Note: Sprint voicemail may not be available on all networks; check sprint.com/sww for service information.

International Voicemail Troubleshooting

There are a few tips to keep in mind when using Sprint voicemail while traveling.

- Some carriers may not support voicemail indicators. It may be necessary to call your voicemail to see if you have any new messages.
- If you hear the message “Please enter the number of the subscriber you wish to call,” enter your 10-digit wireless phone number.

Set Up Your Voicemail Access Number for International Use

To simplify accessing your Sprint Voicemail while travelling, you can set up your voicemail access number as a Contacts entry. Save the voicemail access number with the international dialing code to make it faster and easier to access your messages while roaming internationally.

1. From a Home screen, tap **Apps**  > **Contacts** .
2. Tap  to add a contact.
3. If you have accounts set up on your phone, tap a storage account.
4. Enter a name for the new contact, for example, "Voicemail".
5. Touch and hold , and then tap (+1), your area code, and your wireless phone number.
6. Tap **SAVE**.

Access Your Voicemail Internationally

You will need to call your voicemail number to access your voicemail while roaming internationally.

New Message Indicators

Your voicemail message indicators may be displayed differently when roaming internationally.

- A "Message Waiting" indicator icon or a text message is displayed when a voicemail message is received.
- You may see "Missed Call" on your screen prior to receiving a message notification.
- You must call voicemail in order to retrieve messages. Follow the instructions on the previous page to store your voicemail number for easy access.

Retrieve Voicemail Messages

The voicemail retrieval process while travelling is the same as on the Sprint Network; however, you will be required to enter your voicemail password.

To retrieve your voicemail messages:

1. From a Home screen, tap **Phone**  > **Contacts** tab, tap the voicemail entry and then tap the number to call it.
2. When your voicemail answers, tap , enter the password, and tap to access your voicemail.

International Data Roaming

Sprint Worldwide Wireless Service can also keep you connected via email and Web browsing when travelling in countries in which Sprint offers data service. Data services are available on both CDMA and GSM/UMTS networks. Check sprint.com/swv to determine the services available where you are travelling.

Note: Prior to using your Sprint Worldwide GSM/UMTS Data Services, you must establish and utilize your CDMA data services domestically on the Sprint Network.

Get Started with Sprint Worldwide Data Services

To use Sprint Worldwide Data Services, you will need to have these services activated on your account.

- To activate, call Sprint Worldwide Customer Support at **1-888-226-7212**. Representatives are available 24 hours a day, 7 days a week to assist you.

Access Email and Data Services Internationally on GSM/UMTS Networks

To access your email and browse the Web when travelling, you may need to manually select the carrier that provides Sprint service in your location. You can find a list of carriers for each country where GSM data service is offered at sprint.com/swv. Follow the instructions below to select the appropriate carrier network on your phone.

To select a GSM data service carrier for a specific country:

1. From a Home screen, tap **Apps**  > **Settings**  > **Mobile networks**.
2. Tap **Network mode**, and then change the preferred network mode to **Automatic**.

Access Email and Data Services Internationally on CDMA Networks

If data service is available on a CDMA network, then you only need to set the phone to CDMA, you will not need to select the specific carrier. Selecting a specific carrier is only necessary for providers on the GSM network. If your phone has automatically selected a GSM network while traveling, then you will need to set the phone to CDMA to access CDMA data services. (See [Set Network Mode Options](#).) Visit sprint.com/swv for a list of services available in each country.

International Roaming Status Messages

You may receive status messages under certain conditions. Before contacting Sprint Worldwide Customer Support, note the message, numeric code, and the conditions under which it appeared. The following table lists and describes the status messages.

Status Messages	Message Description
Number Not in Service	The number that you entered is not valid.
User Not Available	The phone that you called is either busy, out-of-range, or turned off. Please try again later.
User Not Authorized	The phone that you called is either busy, out-of-range, or turned off. Please try again later.
Please Try Later	This service is temporarily not available. Please try again later.
Service Restricted	Service may not be activated properly. Please contact Sprint Customer Service to report the issue for resolution.
Service Not Available	This feature is not available on the current network.
Emergency Calls Only	Either the service is not activated properly or the current network is available for emergency calling only. Adjust your network settings to check for other available networks. If service is still not available after adjusting the settings, contact Sprint Customer Service to report the issue for resolution.
System Busy. Try Later	The system is experiencing heavy traffic. Please try again later.
Service Conflict	This service cannot be enabled because an incompatible service has already been turned on.
Please Try Again	An error occurred. Note the error code and try again.
Self Check Error	A fault was detected with your phone. If this error recurs, note the error and contact Sprint Customer Service.
Self Check Fail	An operational fault was detected with your phone. Note the numeric code, turn your phone off, and contact Sprint Customer Service.

Status Messages	Message Description
Wrong PIN	You have entered an incorrect SIM PIN number. You have only three attempts to enter your PIN. After a third unsuccessful attempt, your phone will be locked and you will have to call Sprint Customer Service to have it unlocked. Sprint sets the default to PIN off; if you elect to enable the PIN then you will need to contact Sprint for the default PIN and PUK.
PIN Blocked. Call Your Provider	An incorrect SIM PIN was entered three consecutive times. You will be unable to send or receive calls on your phone. Contact Sprint Customer Service to obtain the PIN Unblocked Key (PUK) code. Sprint sets the default to PIN off; if you elect to enable the PIN then you will need to contact Sprint for the default PIN and PUK.
Insert SIM	Your SIM Card is not being detected. Please check to ensure that you have inserted the SIM Card.
Check SIM Card	Please check your SIM card to make sure it is properly inserted.

Contact Sprint for Assistance with International Service

If you experience any issues with voice or data services while outside of the United States, Sprint offers customer support 24 hours a day. In the event that you do experience an issue, try the following actions:

- First try powering your phone off and then back on; this will force your phone to reregister with the network.
- Try manually selecting another network. Information for selecting networks can be found in the phone guide.

If neither of these actions resolves your issue, you will need to contact customer service (see below). When calling to report an issue, the following information will be beneficial in trying to resolve your issue as quickly as possible:

- Your wireless phone number.
- The city and country you are travelling in.
- Any error message that displays on your phone or that you heard when trying to place a call.
- If the issue is with data, were you able to place voice calls?
- If the issue is with voice service, were you able to access data?

Please call the numbers below if you need assistance:

While in the United States: Call **1-888-226-7212**.

While traveling outside the United States:

- **In GSM mode:** Touch and hold , and then dial **1-817-698-4199**.
- **In CDMA mode:** Enter the country code, and then dial **1-817-698-4199**.

There is no charge for this call from your wireless phone.

From a landline phone when outside the United States:

Sprint Worldwide Customer Support can be reached from a landline phone at **1-817-698-4199**. Access or connection fees may apply. The toll free numbers below can also be used to contact Sprint Worldwide Customer Support in the following countries:

Country	From Landline Phone
Caribbean (Anguilla, Barbados, Cayman Islands, and Dominica)	1-888-226-7212
France	0800-903200
Germany	0800-180-0951
Italy	800-787-986
Mexico	001-877-294-9003
Trinidad and Tobago	1-800-201-7545
United Kingdom	0808-234-6616

Note: This toll free service is available on ordinary landline phones and some public pay phones. This service does not cover any hotel access charges.

Settings

The following topics provide an overview of items you can change using your phone's **Settings** menus.

Basic Settings

From the Home screen, tap **App**  > **Settings**  to access your phone's settings menu.

The table below outlines the top-level settings categories.

Category	Description
Wi-Fi Calling	Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.
Wi-Fi	Enable and set Wi-Fi options.
Bluetooth	Enable Bluetooth connections.
Hotspot	Use the Hotspot feature to share your phone's data connection with other devices via Wi-Fi.
Airplane mode	Turn Airplane mode on or off.
Data usage	Check your phone's data usage.
Mobile networks	View and configure your mobile network connections and settings.
NFC and payment	Enable Near-Field Communication (NFC) functions, including Tap and pay services.
More connection settings	Set wireless and network functions, including selecting a default messaging app, printing services, and setting up a Virtual Private Network (VPN).
Sounds and notifications	Set ringtone, operation tones, etc.
Display	Set display features, font, brightness, etc.
Edge screen	Set options for the Edge screen.
Motions and gestures	Enable phone controls by using motions and gestures.
Applications	Manage applications, default apps, and system processes.


Category	Description
Wallpaper	Set wallpaper for the Home and Lock screens.
Themes	Select visual themes for your phone.
Lock screen and security	Set your phone's Lock screen options. Set security features such as device administrators, encryption, and trusted credentials.
Privacy and safety	Configure privacy and safety features, including location method and emergency messaging.
Easy mode	Enable Easy mode for your phone, simplifying the layout and interface.
Accessibility	Set accessibility options such as screen magnification, hearing aid compatibility, etc.
Accounts	Set up accounts such as Samsung, Google, and more.
Backup and reset	Set up backup options for your phone, as well as resetting the phone to its factory defaults.
Language and input	Set up language and input methods for your phone.
Battery	Display the battery charge as a percentage on the Status Bar, view battery usage by application and system process, and configure power saving modes.
Storage	View total and available system memory.
Date and time	Set your phone's date and time.
Help	View tips and guidelines for using your phone.
Activate this device	Activate your device with the Sprint network.
System update	Update your system's software, PRL, and Profile.
About device	View device status, legal information, and hardware information about your device.

Access Settings

- From home, tap **Apps**  > **Settings** .

— or —

Slide the Status Bar down to open the Notification Panel, and then tap **Settings** .

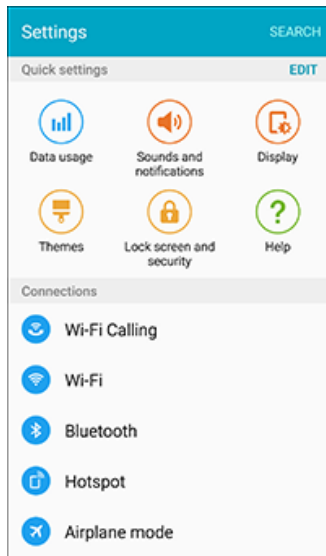


- ❖ The settings menu opens.

Configure Settings


At the top of the main settings menu is a section of Quick settings. You can include up to nine primary settings options in the Quick settings menu.

To customize Quick settings:

1. From home, tap **Apps**  > **Settings** .

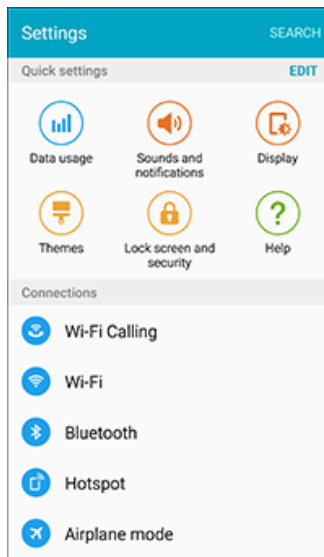

2. Tap **EDIT**.

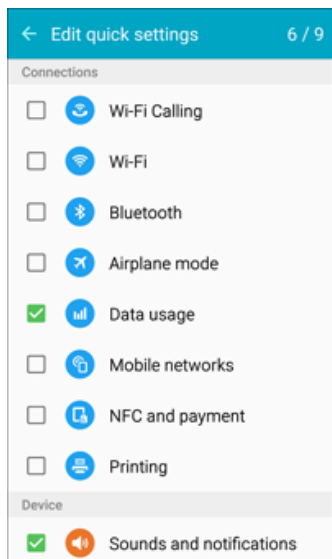


3. Check or uncheck options to include in Quick settings. The counter at the top right corner indicates how many items have been selected out of the maximum of 9.
4. Tap the **Back** key  to return to the main settings menu.


Wi-Fi Calling Settings

Wi-Fi Calling uses Wi-Fi networks to help improve voice and data coverage. It sends and receives calls and text messages over a Wi-Fi network and may offer better coverage in buildings and areas of poor cellular reception.

1. From a Home screen, tap **Apps**  > **Settings** .

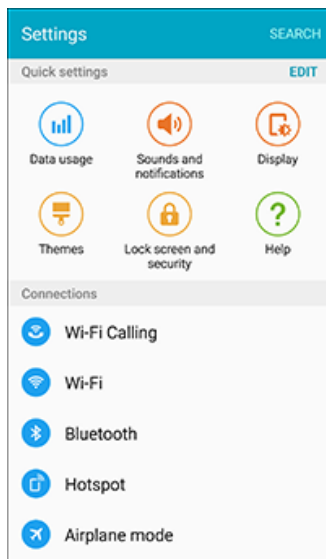

2. Tap **Wi-Fi Calling**  and follow the prompts to set up Wi-Fi Calling.

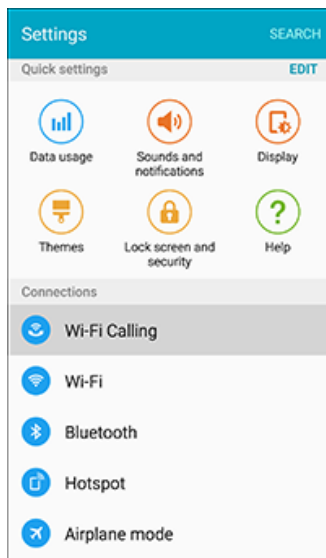


❖ Wi-Fi Calling is set up.

- You will see the Wi-Fi Calling icon  in the Status Bar when Wi-Fi Calling is active and you are connected to a saved Wi-Fi network.


- If Wi-Fi calling is enabled and you are not in range of a saved Wi-Fi network, you'll see the Wi-Fi Calling disconnected icon  in the Status Bar.

Disable Wi-Fi Calling

1. From a Home screen, tap **Apps**  > **Settings** .

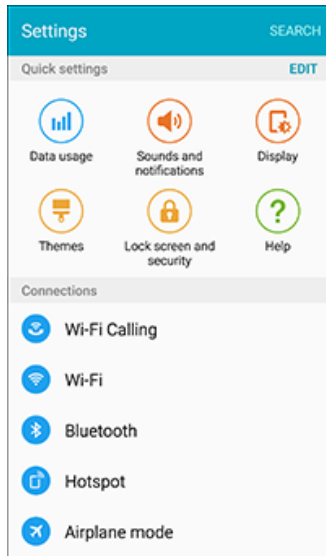

2. Tap **Wi-Fi Calling**  and then tap the **ON/OFF** switch to turn Wi-Fi Calling off.

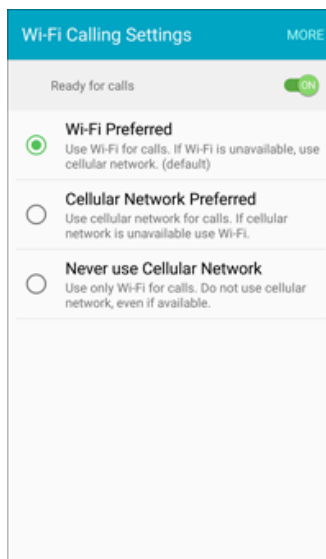


Wi-Fi Settings Menu


The Wi-Fi settings menu lets you turn Wi-Fi on or off, set up and connect to available Wi-Fi networks, and configure advanced Wi-Fi options.

For more information about using Wi-Fi, see [Wi-Fi](#).

1. From home, tap **Apps**  > **Settings** .

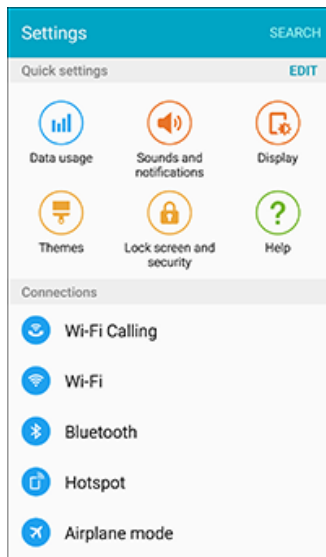


2. Tap **Wi-Fi** .

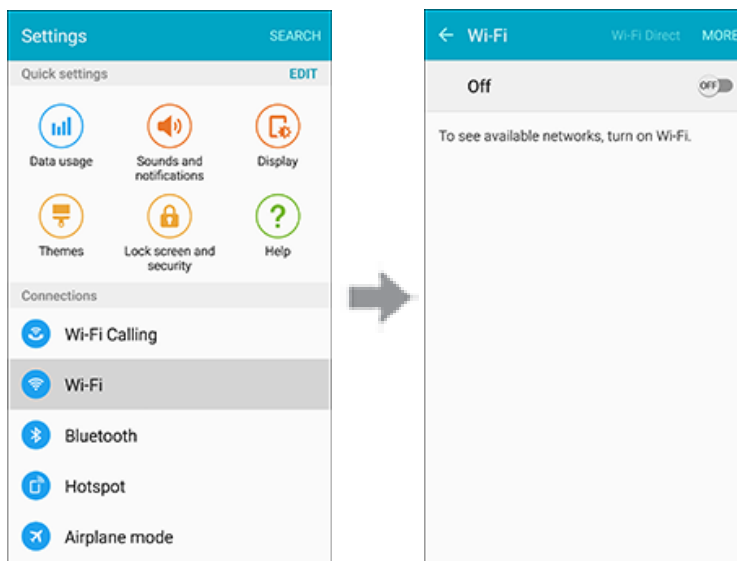


- ❖ The Wi-Fi settings menu appears.

3. Tap the **ON/OFF** switch to turn Wi-Fi on.

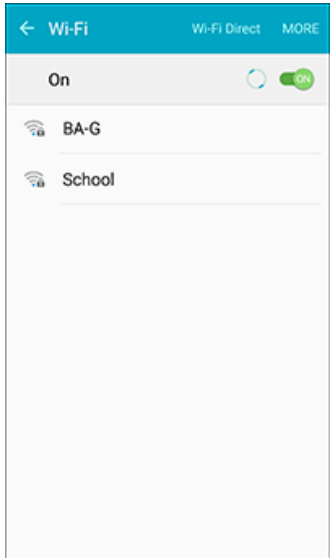

- ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
- To disable Wi-Fi, tap the **ON/OFF** switch again.

4. Tap a Wi-Fi network, enter the password, and tap **CONNECT**.

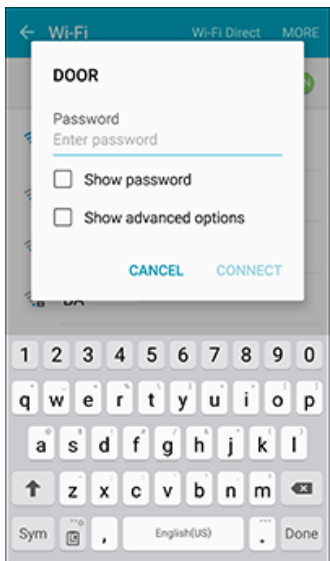

- ❖ Your phone is connected to the selected Wi-Fi network.
- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

Connect to a Wi-Fi Network via WPS

Wi-Fi Protected Setup (WPS) is a network security standard that allows you to easily secure a wireless network connection between your phone and a router.

To connect using a WPS button:

1. From Wi-Fi settings, tap **MORE > WPS push button**.
2. Tap the WPS button on your router.
3. Follow the prompts to complete the connection.

To connect using a Personal Identification Number (PIN):

1. From Wi-Fi settings, tap **MORE > WPS PIN entry**.
2. Enter the PIN displayed on your router.
3. Follow the prompts to complete the connection.

Smart Network Switch

Smart network switch lets your phone automatically switch to the wireless network data connection when the current Wi-Fi connection is unstable.

1. From the Wi-Fi settings menu, tap **MORE > Smart network switch**.
2. Tap **On** to enable the feature.

Advanced Wi-Fi Settings


The advanced Wi-Fi settings menu lets you set up and manage wireless access points.

- **Enable Notification When Open Networks Are Available:** From Wi-Fi settings, tap **MORE > Advanced > Network notification**.
 - The setting is available when Wi-Fi is turned on.
 - Tap **Network notification** to turn the option on or off.
- **Passpoint:** Automatically connect to Passpoint-certified Wi-Fi access points.
- **Set Timing for Pausing a Connection:** From Wi-Fi settings, tap **MORE > Advanced > Keep Wi-Fi on during sleep** and then select a setting.
- **Allow Background Scanning for Wi-Fi Networks (Even When Wi-Fi Is Turned Off):** From Wi-Fi settings, tap **MORE > Advanced > Always allow scanning** to turn the option on or off.
- **Install Network Security Certificates:** From Wi-Fi settings, tap **MORE > Advanced > Install network certificates** and select a certificate.
- **Check MAC Address:** From Wi-Fi settings, tap **MORE > Advanced**.
 - MAC Address appears below “MAC Address.”
- **Check IP Address:** From Wi-Fi settings, tap **MORE > Advanced**.
 - IP Address appears below “IP Address.”


Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth usage, see [Bluetooth](#).

1. From home, tap **Apps**  > **Settings** .

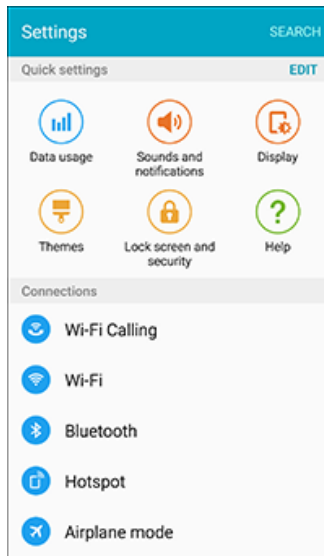

2. Tap **Bluetooth** .

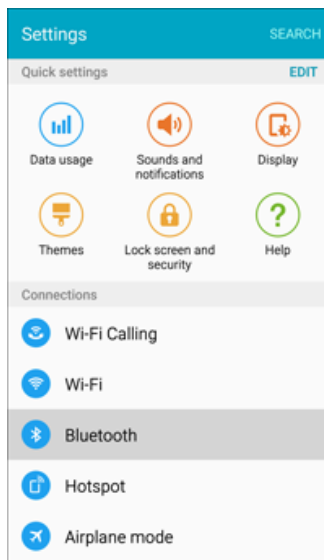

- ❖ The Bluetooth settings open.

Bluetooth Settings Operations

- **Enable Bluetooth:** In Bluetooth settings, tap the **ON/OFF** switch to enable.
 - When enabled, confirmation appears for your phone to be discoverable by other devices. Follow the onscreen instructions.
- **Pairing Bluetooth Devices:** Make sure the other devices are set to be discovered. From Bluetooth settings, tap the device name in “Available devices” and follow the onscreen instructions.
 - Depending on the device, you may be required to enter or accept a passkey.
 - If the target device does not appear, tap **REFRESH** to search again.
 - This setting is available when Bluetooth is enabled.
- **Change the Name of a Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, tap **Rename**, enter a new name, and tap **RENAME**.
 - Emoji cannot be used in a device name.
 - This setting is available when Bluetooth is enabled.
- **Cancelling Pairing:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap **Unpair**.
 - This setting is available when Bluetooth is enabled.
- **Enable Service from Paired Device:** From Bluetooth settings, tap **Settings**  next to a paired device name, and then tap the listing under **Use for**.
 - If a confirmation prompt appears, follow the onscreen instructions.
 - This setting is available when Bluetooth is enabled.
 - This setting is available when the paired device is providing a service.
 - Tap the **ON/OFF** switch to turn the option on.
- **Search for Other Devices:** From Bluetooth settings, tap **REFRESH**.
 - This setting is available when Bluetooth is enabled.
- **Check Files Received via Bluetooth Transfer:** From Bluetooth settings, tap **MORE > Received files**, and follow the onscreen instructions.

Hotspot Settings


Use the Hotspot feature to share your phone's data connection with other devices via Wi-Fi.

Note: Using the Hotspot feature consumes battery power and uses data services


Turn Hotspot On or Off

To conserve battery life, turn Hotspot on when you need it and turn it off when you are finished. You can control Hotspot from Settings.

1. From home, tap **Apps**  > **Settings** .

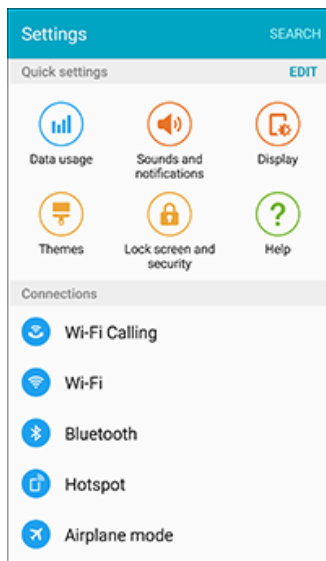

2. Tap **Hotspot** .

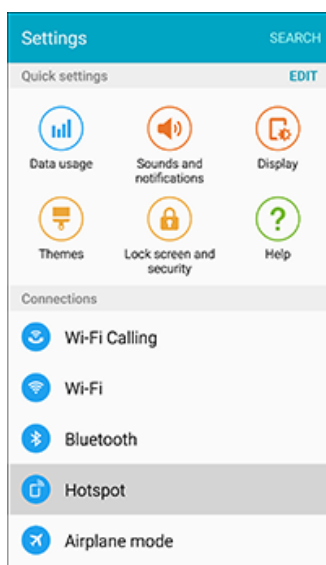

- ❖ The Hotspot settings open.


3. Tap the **ON/OFF** switch to turn Hotspot on or off.

Note: Turning on Hotspot will turn off Wi-Fi.


Configure Hotspot

Set up Hotspot to your preferences.

1. From home, tap **Apps**  > **Settings** .

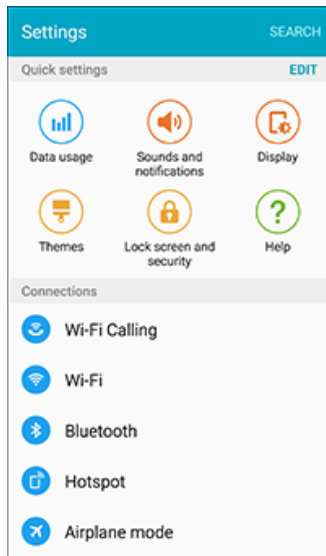

2. Tap **Hotspot** .

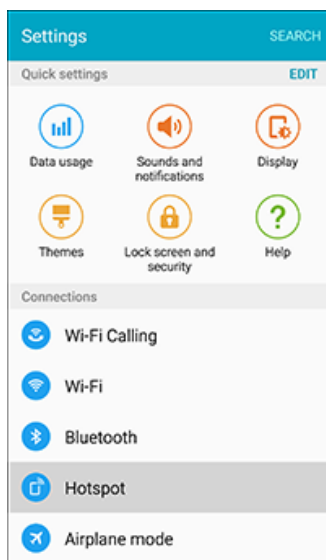

3. Tap **MORE** to set these options:

- **Configure Hotspot:**


- **Network name:** View and change the name of your mobile hotspot.
 - **Hide my device:** When enabled, your mobile hotspot is not visible to other Wi-Fi devices during a scan. Other devices can still connect to your mobile hotspot, but will have to set up the connection manually with your Network SSID and Password.
 - **Security:** Choose the security level for your Mobile Hotspot.
 - **Password:** If you choose a security level that uses a password, set a password.
 - **Show password:** When enabled, the contents of the Password field are visible.
 - **Show advanced options:** When enabled, you can access advanced options, including Broadcast channel, to specify the channel your device uses for Hotspot, and you can set the maximum number of connections to your Hotspot.
- **Timeout settings:** Choose a time period, after which Hotspot will automatically turn off if there is no activity.
 - **LAN settings:** View and configure settings related to using your Hotspot as a Local Area Network.
 - **IP address:** View the default IP address, or tap to enter a valid IPv4 address.
 - **Subnet mask:** View the default subnet mask, or tap to enter a subnet mask.
 - **DHCP:** Tap to enable or disable DHCP. When DHCP is enabled, your phone assigns IP addresses to devices that connect to Hotspot.
 - **Starting IP:** When DHCP is enabled, view the default starting IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your phone assigns will be between the Starting IP and Ending IP.
 - **Ending IP:** When DHCP is enabled, view the default ending IP address for assigning IP addresses to connecting devices, or enter a valid IPv4 address. When other devices connect to your device using DHCP, the IP address your phone assigns will be between the Starting IP and Ending IP.
 - **Lease time:** When DHCP is enabled, set a length of time a connected device may use an assigned IP address.
 - **Maximum DHCP users:** When DHCP is enabled, set the maximum number of devices allowed to connect to your Hotspot.

Allowed Devices


Control whether devices can connect to your Mobile Hotspot with the Allowed devices list. After you add devices to the list, they can scan for your phone and connect using your phone's Hotspot name and password.

Note: Using the Hotspot feature consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings** .

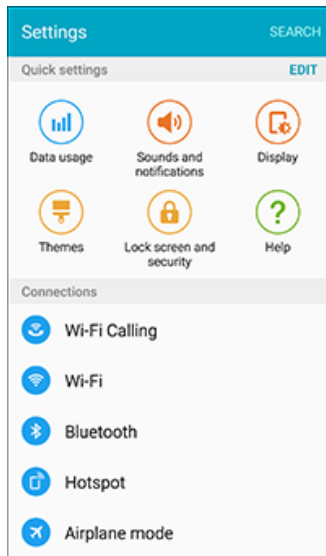

2. Tap **Hotspot** .

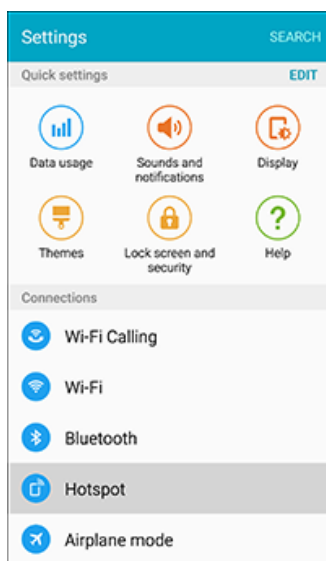

3. Tap **MORE** > **Allowed Devices**.

4. Tap **ADD**, and then enter the other device's **Device name** and **MAC address**. Consult the other device's settings to find these details.
5. Tap **OK** to add the device to the Allowed devices list.


Airplane Mode

When you enable Airplane mode, your phone disconnects from all networks, meaning you cannot use make calls, send or receive messages, or access the Internet. It also turns off other connectivity features, such as Wi-Fi and Bluetooth.


While in airplane mode, you can use other features of your phone, such as playing music, watching videos, or other applications.

To use Wi-Fi and Bluetooth after enabling Airplane mode, turn them on either in Settings or on the Notification Panel.

1. From home, tap **Apps**  > **Settings** .

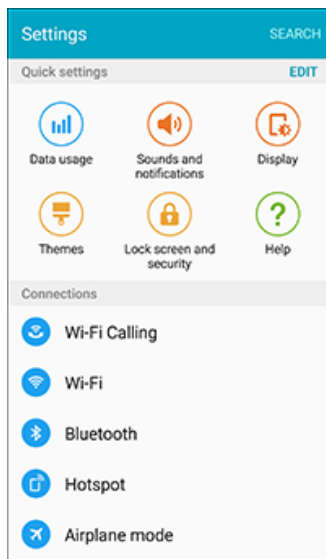

2. Tap **Airplane mode** .

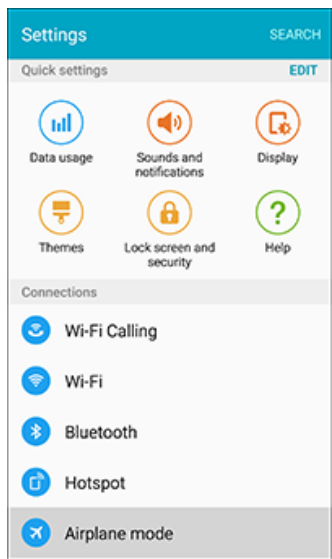

3. Tap the **ON/OFF** switch to enable Airplane mode.




Note: You can also enable or disable Airplane Mode through the Notification Panel quick settings (drag down the Status Bar and tap Airplane mode), or through the **Power** key (press and hold the **Power** key and then tap **Airplane mode**).


Data Usage Settings

The Data usage menu lets you view your phone's mobile and Wi-Fi data usage, set data limits, restrict hotspot usage, and more.

1. From home, tap **Apps**  > **Settings** .

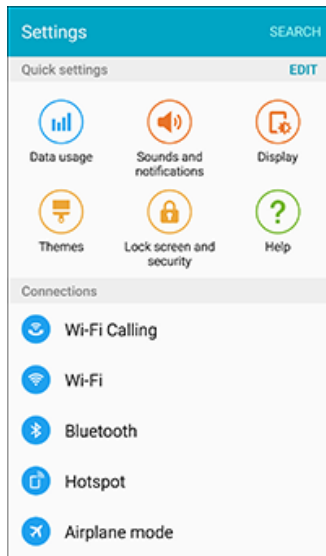

2. Tap **Data usage** .

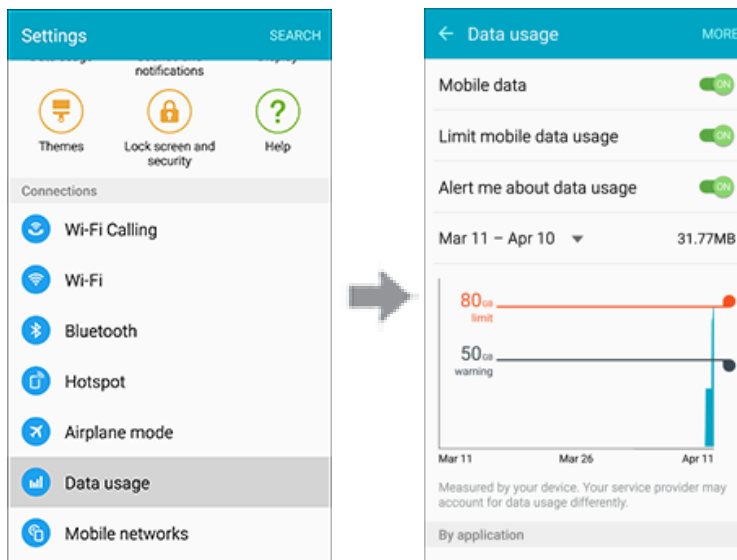

- ❖ The data usage window opens.

Data Usage Settings Operations


- **Enable Mobile Data:** Tap the **ON/OFF** switch next to Mobile data.
- **Set Amount for Alert When Data Usage Increases:** Tap the **ON/OFF** switch next to Alert me about data usage, and then drag the horizontal warning slider up and down to set an amount.
 - Data usage amounts are approximate. Actual amounts may differ.
 - This setting is available when Mobile data is enabled.
- **Enable Restrictions on Mobile Data Usage:** Tap the **ON/OFF** switch next to Limit mobile data usage, and then drag the horizontal limit slider up or down to set the data usage limit.
 - This setting is available when Mobile data is enabled.
- **Set Dates for Resetting Data Usage:** Tap the date range to set the data usage measuring cycle.
 - This setting is available when Mobile data is enabled.
- **Check Data Usage for Each Application:** Tap an app name to see its usage for the period.
- **Enable Restriction on Mobile Data in Background:** Tap **MORE > Restrict background data > OK**.
 - The availability of roaming services is dependent on your service plan. Check with your carrier and service plan for details.
 - This setting stops some apps and services from working unless your phone is connected to a Wi-Fi network.
 - This setting is available when Limit mobile data usage is on.
- **View Both Mobile Data and Wi-Fi Usage:** Tap **MORE > Show Wi-Fi usage**.
 - When Show Wi-Fi usage is enabled, you will see a Wi-Fi tab at the top of the Data usage window. Tap the tab to view your phone's Wi-Fi data usage.
- **Restrict networks:** Restrict background apps from using selected Mobile Hotspots. You can also set apps to warn you before using these networks for large downloads.

Mobile Networks Settings



The Mobile networks settings menu allows you to configure your mobile network connections.

Set options for network selection and data service.

1. From home, tap **Apps**  > **Settings** .

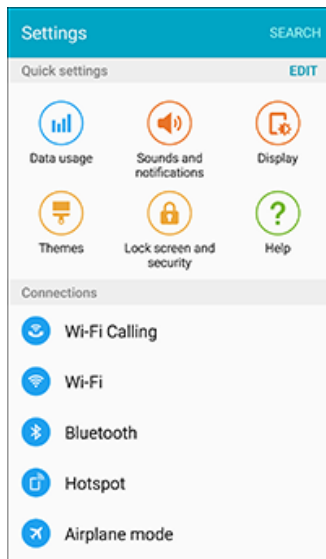

2. Tap **Mobile networks** .

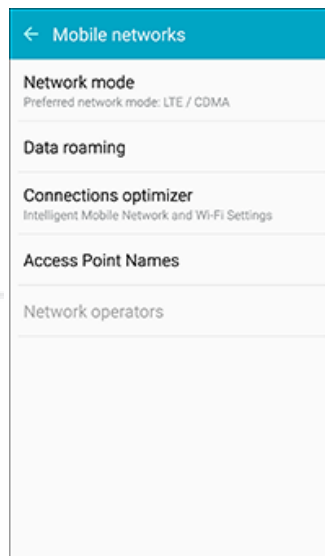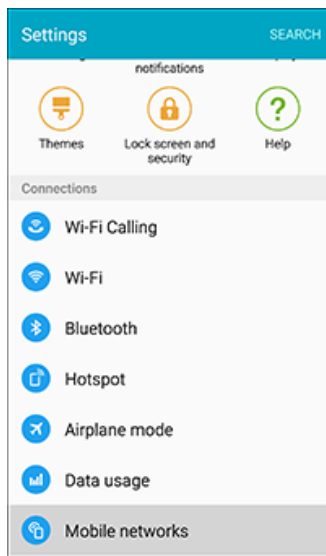

3. Configure options:


- **Network mode:** Choose a preferred network mode. Available options depend on your phone's features, but may include: CDMA, LTE/CDMA, GSM/UMTS, and Automatic (the recommended setting).
- **Data roaming:** When you are outside your home network area, your phone can still connect to other networks that your provider supports via roaming. There may be additional costs for accessing networks while roaming, so you may want to control your phone's roaming behavior with Roaming settings.
 - **Roaming network:** Select a roaming default. Choose **Home only**, to only connect to the Sprint network, or **Automatic** to allow connections to Sprint's partner networks, when available.
 - **Roaming guard:** Choose options for displaying an onscreen roaming notice for certain functions. Enable or disable roaming notices for Voice and Data for Domestic CDMA, Voice, Data and Outgoing text message for International CDMA networks, and Voice, Data and Outgoing text message for GSM networks (if supported by your phone).
 - **Roaming Settings:** Choose options for roaming, including Voice and Data for Domestic CDMA and International CDMA networks, and Data for GSM networks (if supported by your phone).
- **Connections optimizer:** Connections optimizer helps you manage and enhance your data experience by finding and connecting to "remembered" Wi-Fi networks, and, if applicable, the Enhanced LTE Network. Remembered networks are those to which you have already connected.
 - **Connections Optimizer:** Automatically select the best mobile networks.
 - **Partner Wi-Fi:** Automatically connect to Partner Wi-Fi Hotspots.
 - **Clear EULA acceptance data:** Clear all saved captive portal EULA acceptance data saved on the device.
- **Access Point Names:** View, configure, and add access point names (APNs) for your phone's data connection.
- **Network operators:** View mobile network operator information.

NFC and Payment


NFC and payment uses the Near-Field Communication (NFC) feature of your phone. You can send information using NFC, including payment through mobile payment services at businesses that support this function.

Access NFC and Payment

1. From home, tap **Apps**  > **Settings** .

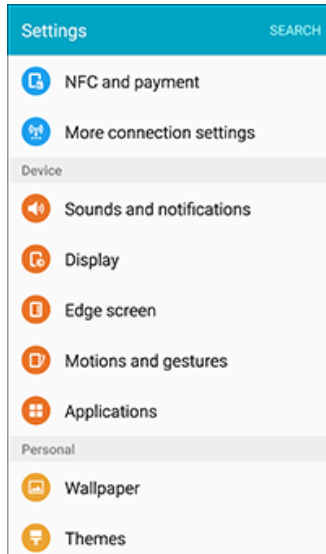


2. Tap **NFC and payment** .

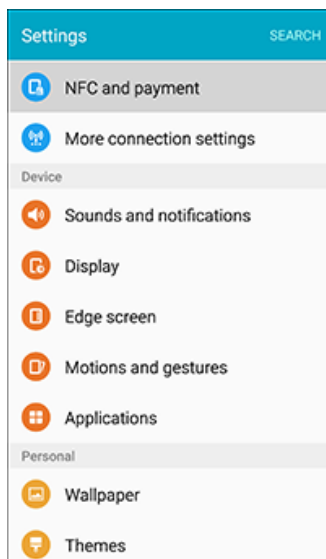


3. Tap settings to configure them.
 - ❖ Your settings are saved and implemented.

Enable NFC and Android Beam

1. From home, tap **Apps**  > **Settings**  > **NFC and payment** .

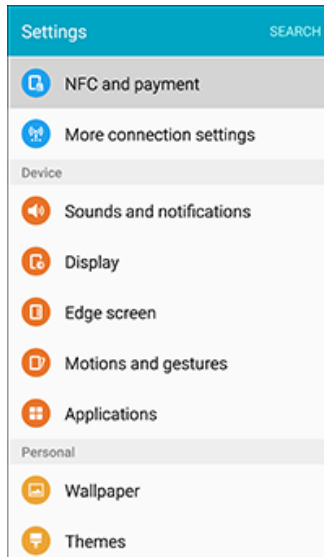

2. Tap **NFC**.

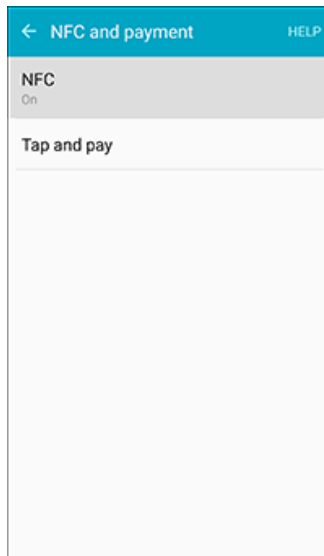


3. Tap the **ON/OFF** switch to enable NFC.



4. Tap **Android Beam**.



5. Tap the **ON/OFF** switch to enable Android Beam.

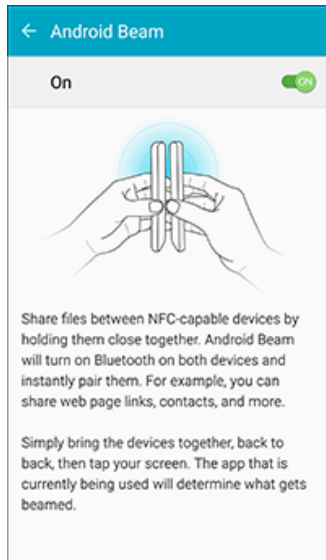


- ❖ NFC and Android Beam are enabled.

Tap and Pay


With your phone and a payment app, you can use your phone to pay for items by tapping it to an item at the point-of-purchase. You must have a payment app set up on your phone to use it with Tap and Pay.

Note: Tap and Pay payment apps may be downloaded from Google Play store. See [Google Play Store](#).

1. From home, tap **Apps**  > **Settings**  > **NFC and payment** .

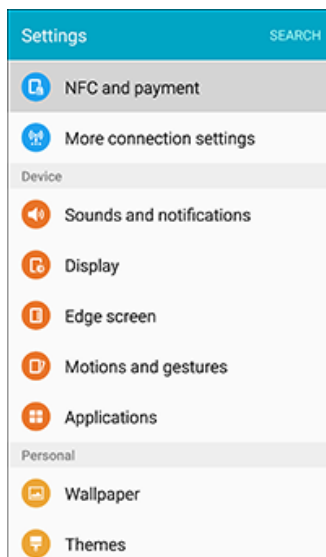

2. Tap **Tap and pay**.

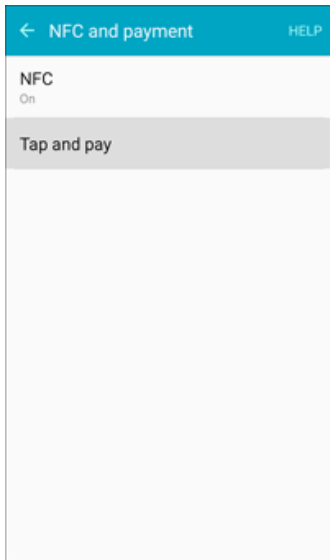

- ❖ Tap and pay payment apps you have installed are display.
- Available options depend on the payment app(s) you have set up on your phone.

More Connection Settings


The More connection settings menu provides access to additional network options, such as default messaging app, VPN, mobile networks, and printers (if available).

More Connection Settings Options


Setting	Description
Tethering	Share your device's mobile data connection via USB or Bluetooth.
Printing	Set up printers to print from your phone.
MirrorLink	Connect your phone to your car to access useful applications while driving. Your vehicle must support the MirrorLink interface.
VPN	Add a Virtual Private Network (VPN).
Default messaging app	Set a default text messaging app.

Access More Connection Options

1. From home, tap **Apps**  > **Settings** .

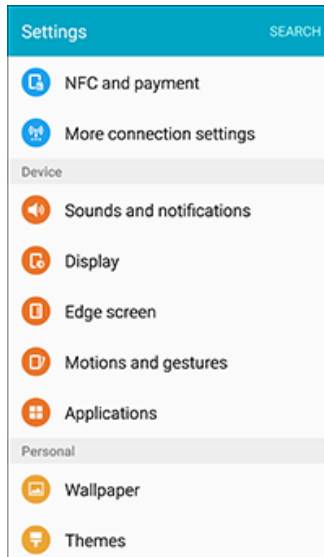

2. Tap **More connection settings** .

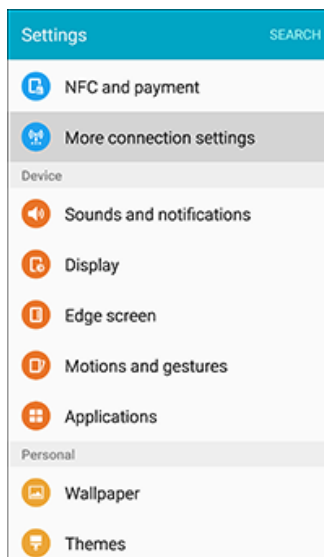


3. Set items.
 - ❖ Your settings are saved and implemented.

Tethering Settings


Use Tethering to share your device's Internet connection with a computer that connects to your device via USB cable or by Bluetooth.

Note: Using the tethering feature consumes battery power and uses data services.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

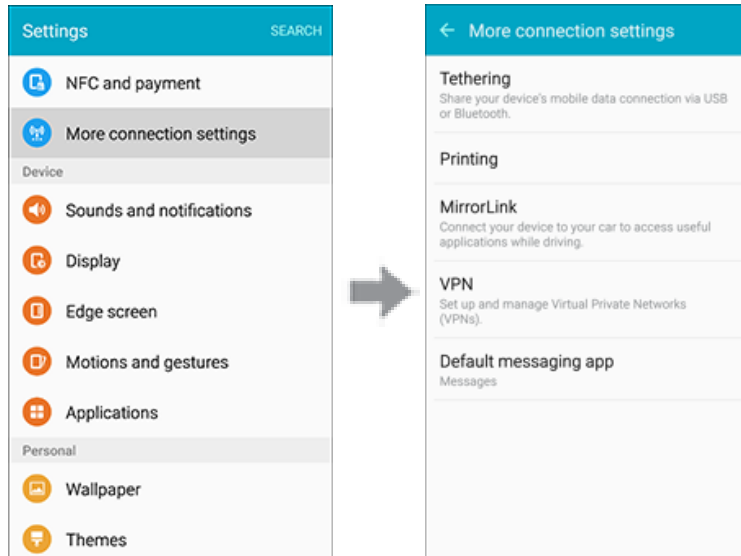

2. Tap **Tethering** and choose an option:

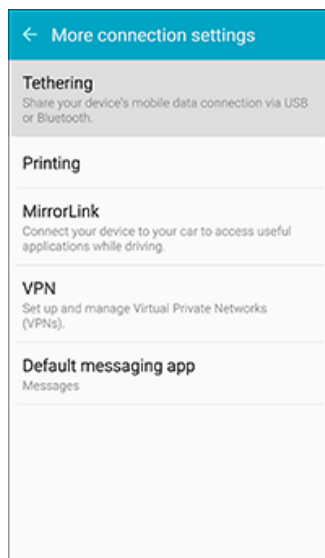

- **Bluetooth tethering:** Pair your device with the computer via Bluetooth. Consult the computer's documentation for more information about configuring your computer to pair via Bluetooth. Tap **Bluetooth tethering** to turn tethering on.
- **USB tethering:** Connect the computer to your phone via USB cable, and then tap **USB tethering** to turn tethering on.


Printing

You can print from your phone, via Wi-Fi, to an optional compatible printer (not included). Your phone and the optional printer must be connected to the same Wi-Fi network.


Add a Printer

Before you can print to a printer, you must add and set it up on your phone. You'll need to know the IP address of the printer; consult the printer's documentation for this information.

1. From home, tap **Apps**  > **Settings**  > **More connection settings** .

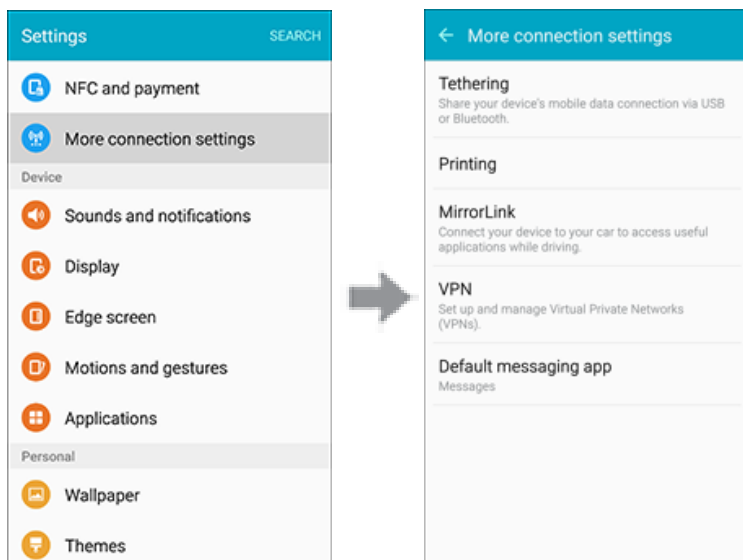

2. Tap **Printing**.

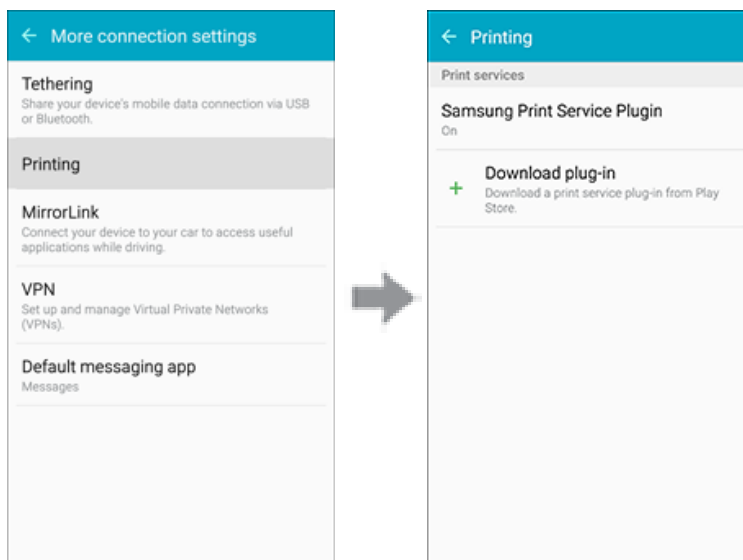

- ❖ The Printing settings screen displays.

3. From the Printing settings screen, tap **+** **Download plug-in**.
4. Follow the prompts to download and install a print driver from the Google Play store.
5. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
6. Tap **MORE > Add printer > ADD PRINTER** (or **+**, depending on the plug-in), and then enter a name and the IP address of the printer.

Set Up a Printer

Add a printer to a print service and configure settings.

Note: Below settings are examples only. Available settings will differ depending on the type of print service and printer you are using.

1. From the Printing settings screen, select a print service from the list
2. Tap the **ON/OFF** switch to turn the service on. The service must be on to add a printer.
3. Tap **MORE > Add printer** and follow the prompts to add a printer.
4. Tap **MORE > Printer settings** to configure printer options. Available options may vary depending on the type of printer, and not all printers support all options.

Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Prepare Your Phone for VPN Connection


Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, your phone must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your phone, see [Browser](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).


Set Up Secure Credential Storage

If your network administrator instructs you to download and install security certificates, you must first set up the phone's secure credential storage.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

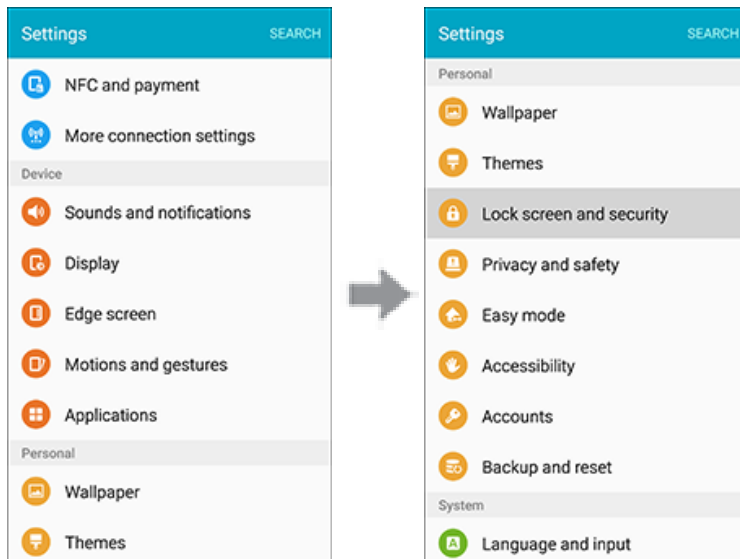


2. Tap **Screen lock type** > **Password**.

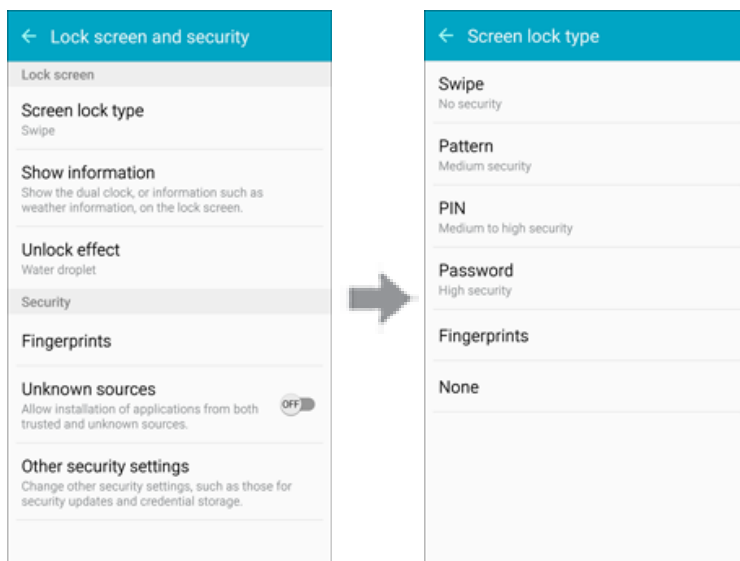


Note: For credential storage, you can also use Pattern, PIN, or Fingerprints screen lock types. See [Screen Lock](#).


3. Enter a new password (at least eight characters without any spaces) for the credential storage, scroll down and confirm the password, and then tap **OK**.

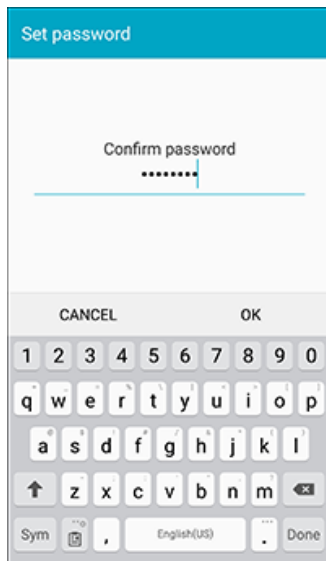

4. Select your display option for notifications on the lock screen, and then tap **DONE**.
 - ❖ The password is set, allowing secure credential storage.
5. On the Lock screen and security window, tap **Other security settings**.

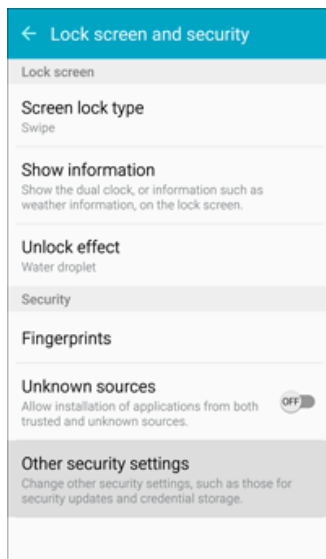

6. Tap **Trust agents**, and then tap your preferred system and user credentials.

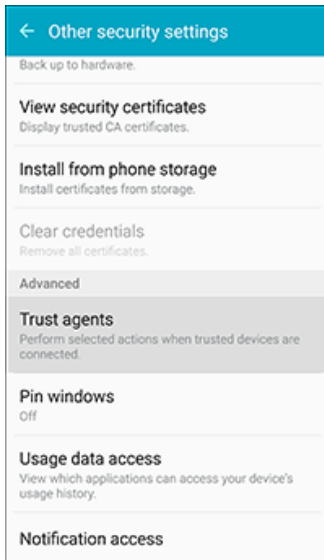


- ❖ Your secure credentials storage is set.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.


Add a VPN Connection

Use the More networks settings menu to add a VPN connection to your phone.

1. From home, tap **Apps**  > **Settings** .

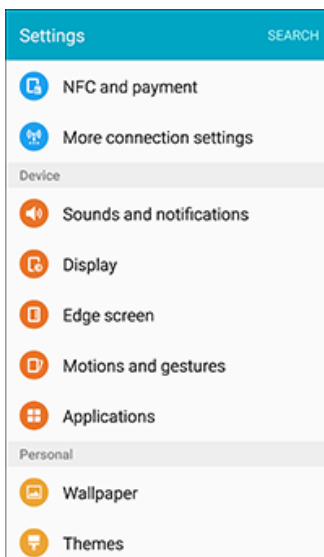


2. Tap **More connection settings** ⓘ > **VPN**.

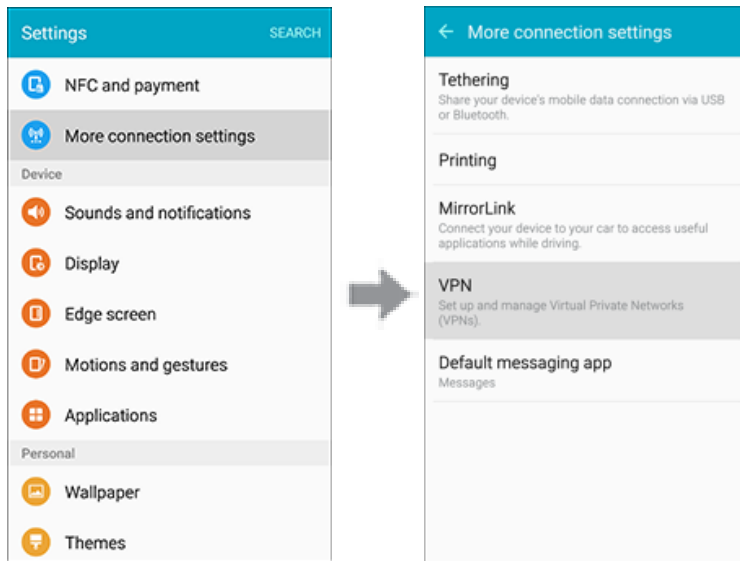

❖ The VPN settings window appears.

3. Tap **ADD VPN**, and then enter the information for the VPN you want to add.

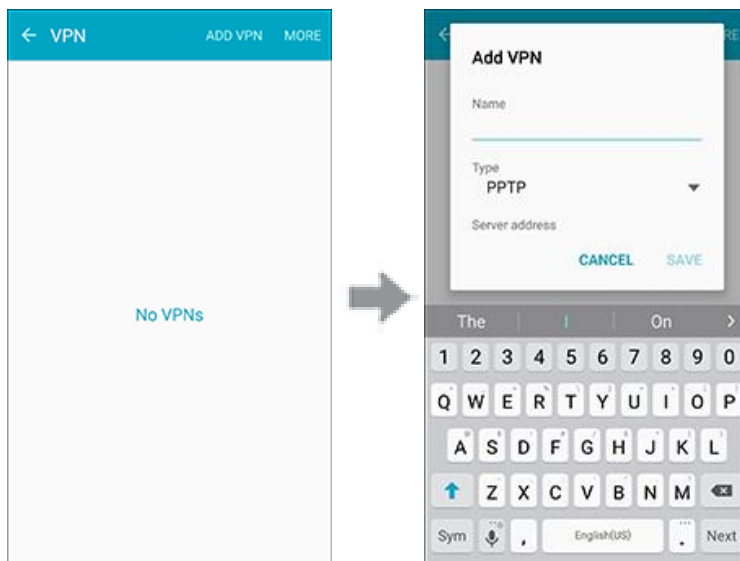


- Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.
- Set up all options according to the security details you have obtained from your network administrator.

4. Tap **SAVE**.


❖ Your VPN is added to the VPNs section of the VPN settings window.

Access the VPN Settings Window

1. From home, tap **Apps**  > **Settings** .

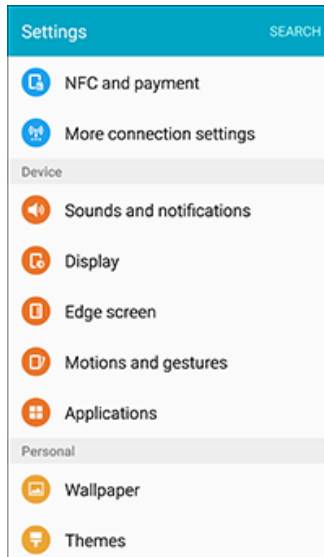


2. Tap **More connection settings**  > **VPN**.

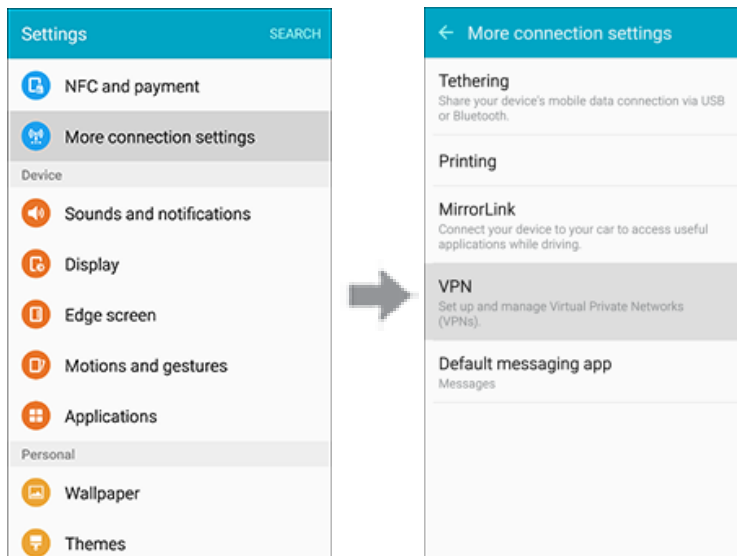


- ❖ The VPN settings window appears.

Connect to a VPN

1. From the VPNs section of the VPN setting window, tap the VPN that you want to connect to.

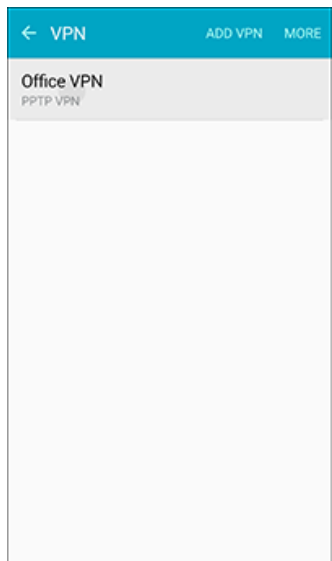


2. When prompted, enter your login credentials, and then tap **CONNECT**.

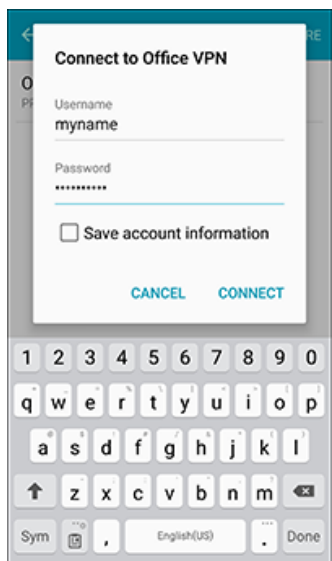


- ❖ You will connect to the selected VPN.
 - When you are connected, a VPN connected icon appears in the notification area.
3. Open the Web browser to access resources such as intranet sites on your corporate network.

Disconnect from a VPN


1. Drag the Status Bar down to open the Notification Panel.

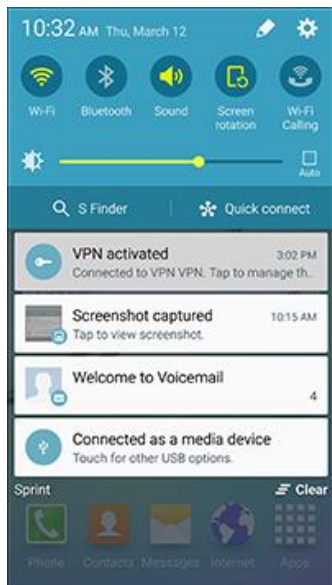

2. Tap the VPN connection to display the VPN connection window.

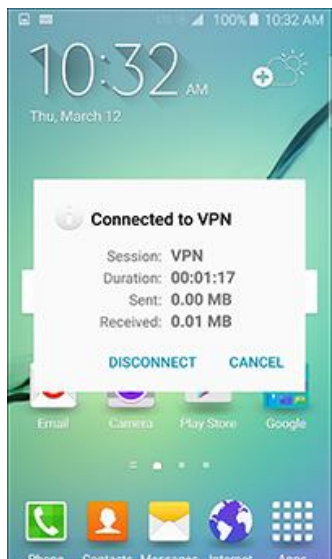

3. Tap **DISCONNECT** to disconnect from the VPN.

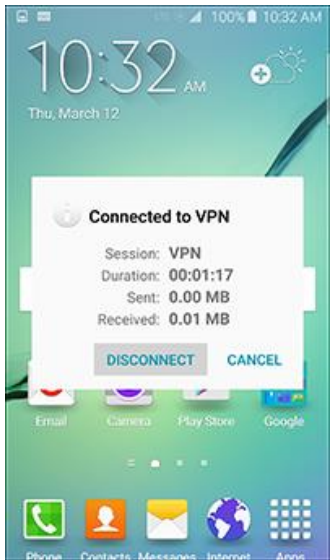


- ❖ Your phone disconnects from the VPN.
- When your phone has disconnected from the VPN, you will see a VPN disconnected icon in the notification area of the Status Bar.


Default Messaging App Settings

If you have multiple messaging apps installed on your phone, you can choose the app your phone uses for messaging. The app you select here will be used when you choose Messages in other apps, such as when sharing items like pictures or video.


1. From home, tap **Apps**  > **Settings** .

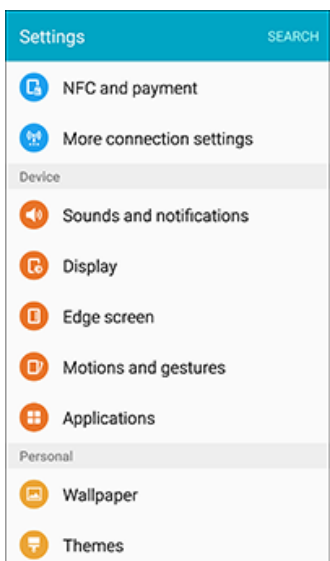

2. Tap **More connection settings**  > **Default messaging app**.

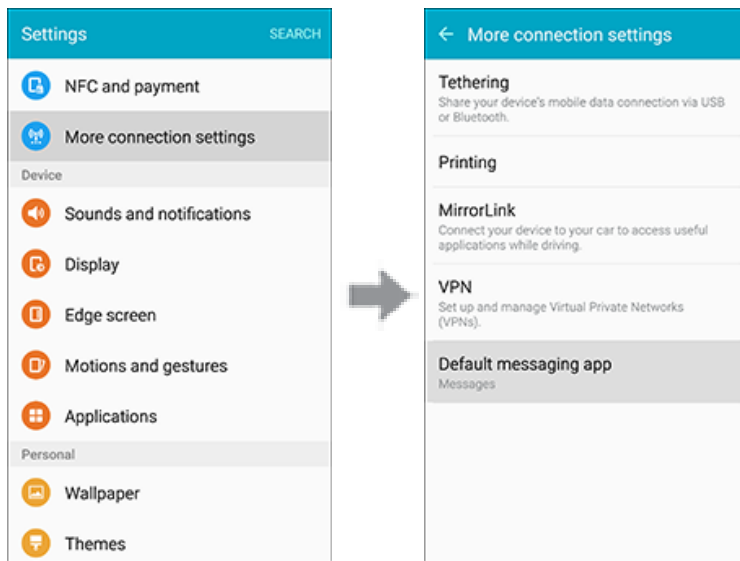

3. Choose a messaging app.

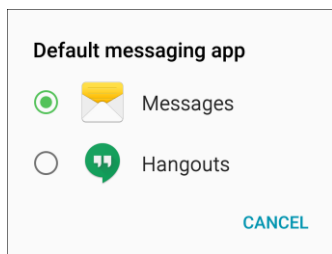

❖ The default messaging app is set.

Note: If you choose a default messaging app other than Messages (for example, Google Hangouts or Messaging Plus), you will not be able to use the standard Messages app unless you restore it as the default messaging app.

Sounds and Notifications Settings

The Sounds and notifications settings menu lets you control your phone's audio, from ringtones and alerts to tap tones and notifications.

Sounds and Notifications Settings Overview

The sounds and notifications settings menu allows you to configure the following options:


Sound Setting	Description
Sound mode	Set the sound mode for the phone (Sound, Vibrate, or Mute).
Volume	Set volume for ringtones, media, system features, etc.
Ringtones and sounds	Set your ringtones and notification sounds for your phone, apps, keypad, and other features.
Vibrations	Configure vibration pattern, feedback, and other settings.
Sound quality and effects	Set sound quality and sound effects for your phone.
Do not disturb	Configure the Do not disturb feature to mute calls and alerts at will or on a schedule, as well as set exceptions.
Notifications on lock screen	Set a tone for default phone notifications.
App notifications	Configure notifications for apps installed on your phone.
LED indicator	Toggle the LED indicator light for notifications.

Sound Mode

You can switch between sound modes, while preserving the individual sound settings you've made.

Note: Sound modes are also available from the Device options menu. Press and hold the **Power** key, and then choose **Mute**, **Vibrate**, or **Sound** from the Device options.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

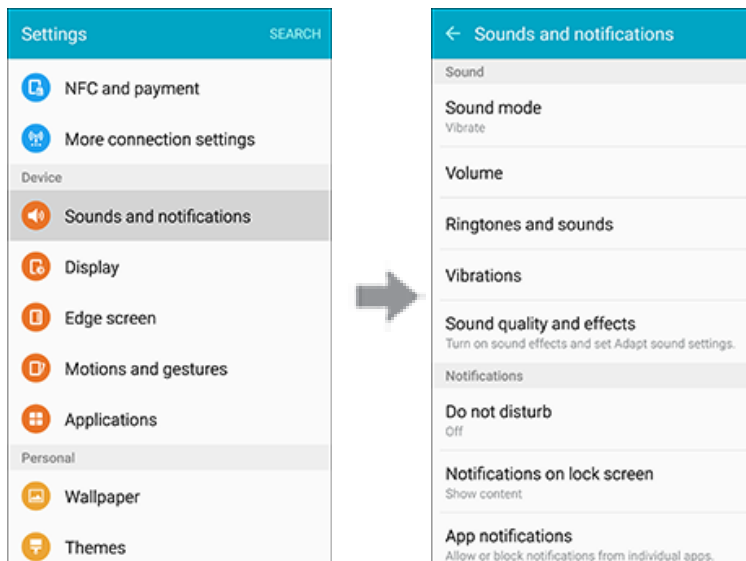


2. Tap **Sound mode**, and then choose a mode:
 - **Sound:** Your phone uses the sounds, vibrations, and volume levels you've chosen in Sound settings for notifications and alerts.
 - **Vibrate:** Your phone vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
 - **Mute:** Your phone plays no sounds or vibrations. Onscreen reminders will still occur.

Volume


Set the system volume level, and set default volume for call ringtones, notifications, and other media.

Note: You can also set System volume from the Home screen by pressing the **Volume** key.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

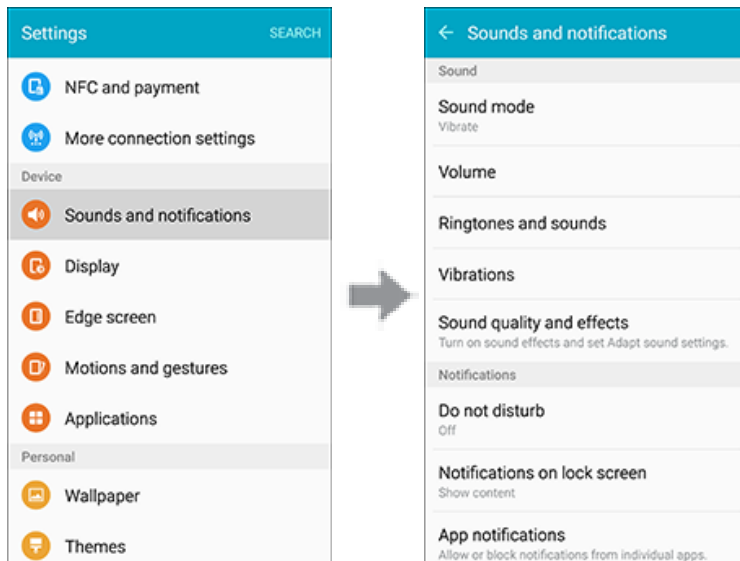

2. Tap **Volume** and then drag the sliders to set the default volume for:

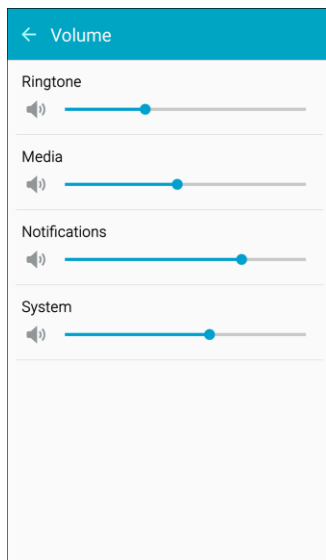


- **Ringtone**
- **Media**

- **Notifications**
- **System**


Ringtones and Sounds

Choose a ringtone for incoming calls.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

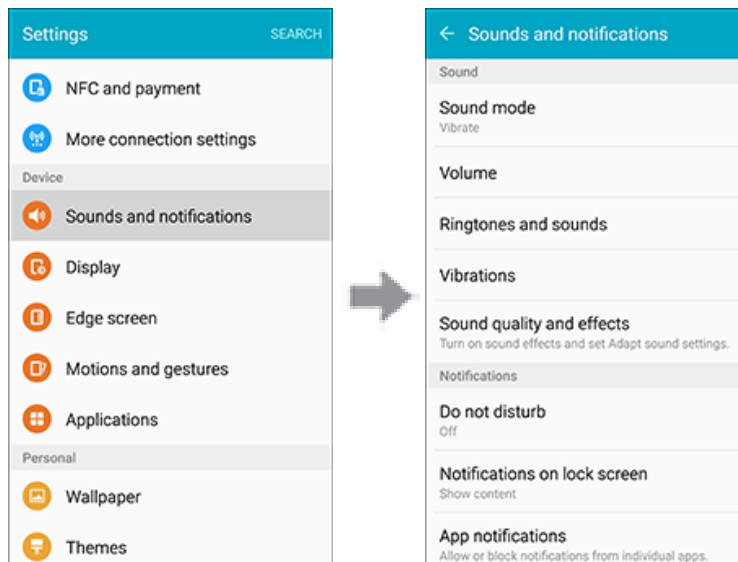

2. Tap **Ringtones and sounds** for options:

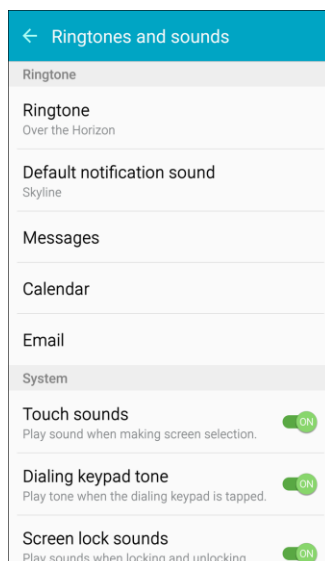


- **Ringtone:** Select a default ringtone.
- **Default notification sound:** Choose a default sound for notifications.

- **Messages:** Tones play and/or the phone vibrates when new messages arrives.
- **Calendar:** Tones play and/or the phone vibrates to remind you of events.
- **Email:** Tones play and/or the phone vibrates when new emails arrives.
- **Touch sounds:** Tones play when you tap the screen to make selections.
- **Dialing keypad tone:** Tones play when you tap keys on the phone keypad.
- **Screen lock sounds:** Tones play when you tap the screen to lock or unlock it.
- **Emergency tone:** Tones play and/or the phone vibrates for alerts.
- **Keyboard sound:** Tones play when you tap the keyboard.


Vibrations

Choose vibrations to play for notifications, such as for incoming calls, new messages, and event reminders.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

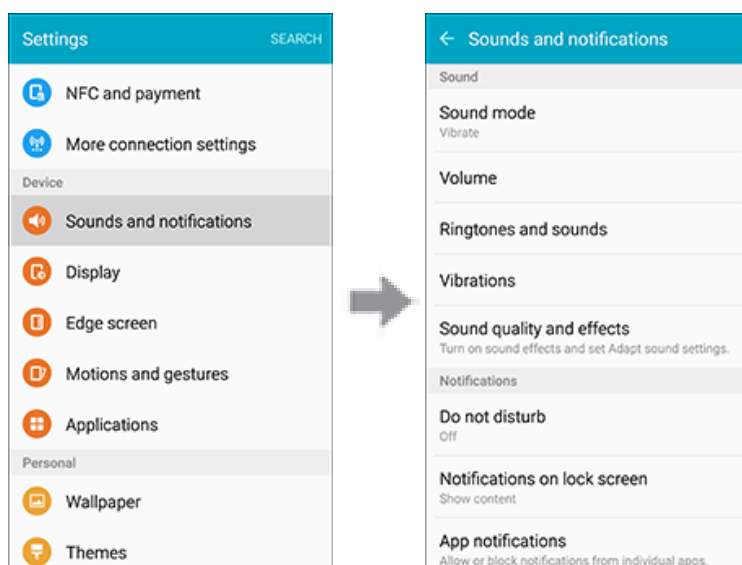


2. Tap **Vibrations** for options:

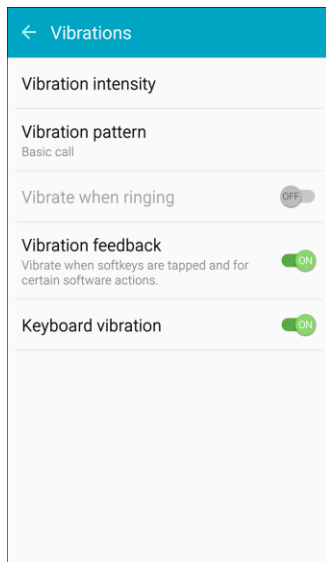

- **Vibration intensity:** Choose the intensity of vibrations.
- **Vibration pattern.** Select a vibration pattern, or create a new one.
- **Vibrate when ringing:** The phone vibrates when ringing.
- **Vibration feedback:** The phone vibrates when soft keys are tapped and for certain software actions.
- **Keyboard vibration:** The phone vibrates when you tap the keyboard.

Sound Quality and Effects

1. From a Home screen, tap Apps  > Settings  > Sounds and notifications .

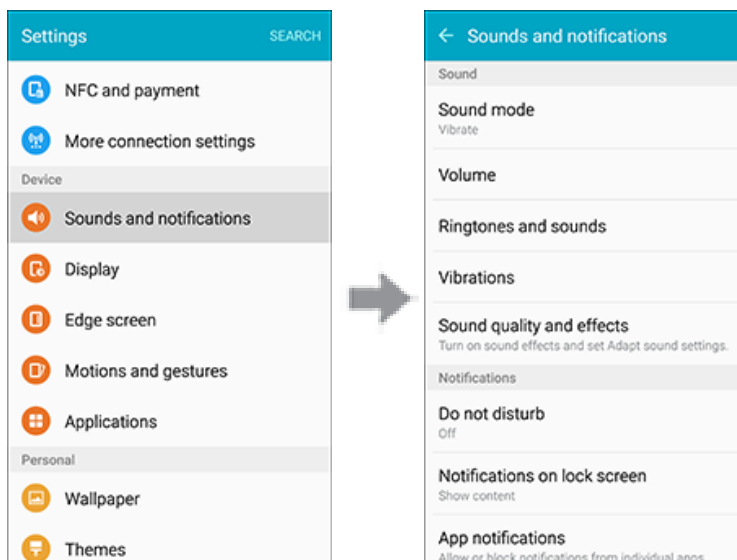


2. Tap **Sound quality and effects** for options:
 - **Adapt Sound**: Find the best sound quality for you and use it during calls and while playing music or videos.
 - **SoundAlive+**: Recreate the effect of rich surround sound.
 - **TubeAmp**: Simulate the soft timbre of a tube amplifier.

Notifications

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap **Apps**  > **Settings**  > **Sounds and notifications** .

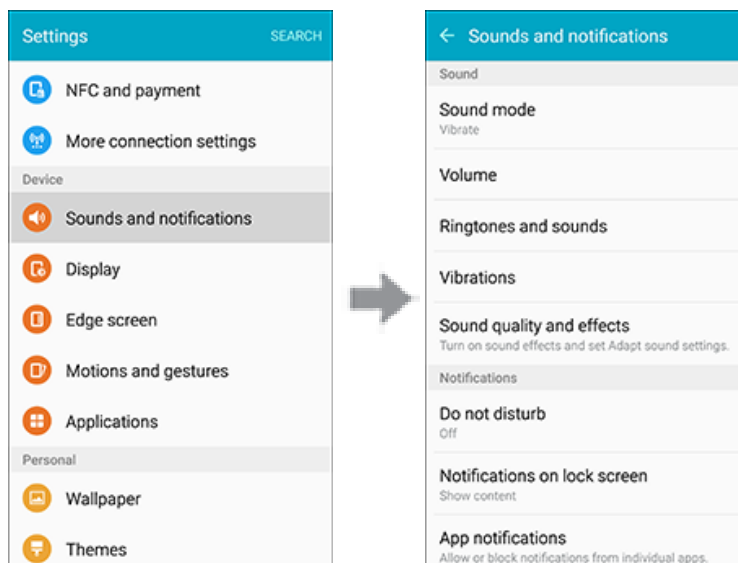

2. Set notification sound options:
 - **Do not disturb**: Silence all calls and alerts during scheduled times. You can allow exceptions.
 - **Notifications on lock screen**: Display notifications on the lock screen.
 - **App notifications**: Allow or block notifications from individual apps.
 - **LED indicator**: The LED indicator lights up when charging, voice recording, or receiving notifications.

Display Settings

Adjusting your phone's display and wallpaper settings not only helps you see what you want, it can also help increase battery life.


Display Settings Overview

The display settings menu allows you to configure the following options:


Display Setting	Description
Brightness	Set the display brightness.
Font	Set a default font and font size.
Screen timeout	Set a screen timeout duration. Note: Longer durations discharge the battery more quickly
Smart stay	Set the phone display to stay on for as long as you are looking at it.
Screen mode	Select a screen display mode to optimize it for the content being displayed.
Daydream	Select a screensaver to be displayed when the device is charging.

Access Display Settings

1. From home, tap **Apps**  > **Settings** .

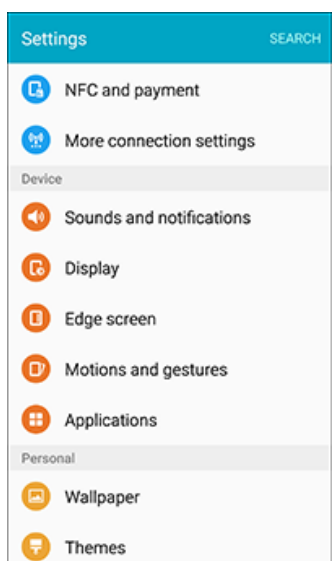

2. Tap **Display** .

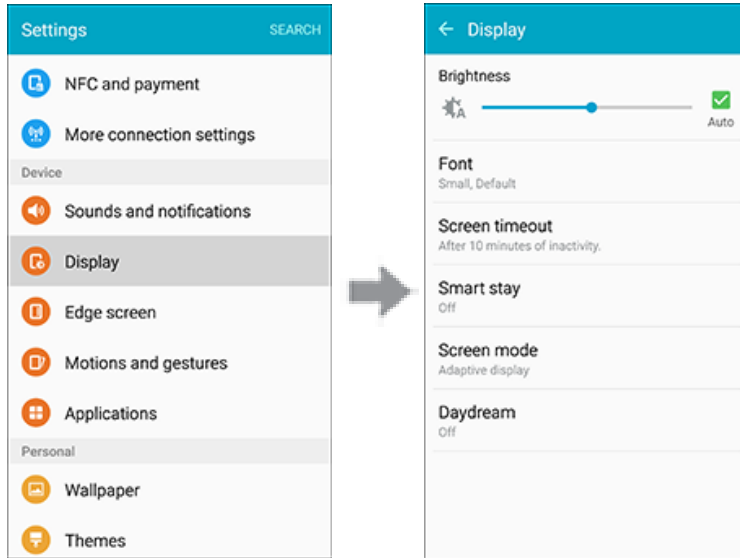


3. Set your display options:

- **Brightness:** Set the screen brightness, or set the brightness level to Auto.
- **Font:** Choose the default font.
- **Screen timeout:** Turn the screen off after a set amount of time.
- **Smart stay:** Keep the screen on while you are looking at it.
- **Screen mode:** Adjust the screen display according to what is being displayed.
- **Daydream:** Choose options for when the phone docked and/or sleeping.

Edge Screen Settings

Manage the panels that display on the Edge screen, including your own custom panels, and set up night mode.


1. From home, tap **Apps**  > **Settings**  > **Edge screen** .

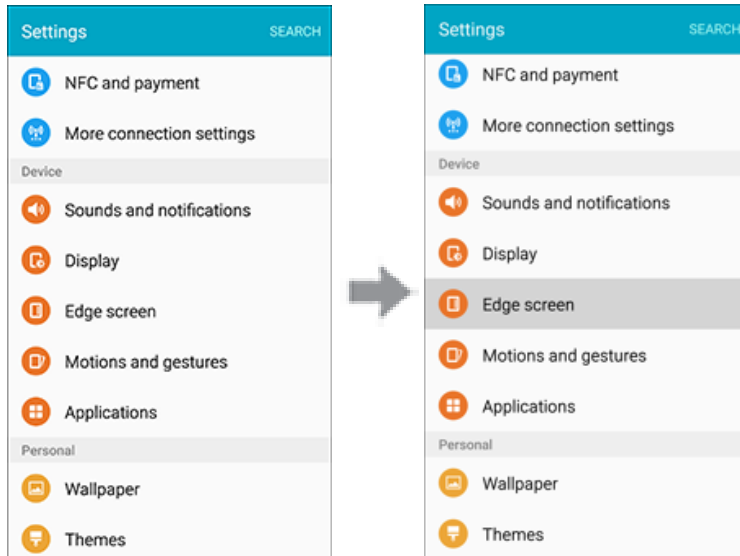

— or —

Swipe upward on the Edge screen and tap **Settings** .

2. Configure the following options:

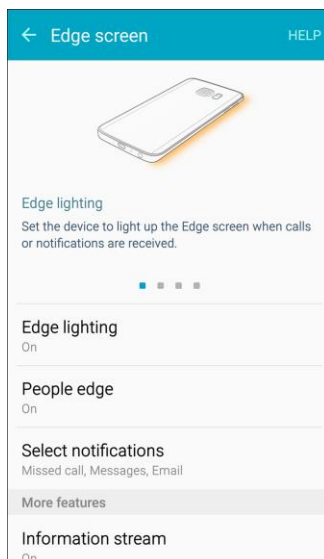

- **Edge lighting:** Set the Edge screen to light up when you receive calls or notifications while the device is turned over. If People edge is on, the indicator color will depend on your My people settings (set under People edge).
- **People edge:** Add contacts to your My people list and assign them to different notification colors.
- **Select notifications:** Select which notifications appear on the Edge screen.
- **Information stream:** Select information feeds that appear on the Edge screen, set the Edge screen timeout, and configure Weather information settings.
- **Night clock:** Set up a clock that displays on the Edge screen when the phone screen is off. Night mode is available for a maximum of 12 hours.
- **Edge screen position:** Select either the left or right side of the display for the Edge screen.


Tip: For more information on Edge screen, from the Edge screen settings menu, tap **HELP**.

Motions and Gestures


Enable or disable motions and gestures, which provide phone controls by moving the phone or by gesturing.

Access Motions and Gestures Settings

1. From home, tap **Apps**  > **Settings** .

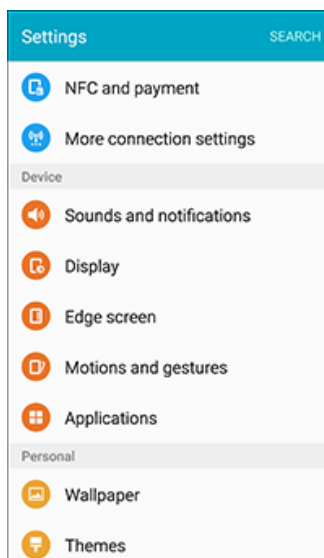

2. Tap **Motions and gestures** . You can swipe through the screens at the top to read about each motion and gesture.

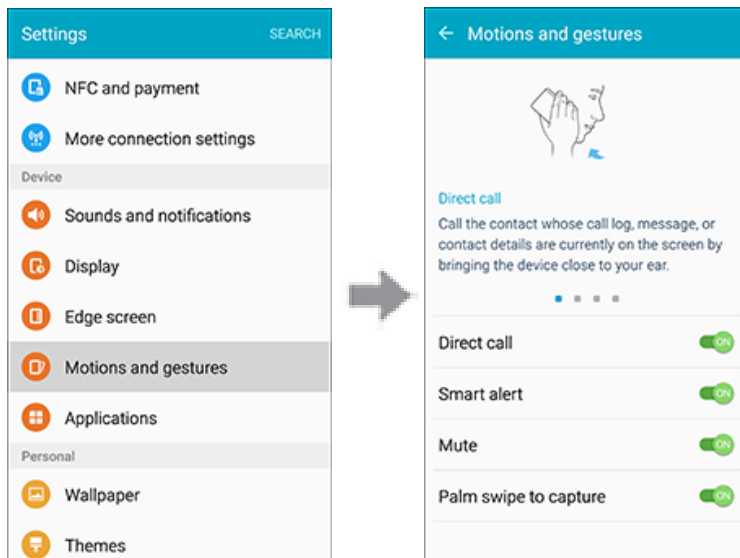


3. Tap the **ON/OFF** switch to turn a feature on. When a feature is on, tap the feature name to configure options:
- **Direct call:** Call the contact whose call log, message, or contact details are currently on the screen by bringing the device close to your ear.
 - **Smart alert:** The phone will vibrate when picked up to notify you about missed calls and messages.
 - **Mute/pause:** Mute incoming calls and alarms by placing your hand on the screen or turning the phone over.
 - **Palm swipe to capture:** Capture the screen by swiping the edge of your hand across the screen, from side to side, keeping in contact with the screen.

Applications Settings


View information and configure settings for all apps on your phone. The Application manager and Default applications menus are located here.

Access Applications Settings


1. From home, tap **Apps**  > **Settings** .

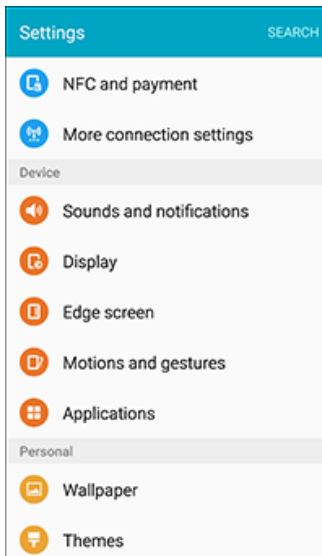

2. Tap **Applications** .

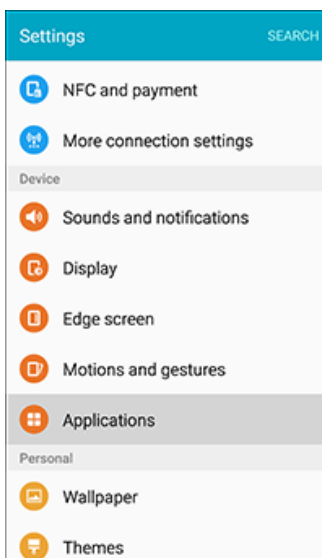

3. Scroll down to **Application settings** to see all of the pre-loaded apps. Tap on an app to view and configure its settings.

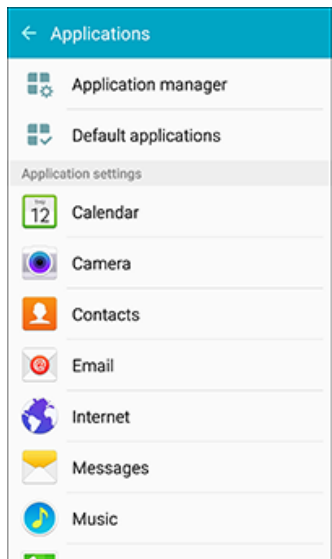


Application Manager

Check installed applications and running applications. Items that can be checked in the Application manager are as follows.


Apps Setting	Description
DOWNLOADED	Check downloaded apps.
RUNNING	Check running apps.
ALL	Check all apps.

Access the Application Manager

1. From home, tap **Apps**  > **Settings**  > **Applications** .

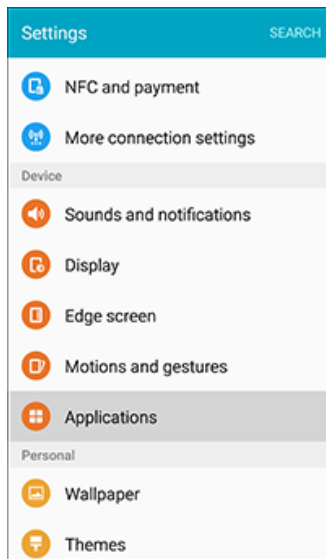

2. Tap **Application manager**.

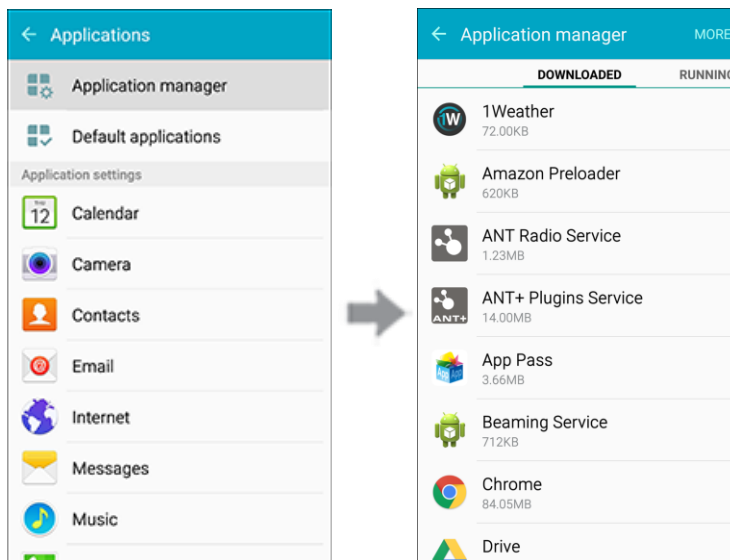


3. Tap items to view details.
 - ❖ Check your application settings condition and access additional options.

Note: Depending on the app and its location, you may be able to force the app closed, uninstall or disable the app, clear cache and data, and more.


Default Applications

Set or clear default applications for certain built-in features of the phone.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

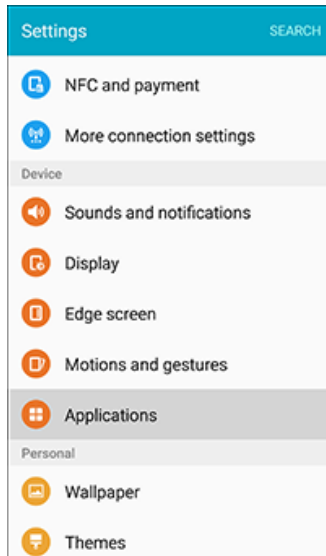

2. Tap **Default applications**.

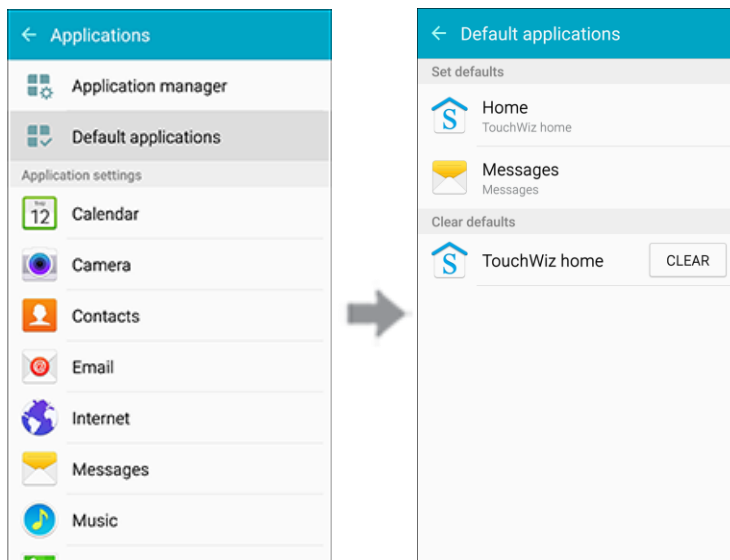


3. Tap each default setting to see what services or applications are available to set as the default.
 - **Home:** Choose a default Home screen mode.
 - **Messages:** Choose a default app for messaging.
 - **Clear defaults:** Tap **CLEAR** to clear defaults.

Note: If you choose a default messaging app other than Messages (Google Hangouts or Messaging+ for example), you will not be able to use the Messages app unless you restore it as the default messaging app. For details, see [Default Messaging App Settings](#).


Calendar Settings

Configure settings for your phone's Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

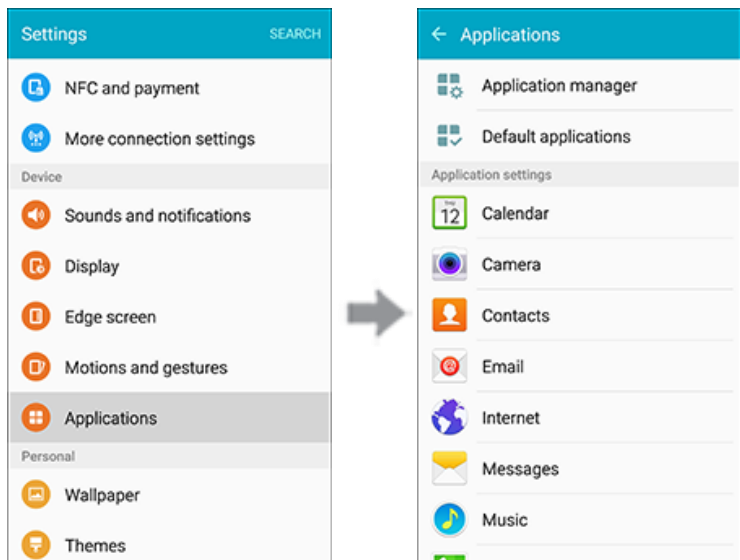

2. Tap **Calendar** to configure these options:

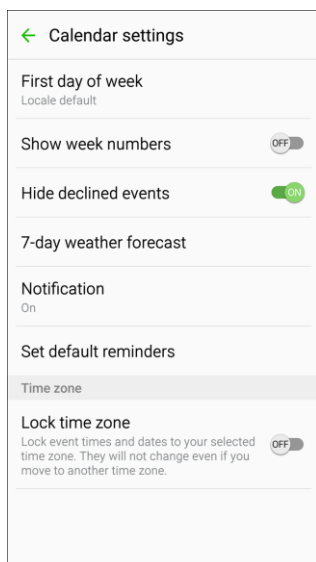


- **First day of week:** Choose a day to start each calendar week.
- **Show week numbers:** Enable or disable display of week numbers on the calendar.

- **Hide declined events:** When enabled, events for which you declined the invitation are not shown on the calendar.
- **7-day weather forecast:** When enabled, weather information from AccuWeather.com displays on the calendar.
- **Notification:**
 - **Notification sound:** Choose a sound for calendar event notifications.
 - **Vibration:** Enable or disable vibration, to play for calendar event notifications.
- **Set default reminders:** Set default reminders for Events and All-day events.
- **Lock time zone:** When enabled, event times will be locked to the time zone you select. Times and dates will not change, even if you travel to another time zone.


Camera Settings

Configure settings for your phone's Camera app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

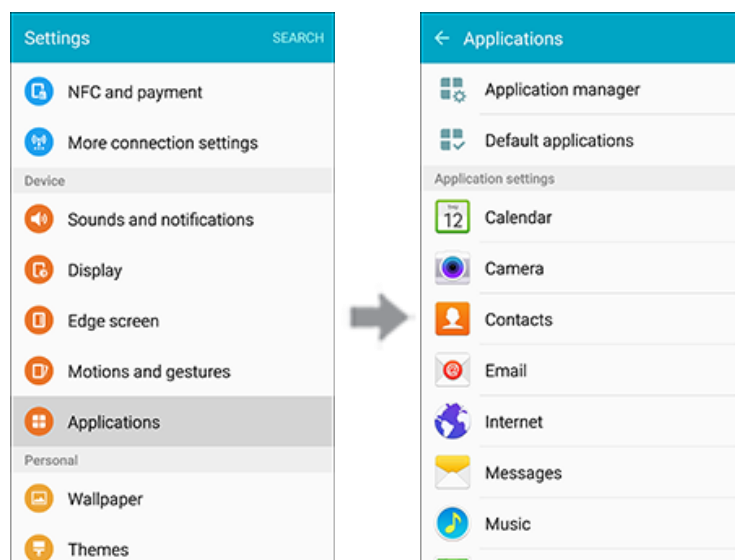

2. Tap **Camera** to configure these options:

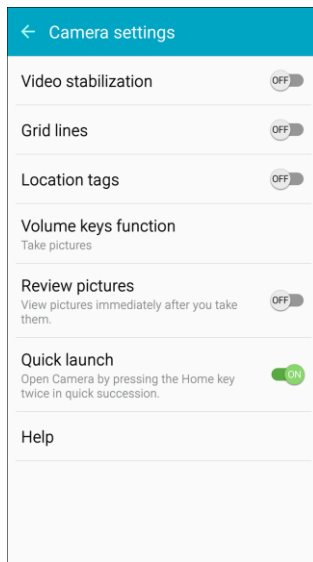

- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving (rear camera only).
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the photo.
- **Volume keys function:** Use the **Volume** key to take pictures, record video, or as a zoom key.
- **Review pictures:** Show photos immediately after taking them.
- **Quick launch:** Open the camera by pressing the Home Key twice in quick succession.
- **Help:** View help topics for using the Camera.


Note: Additional Camera settings options are available within the Camera app. See [Camera Options and Settings](#).

Contacts Settings


Configure options for contacts stored on your phone.

Tip: You can also access Contacts Settings from the Contacts app. From Home, tap **Contacts**  **> MORE > Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

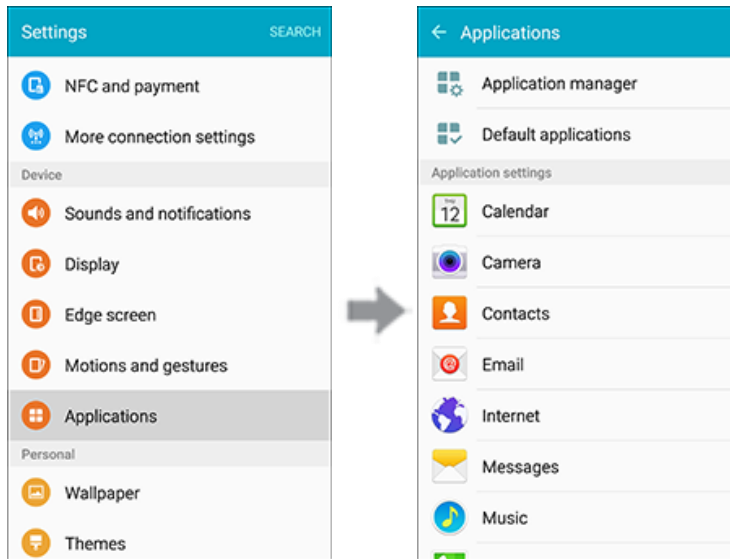

2. Tap **Contacts** to configure options:

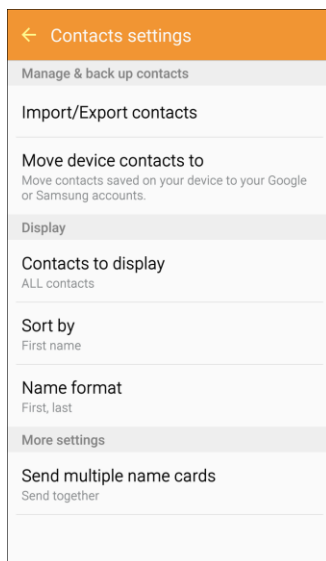

- **Import/Export contacts:** Import contacts from your phone's internal memory and export contacts to your phone's internal memory.
- **Move device contacts to:** Move contacts saved on your device to your Google or Samsung accounts.
- **Contacts to display:** Choose contacts to display in Contacts. You can choose only contacts from your phone's memory, or from an account, or choose other sources. You can also create a customized list of contacts to display.
- **Sort by:** Choose how contacts are sorted, by first or last name.

- **Name format:** Choose how contacts are displayed, by first or last name.
- **Send multiple name cards:** You can choose how to transfer contacts, when sharing them with other devices, such as via Bluetooth. Tap **Export settings** and choose one of the following options:
 - **Send together:** Multiple contacts are sent together. This method can be faster, but depends on whether the target device can accept multiple namecards. If not, only one contact will be sent.
 - **Send individually:** Namecards are sent individually. This method may take longer, because the other device must accept each namecard individually, but it helps ensure that no namecards are missed.


Email Settings

Configure options for email accounts you set up on your phone.


Tip: You can also access Email settings from the Email app. From Home, tap **Apps**  > **Email**  > **MORE** > **Settings**.

General Email Preferences

1. From home, tap **Apps**  > **Settings**  > **Applications** .

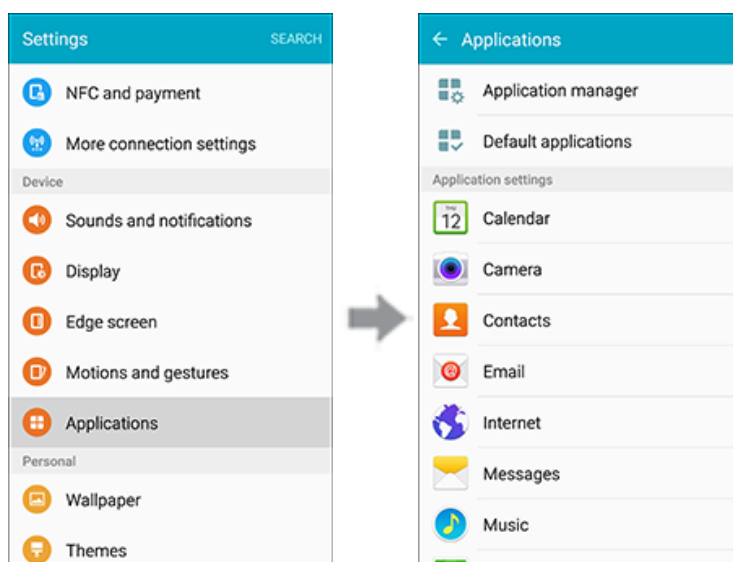

2. Tap **Email** to configure options. General email settings, which affect all email accounts, include:

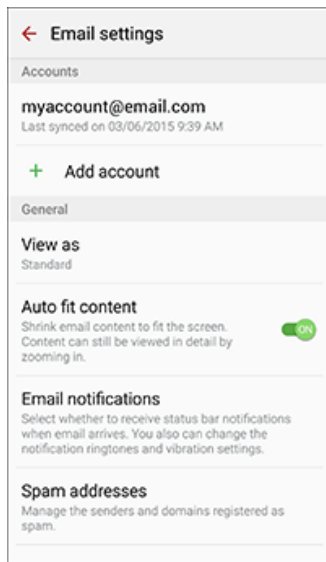


- **Manage accounts:** Configure options for specific accounts. Available settings depend on the type of account.
- **Add account:** Add additional email accounts.
- **View as:** View emails in Standard format, or as Conversations.
- **Auto fit content:** Shrink email content to fit the screen. Content can still be viewed in detail by zooming in.
- **Email notifications:** Notifications for new emails display in the Status Bar. When disabled, you can control notifications for each of your email accounts individually in the account's settings.
- **Spam addresses:** Create and maintain a list of email addresses and domains to automatically block emails from those senders.
- **Confirm deletions:** Ask for confirmation before deleting email.

Manage Email Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

Note: Available settings depend on the type of email account.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

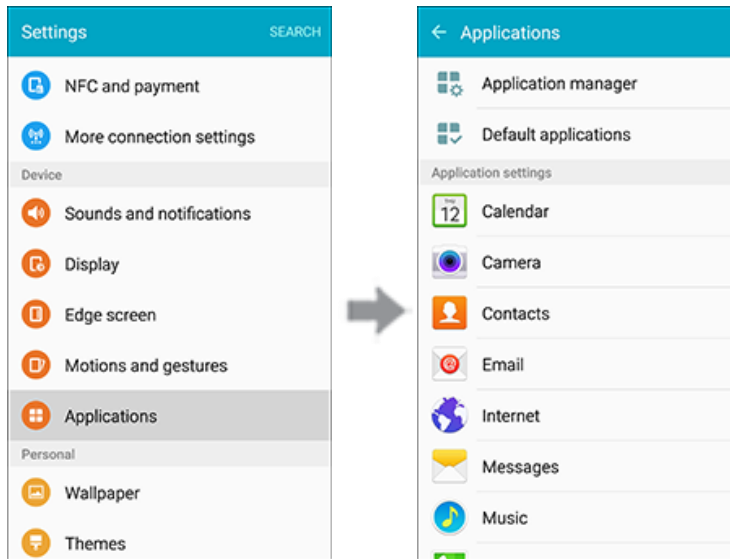

2. Tap **Email**, and then tap an account to set its options. Individual email account settings may vary; see your service provider for details. Common settings include:
- **Sync settings:** Configure options for synchronizing your phone with your account:
 - **Signature:** A text signature is automatically added to emails you send.
 - **Out of office settings:** Configure options for automatically sending replies when you are out of the office.
 - **Default account:** Assign an account as the default email account for outgoing messages. When you launch an email from other apps, the email will automatically be from this account.
 - **Password:** Update your account password to match the password set on your account.
 - **Email notifications:** An icon displays in the Status Bar when you receive new emails.
 - **Notification sound:** Choose a ringtone to play for new email notifications.
 - **Vibrate:** The phone vibrates for new email notifications.
 - **More settings:** Configure other options, including the account name, carbon copy and blind carbon copy, synchronization, and security options.
 - **Account name:** Enter a name to identify this email account.
 - **Always Cc/Bcc myself:** Choose options for sending a copy of emails you send to yourself, as a copy (Cc) or blind copy (Bcc).
 - **Show images:** Choose whether to automatically display embedded images in the body of an email.


- **Auto download attachments:** Choose whether the phone automatically downloads email attachments when you are connected to Wi-Fi. You might use this option to control how and whether you use your plan's data services to download attachments.
- **Auto resend times:** Choose the number of times the phone attempts to resend an email after a delivery failure.
- **Folder sync settings:** Choose folders to synchronize between your phone and account.
- **Period to sync Calendar:** Choose the period for synchronizing calendar events between your phone and account.
- **Empty server trash:** Delete the contents of the trash folder on the account server.
- **In case of sync conflict:** Choose whether information from the server or phone has priority when there is a conflict.
- **Security options:** Configure advanced security options, including encryption.
- **Number of emails to load:** Choose the number of emails displayed at one time.
- **Sync Contacts:** Choose whether contacts are synchronized between your phone and the account.
- **Sync Calendar:** Choose whether calendar events are synchronized between your phone and the account.
- **Sync Task:** Choose whether emails are synchronized between your phone and the account.
- **Exchange server settings:** Configure the Domain\user name, Password, and other Exchange server settings.

Internet Settings


Configure Internet settings, to customize the browser to your preferences.

Tip: You can also access Internet settings from the Internet app. From Home, tap **Internet**  > **MORE** > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

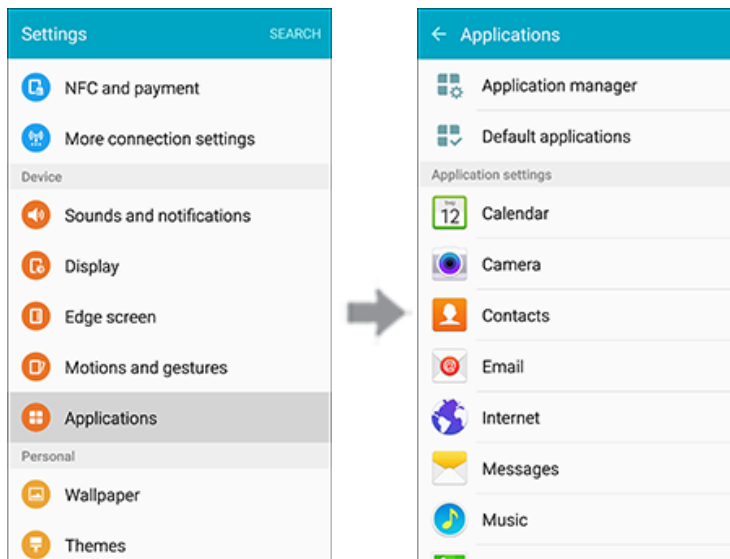

2. Tap **Internet** to configure options:

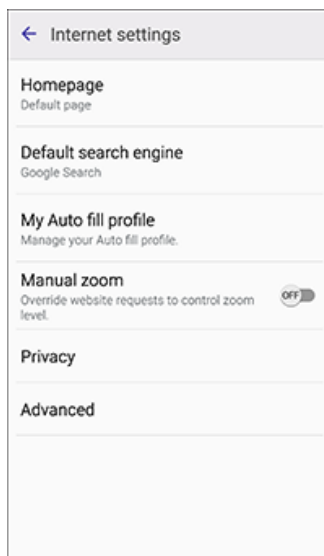

- **Homepage:** Choose a homepage to display when you launch Internet.
- **Default search engine:** Choose a default search engine.
- **My Auto fill profile:** Manage your Auto fill profile.


- **Manual zoom:** Override website requests to control zoom level
- **Privacy:** Choose options related to privacy.
- **Advanced:** Choose settings to control how the browser treats content.

Messages Settings


The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

Tip: You can also access Message settings from the Messages app. From Home, tap **Messages**  **> MORE > Settings.**

1. From home, tap **Apps**  **> Settings**  **> Applications** .

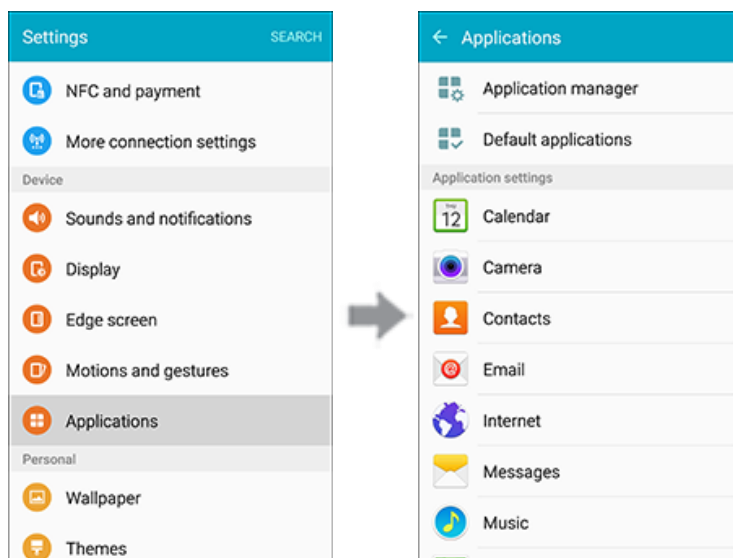

2. Tap **Messages** to configure settings:

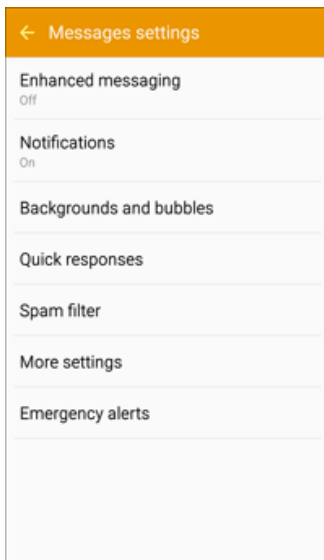

- **Enhanced messaging:** Enable enhanced messaging with other S 6 users. See [Send an Enhanced Message](#).
- **Notifications:** When turned on, notifications for new messages display in the Status Bar. Tap the **ON/OFF** switch to turn the setting on, and then configure options:
 - **Notification sound:** Choose a sound to play for new message notifications.
 - **Vibrate:** Choose whether vibration plays along with the sound for new message notifications.
 - **Pop-up display:** Choose whether a new message pops up on the display to notify you.
- **Backgrounds and bubbles:** Choose backgrounds and bullet styles.
- **Quick responses:** Create and manage text phrases that you can add to messages.
- **Spam filter:** When turned on, your phone block messages that may be spam, by filtering based on criteria you set. Tap the **ON/OFF** switch to turn the setting on, and then configure filters:
 - **Manage spam numbers:** Enter telephone numbers, to automatically flag messages from the numbers as spam, when Spam settings are enabled.
 - **Manage spam phrases:** Enter text phrases, to automatically flag messages as spam when they contain the phrase. Available when Spam settings are enabled.
 - **Spam messages:** View messages marked as spam.
- **More settings > Text messages settings:**
 - **Auto combination:** Choose whether long messages that are received in multiple parts are automatically re-assembled to display as a single message.

- **More settings > Multimedia messages:**
 - **Group conversation:** Control how messages to multiple recipients are handled. When enabled, a single message is sent to multiple recipients. When disabled, a separate message is sent to each recipient.
 - **Auto retrieve:** Choose whether message attachment(s) are automatically downloaded when you display a multimedia message. If you disable this option, only the message header displays in the message list, and you'll be prompted to download the attachment(s).
 - **Roaming auto retrieve:** Choose whether message attachment(s) are automatically downloaded when your phone is outside its home network.
- **More settings > Delete old messages:** Automatically delete the oldest messages when the maximum number of text (1000) and multimedia (100) messages has been exceeded.
- **Emergency alerts:** Configure emergency alert settings. You can enable or disable some alerts: Extreme Alert, Severe Alert, Amber Alert, and Emergency alert test messages. You cannot disable Presidential alerts.
 - **Emergency alerts:** Choose types of messages to receive. You can enable or display any of the message types, except for Presidential Alert. You can also choose to receive emergency alert test messages.

Important: The Commercial Mobile Alert System (CMAS) system provides the government the ability to send geographically targeted notifications of emergencies, such as threats to public safety, severe weather events, a hazardous material spill or a missing child in the phone user's area.


- **Emergency notification preview:** Play a sample emergency alert tone. Tap **Stop** to cancel the playback.
- **Vibrate:** Select vibration options for emergency message notifications.
- **Alert reminder** Configure the reminder interval.

Music Settings


Set options for the Music application.

Tip: You can also access Music settings from the Music app. From Home, tap **Apps**  > **Music**  > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

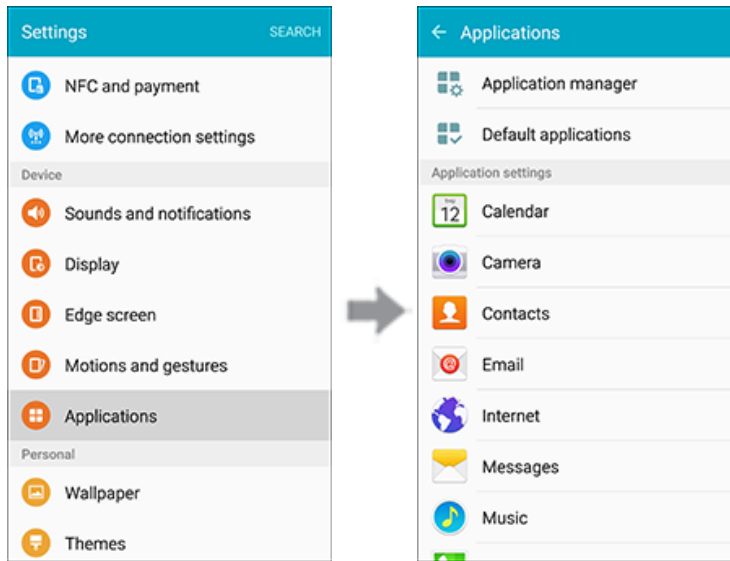

2. Tap **Music** to configure settings:

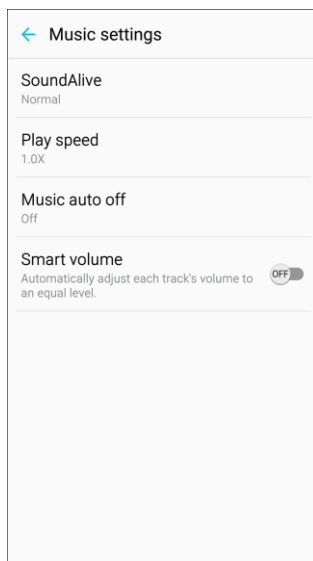


- **SoundAlive:** Choose a setting to match the type of music you're playing.
- **Play speed:** Touch and drag the slider to set the default speed for music playback.
- **Music auto off:** Choose a time period for music to play, after which Music will close.
- **Smart volume:** Automatically adjust the volume of all songs to an equal level.

Phone Settings


Configure options for calling with your phone.

Tip: You can also access Phone settings from the Phone app. From home, tap **Phone**  > **MORE** > **Settings**.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

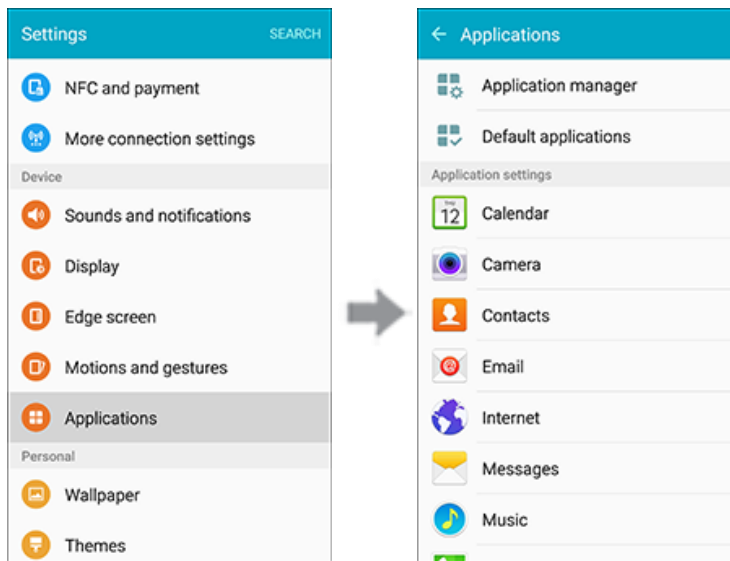

2. Tap **Phone** to configure options:

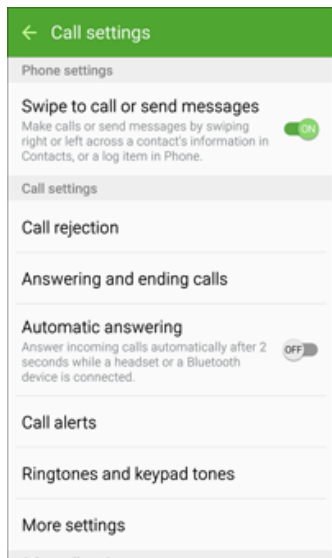

- **Swipe to call or send messages:** Make calls or send messages by swiping right or left across a contact's information in Contacts, or a log item in the Phone app.

- **Call rejection:** Create and manage a list of phone numbers, to have your phone automatically reject calls you receive from those numbers.
 - **Auto reject list:** Enter telephone numbers, to reject calls from the numbers when Auto reject mode is turned on.
 - **Rejection messages:** Create and manage text messages to send to callers when rejecting incoming calls. Messages you create here are available from the incoming call screen when you use the Reject with message option
- **Answering and ending calls:** Manage settings for answering and ending calls.
 - **Pressing the Home key:** Answer calls by pressing the Home key.
 - **Using voice commands:** Say “Answer” or “Reject” to answer or reject calls with your voice.
 - **Pressing the Power key:** End calls by pressing the Power key.
- **Automatic answering:** Answer incoming calls automatically after two seconds while a headset or Bluetooth device is connected.
- **Call alerts:** Set options for sounds and vibrations to occur during calls.
 - **Vibrate when answered:** The phone vibrates when a call connects to the network.
 - **Vibrate when call ends:** The phone vibrates when the other caller ends the call.
 - **Call connect tone:** The phone plays a tone when the other caller answers a call.
 - **Call end tone:** The phone plays a tone when the other caller ends the call.
 - **Notify during calls:** Notifications for alarms and new messages play during calls. When disabled, these notifications will be muted during a call.
- **Ringtones and keypad tones:** Choose tones and vibrations to play for incoming calls and keypad taps.
 - **Ringtones:** Select a ringtone for incoming calls.
 - **Vibrations:** Select a vibration pattern to play for incoming calls when the Vibrate when ringing option is enabled.
 - **Vibrate when ringing:** Vibrate the phone for incoming calls. The vibration pattern is set with the Vibrations setting.
 - **Dialing keypad tone:** Play tones for keypad taps.
- **More settings:** Settings for TTY and Hearing Aids are located in this option.
 - **TTY mode:** A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY

device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect using a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.


- **Hearing aids:** Improve the sound quality for use with hearing aids.
- **US dialing:** Replace “+” with the international access code for your location.
- **International dialing:** Use the International dialing code to replace “+”.
- **DTMF tones:** Set the length of Dual-tone Multi-frequency (DTMF) tones which play when you use the keypad during a call, such as when navigating menus.
- **Voicemail settings:** Set options for Visual Voicemail. See [Configure Visual Voicemail Settings](#).

S Voice Settings


Configure options for using your voice to interact with your phone.

Tip: you can also access S Voice settings from the S Voice app. From a Home screen, tap **Apps**  > **S Voice**  > **Settings** .

1. From home, tap **Apps**  > **Settings**  > **Applications** .

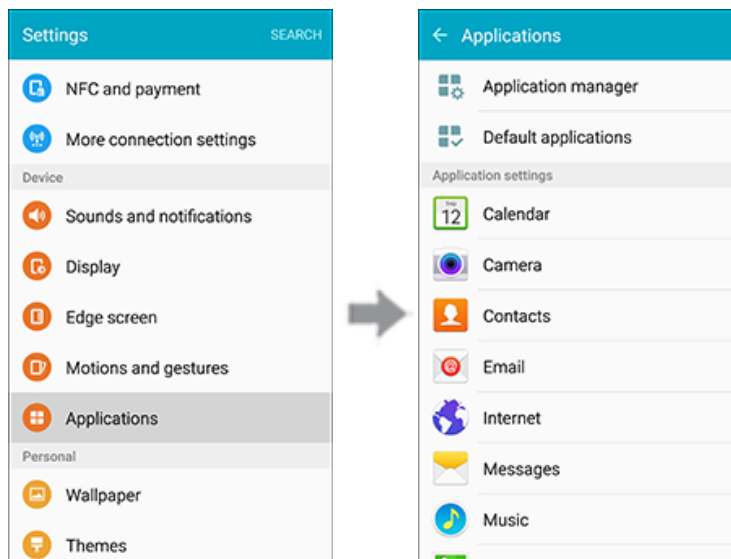

2. Tap **S Voice** to configure options:

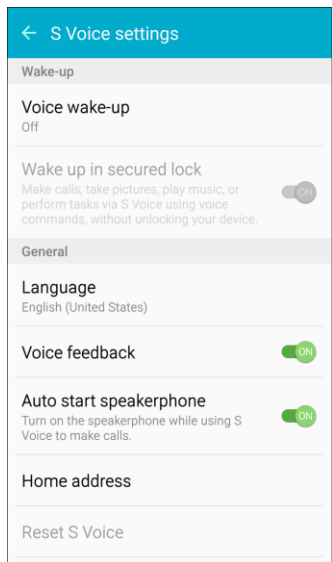


- **Voice wake-up:** When turned on, you can launch S Voice by speaking a wake-up command.
- **Wake up in secured lock:** Make calls, take pictures, play music, or perform tasks via S Voice using voice commands without unlocking your phone.
- **Language:** Choose a language to use for S Voice.
- **Voice feedback:** Enable spoken feedback when using S Voice.
- **Auto start speakerphone:** When enabled, the speaker is automatically turned on when you make a call with S Voice.
- **Home address:** Configure your home address.
- **Reset S Voice:** Erase the data you have stored on the server and restore the default S Voice settings.
- **Help:** View information about using S Voice.
- **About S Voice:** Learn about S Voice.


Weather Settings

Configure weather settings for use with the Edge screen, the Lock screen, and the Calendar app.

1. From home, tap **Apps**  > **Settings**  > **Applications** .

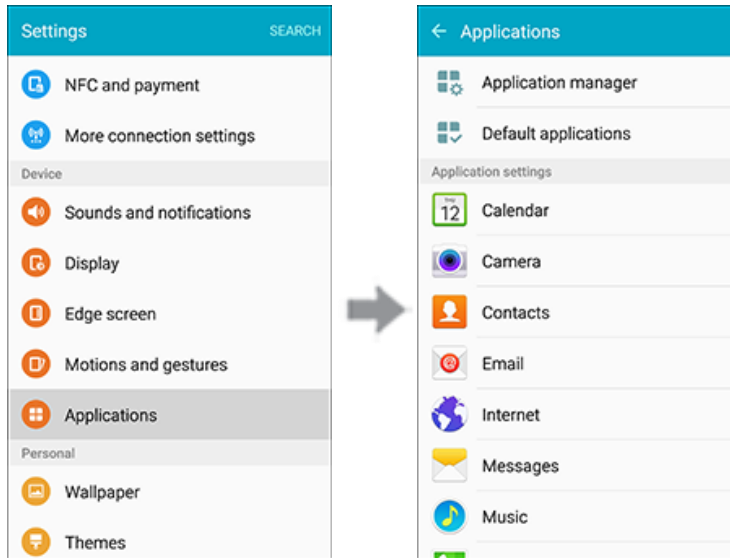

2. Tap **Weather** to configure options:

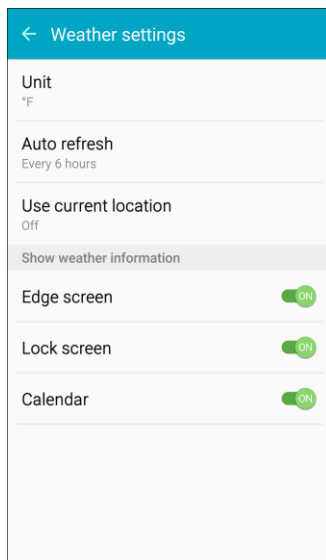

- **Unit:** Select Celsius or Fahrenheit.
- **Auto refresh:** Choose how often weather information is updated.
- **Use current location:** Use your phone's current location to get local weather information.
- **Edge screen:** Show weather information on the Edge screen.


- **Lock screen:** Show weather information on the Lock screen.
- **Calendar:** Show weather information in the Calendar app.

Wallpaper

You can change the wallpaper for the Home and Lock screens.

Change the Wallpaper

1. From home, tap **Apps**  > **Settings**  > **Wallpaper** .

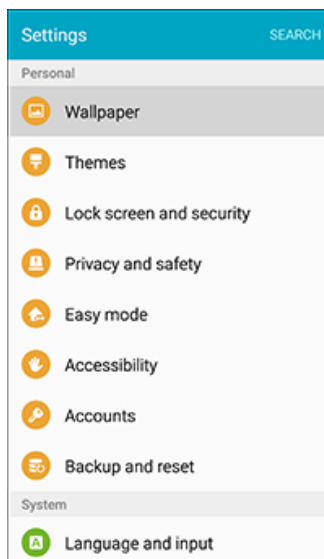

2. Tap **Home screen** to open the drop-down list. Select the screens for which you want to change the wallpaper.



3. Tap a wallpaper to preview it.
4. Tap **SET AS WALLPAPER** to set the selected wallpaper for the screen or screens. If you've selected an image from Gallery, tap **DONE** to apply it as wallpaper.


❖ Your wallpaper is changed.

Themes

Themes are packages of visual content that provide different wallpapers and icons for your phone.

Change the Theme

1. From home, tap **Apps**  > **Settings**  > **Themes** .

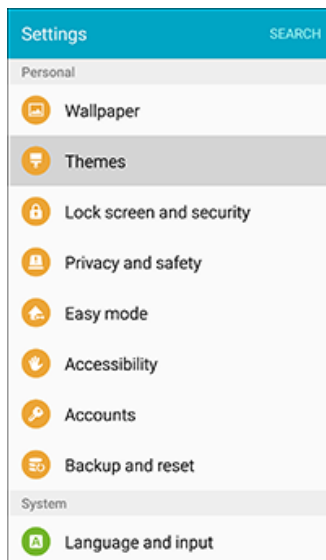

— OR —

Touch and hold an empty area on a Home screen, and then touch **Themes**.

2. Tap a theme to view it.



3. To find other themes, tap **STORE**.
4. To download a theme, tap the theme, and then tap **DOWNLOAD**.
5. To apply a theme, tap the theme, and then tap **APPLY**.

❖ Your theme is changed.

Lock Screen and Security Settings

The Lock screen settings let you set your method for unlocking your phone, customize Lock screen options, determine whether to show tips for unlocking the phone, and enter your owner information to be displayed on the Lock screen.

The Security settings let you set encryption options, password visibility, administrator settings, and credential storage options.

Lock Screen and Security Overview


The following options are available in the Lock screen and security menu (options vary depending on the screen lock selected):

Setting	Description
Screen lock type	Set your screen lock.
Show information	Select items to show on the Lock screen, like a Dual clock, the Weather, and Owner information.
Unlock effect	Set the effect shown when the Lock screen wakes up.

Setting	Description
Secure lock settings	Configure secure lock functions, such as Auto lock and Lock instantly with Power key.
Fingerprints	Register your fingerprint on your phone.
Unknown sources	Allow or deny installation of apps from sources other than the Google Play store app.
Other security settings	Configure settings for encryption, password visibility, security updates, credentials, and other security features.

Access Lock Screen and Security Options

- From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

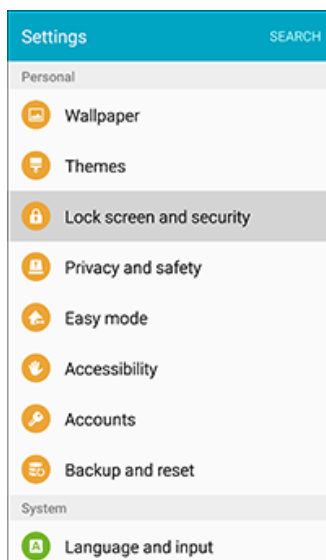

- ❖ The Lock screen and security menu opens.

Screen Lock

You can increase the security of your phone by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, enter the correct password, or scan your fingerprint to unlock the phone's control keys, buttons, and touchscreen.


In order from least secure to most secure, the available screen lock options are:

- Swipe
- Pattern
- PIN
- Password
- Fingerprints
- None

Important: To protect your phone and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your phone and personal data.


Access Screen Lock Settings

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

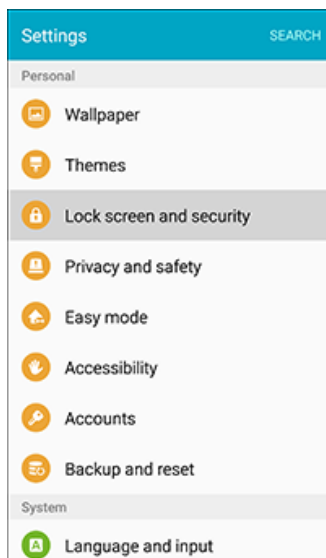

- ❖ The Lock screen and security menu opens.


2. Tap **Screen lock type**.

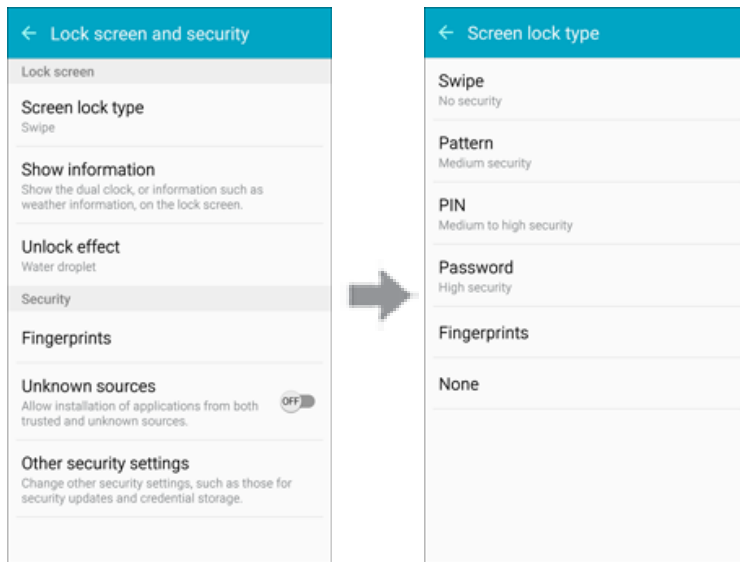

- ❖ The Screen lock settings menu opens.

Use Swipe to Unlock the Screen

- From the Screen lock type menu, tap **Swipe** to save the setting.

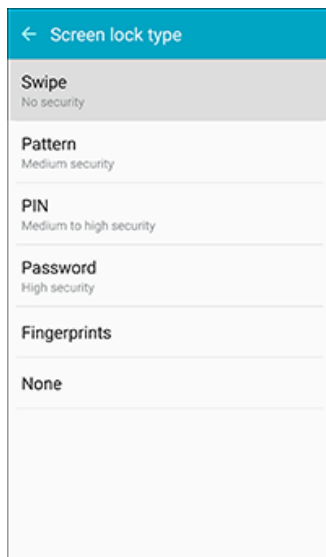


- ❖ The screen lock is set.

Use a Screen Unlock Pattern

1. From the Screen lock type menu, tap **Pattern**.




2. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.

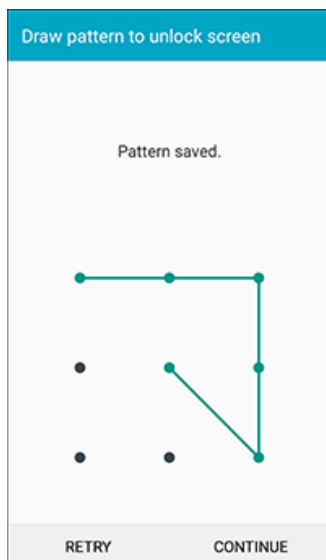

❖ The phone records the pattern.


3. Tap **CONTINUE**.

- When prompted, draw the screen unlock pattern again, and then tap **CONFIRM**.

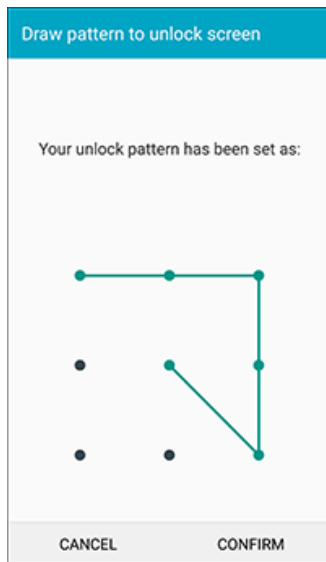

❖ The screen unlock pattern is saved.

- Enter a backup PIN, tap **CONTINUE**, re-enter the PIN, and tap **OK** to save your screen unlock pattern.

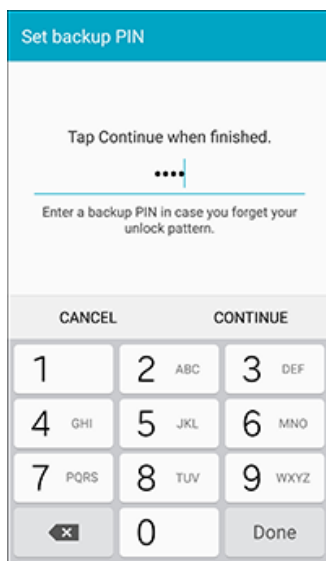

❖ The screen lock is set.


- If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Note: Clear the **Make pattern visible** check box if you do not want the unlock pattern to display on the screen when you unlock it.

Note: To change your unlock screen pattern, from home, tap **Apps**  > **Settings**  > **Lock Screen and Security**  > **Screen lock type**.

Use a Screen Unlock PIN

1. From the Screen lock type menu, tap **PIN**.

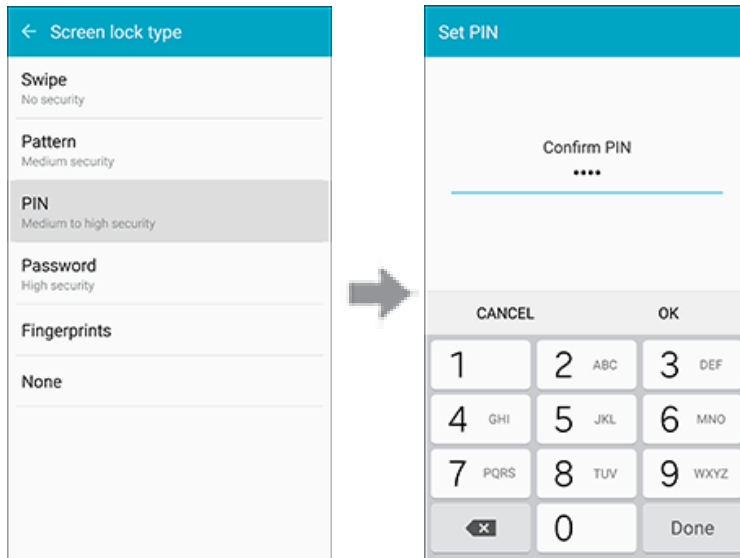


2. Enter a PIN, tap **CONTINUE**, re-enter your PIN, and tap **OK** to save the setting.

- ❖ The screen lock is set
- If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock Password

1. From the Screen lock type menu, tap **Password**.

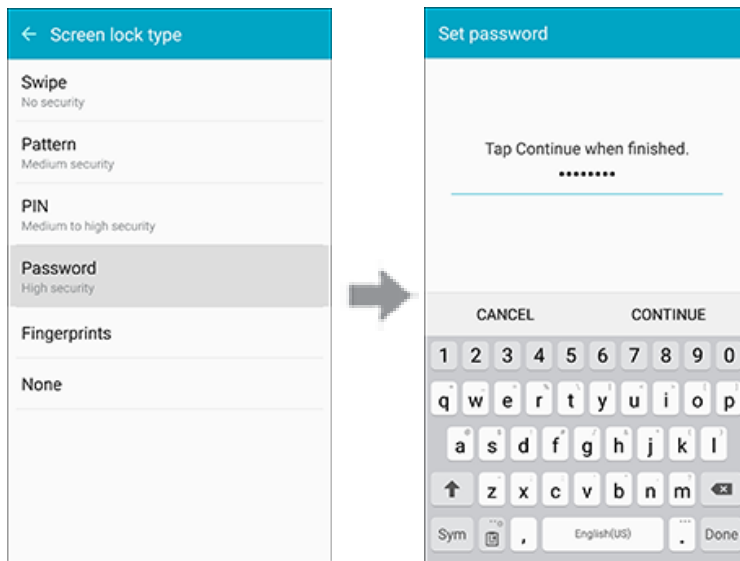

2. Enter a password, tap **CONTINUE**, and then enter your password again to confirm it.

- ❖ The screen lock is set.

- If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.


Important: To protect your phone and data from unauthorized access, it is recommended that you use the screen unlock password (highest security). It is also recommended that you frequently change your password to ensure the safety of your phone and personal data.

Use a Fingerprint Screen Lock

With a Fingerprint screen lock, swipe your finger over the **Home** key.

Note: Before using the Fingerprint screen lock option, you will need to register your fingerprint on your phone.

1. From the Screen lock type menu, tap **Fingerprints**.

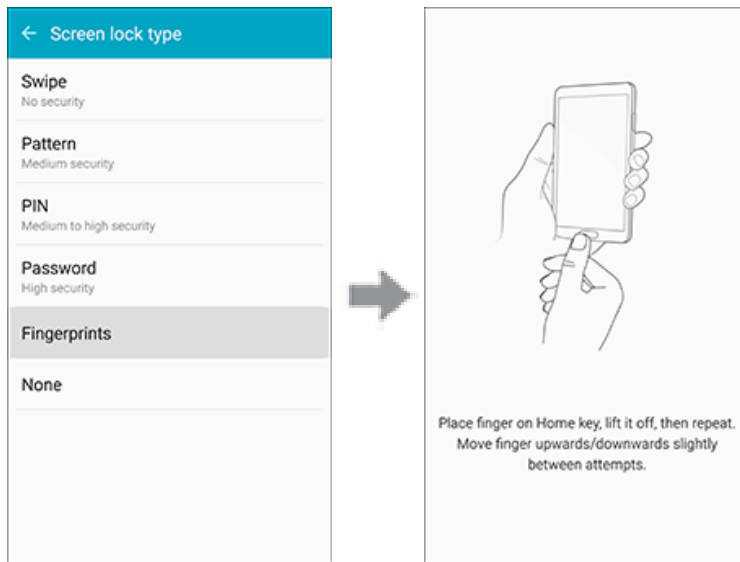


2. Follow the prompts to set up your fingerprints.

Disable the Screen Lock


Follow the instructions below to turn off your current screen lock.

1. From home, tap **Apps**  > **Settings**  > **Lock screen and security** .

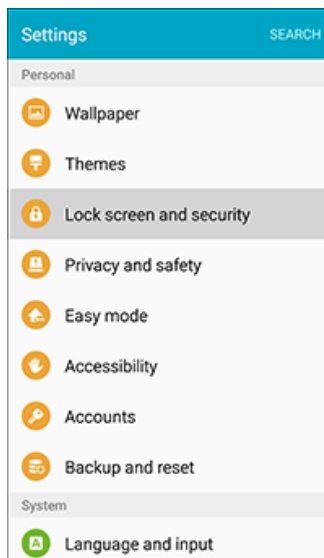


- ❖ The Lock screen and security menu opens.

2. Tap **Screen lock type**.

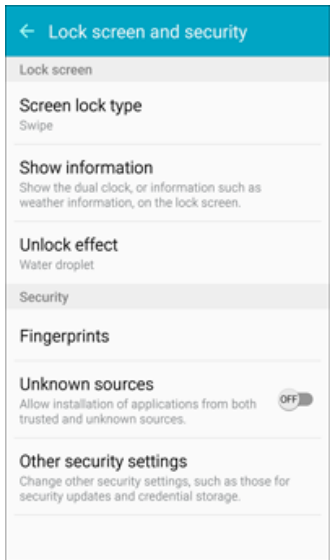

❖ The Screen lock settings menu opens.

3. Draw your unlock screen pattern, enter your PIN or password, or scan your fingerprint.
4. Tap **None**.

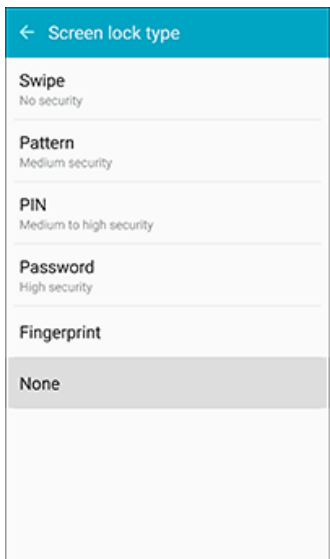

❖ The screen lock is disabled.


Privacy and Safety

Privacy and safety features include locating methods and emergency messaging. The following settings are available.

Privacy and Safety Setting	Description
Location	Select the method used to estimate your location. You can also view the apps that have requested your location and review their history logs.
Private mode	Private mode allows you to hide and protect content you want to keep private. You must configure a security lock to use Private mode.
Report diagnostic info	You can choose to enable reporting of diagnostic info when your phone experiences technical problems.
Send SOS messages	Enable SOS messages to quickly send an alert to your emergency contacts by pressing the Power key three times.

Access Privacy and Safety Settings

- From home, tap **Apps**  > **Settings**  > **Privacy and safety** .

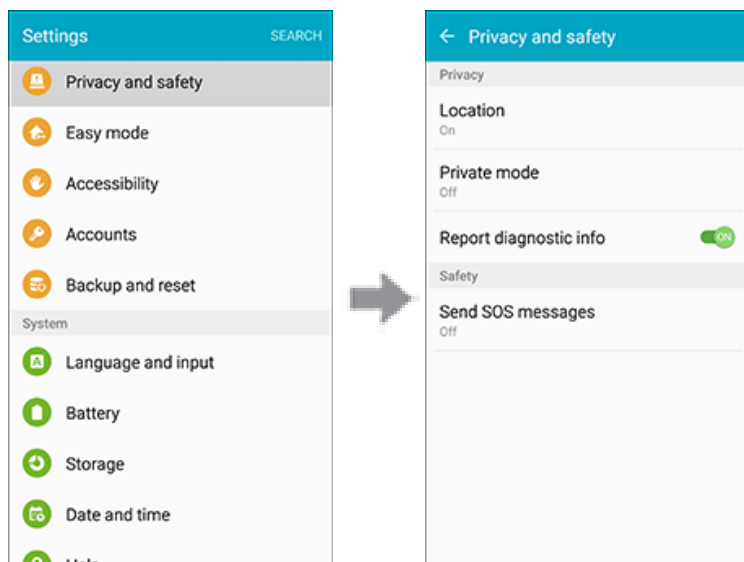


- ❖ The Privacy and safety menu opens.

Private Mode

Private mode allows you to hide and protect content you want to keep private using supported apps. You must configure a security lock to use Private mode.

Activate Private Mode

1. From home, tap **Apps**  > **Settings**  > **Privacy and safety**  > **Private mode**.

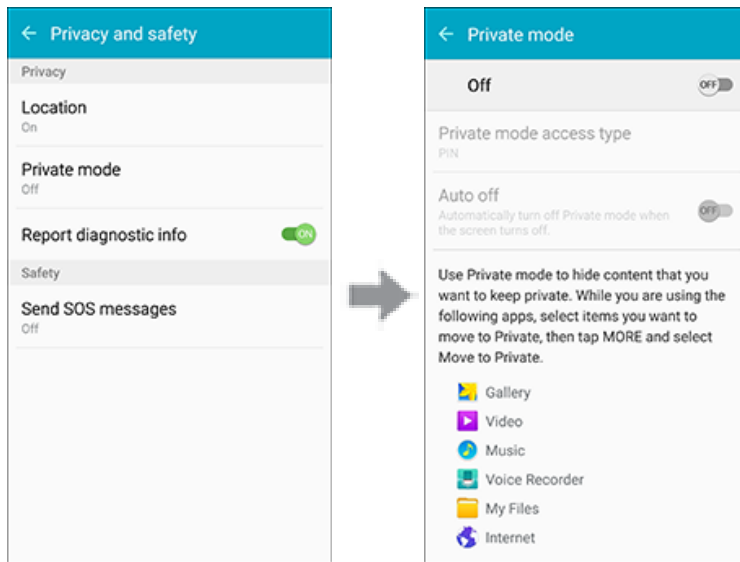


2. Tap the **ON/OFF** switch to turn on Private mode.
3. Follow the prompts to set security for Private mode.

Report Diagnostic Info

You can choose to enable reporting of diagnostic info when your phone experiences technical problems.

Enable Report Diagnostic Info

1. From home, tap **Apps**  > **Settings**  > **Privacy and safety**  > **Report diagnostic info**.

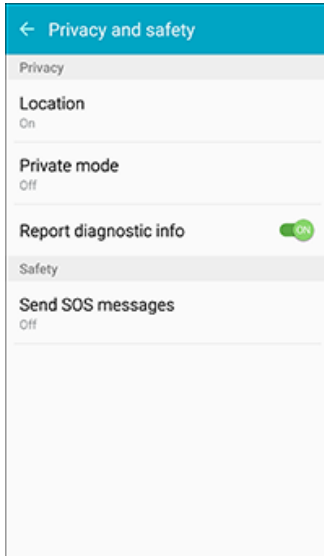


2. Read the consent information and tap **YES** to enable.

Send SOS Message

Enable SOS messages to quickly send an alert to your emergency contacts by pressing the Power key three times.

Configure SOS Messages

1. From home, tap **Apps**  > **Settings**  > **Privacy and safety**  > **Send SOS messages**.

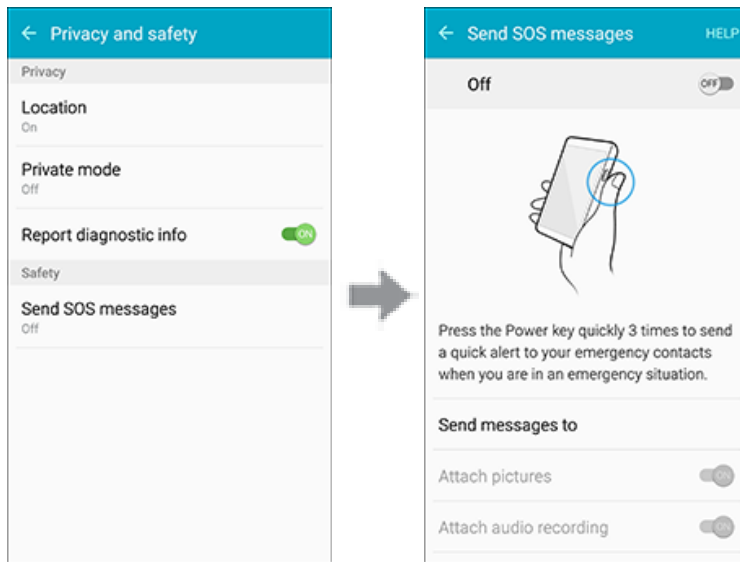

2. Tap the **ON/OFF** switch to activate SOS messaging.
3. Read the Terms and conditions and agree in order to activate SOS messaging.
4. Follow the prompts to set up emergency contacts and enable SOS messaging features.


Location Settings

Your Location services settings menu lets you select how your phone determines its location (using the wireless networks, GPS satellites, both, or neither).


Enable Location Services

Before using any features that require location assistance, you must enable your phone's location services.


1. From home, tap **Apps**  > **Settings**  > **Privacy and safety** .

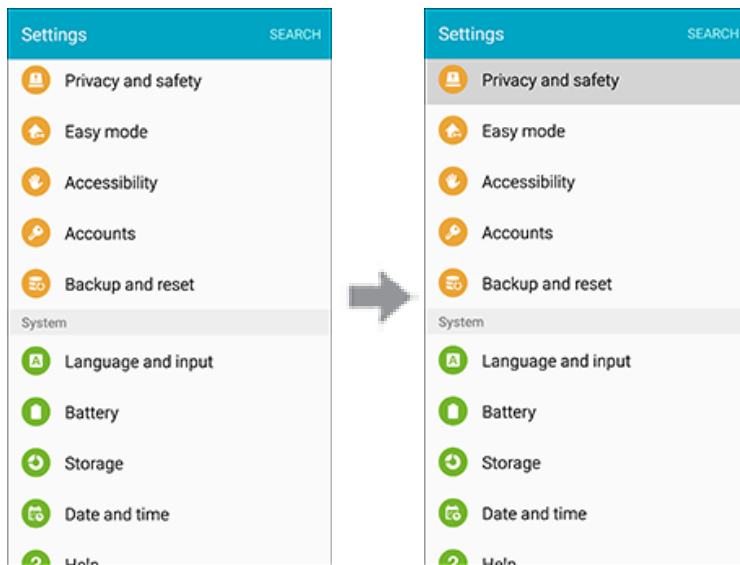

2. Tap **Location**.

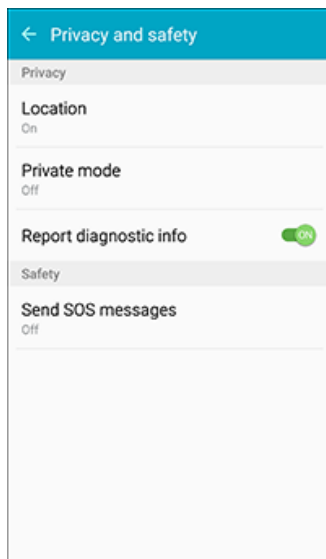

3. Tap the **ON/OFF** switch to enable Location services.

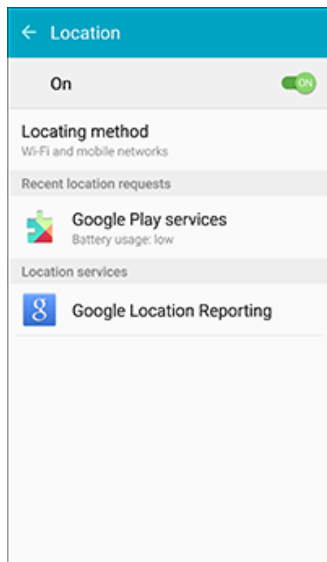


- ❖ Your phone's location services are enabled.
- If you see a confirmation, follow the onscreen instructions to connect.

Changing Location Method


You can change the methods used for determining your location.

Note: Location must be turned on to change locating method.


1. From home, tap **Apps**  > **Settings**  > **Privacy and safety** .

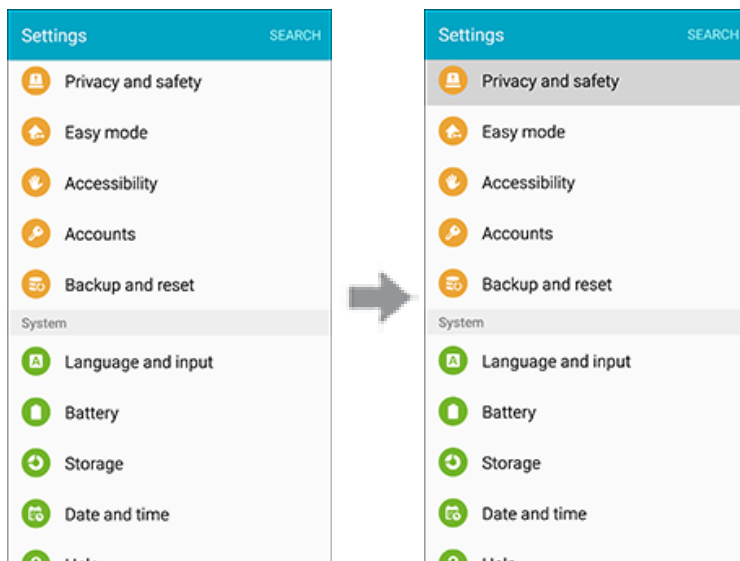

2. Tap **Location**.

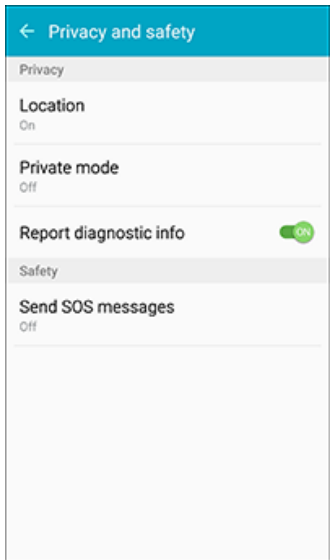

3. Tap **Locating method**.

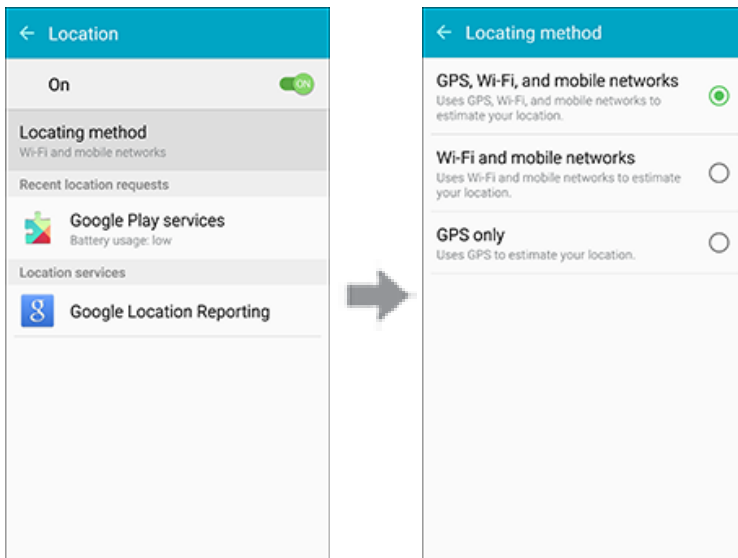

4. Select a locating method. Each mode has a description of which method or methods are used to estimate your location.

❖ Your phone's locating method is set.

Accessibility Settings

The Accessibility menu lets you enable and manage accessibility-related applications.


Accessibility Settings Overview

The following Accessibility options may be configured:

Accessibility Option	Description
Vision	Configure accessibility features for vision.
Hearing	Configure accessibility features for hearing and sounds.
Dexterity and interaction	Configure accessibility features for handling and interactions with the phone.
Direction lock	Unlock the screen by swiping in a series of directions.
Direct access	Open your accessibility settings by pressing the Home key three times in quick succession.
Notification reminder	Set the phone to beep or vibrate at set intervals to remind you of any unread notifications from selected applications.
Answering and ending calls	Answer calls by pressing the Home key, and end calls by pressing the Power key.
Single tap mode	Dismiss or snooze alarms, calendar events, and timer alerts, and answer or reject incoming calls with a single tap.
Manage accessibility	Import and export your accessibility settings, or share them with other devices.
Services	Configure other accessibility services, if installed.

Access Accessibility Options

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

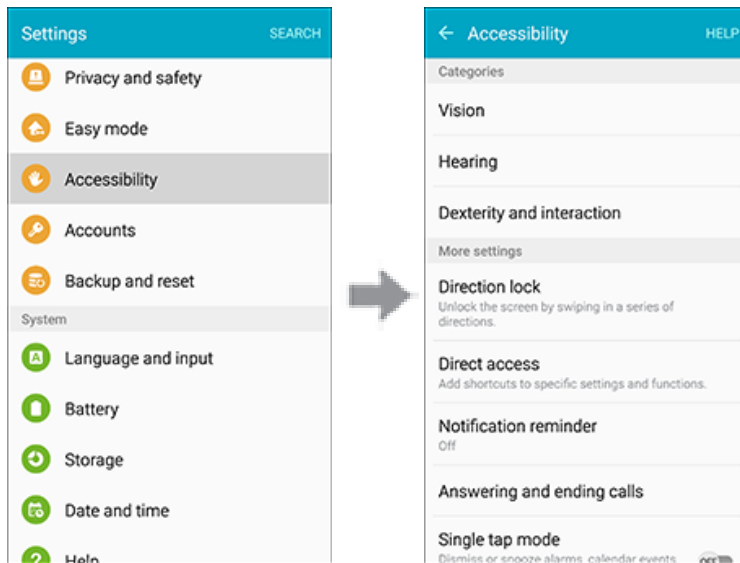


2. Set available accessibility options.
 - ❖ Your accessibility settings are applied and saved.


Vision Accessibility Settings

Your phone offers many features to assist users who are blind or low-vision.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

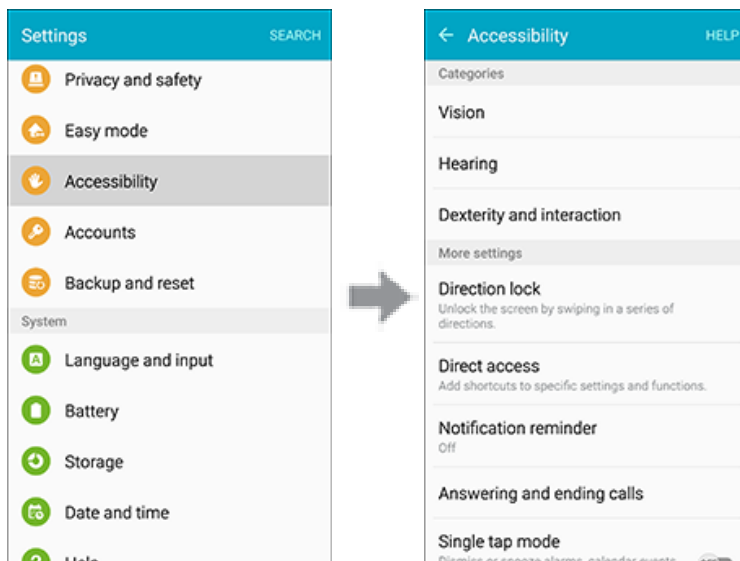

2. Tap **Vision** to configure options:

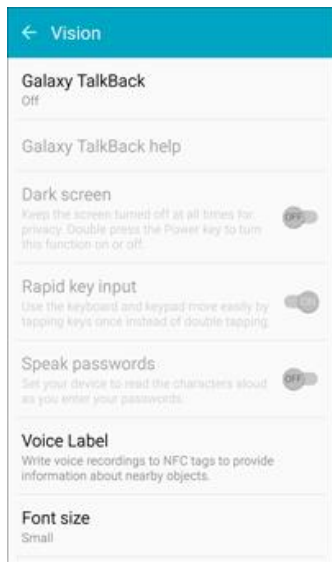


- **Galaxy TalkBack:** Enable the Galaxy TalkBack feature and configure options. When Galaxy TalkBack is on, your phone speaks descriptions of items you tap or activate on your phone, to help blind and low-vision users. When Galaxy TalkBack is turned on, you may need to use a double-tap to select items, because a single tap is used to trigger Galaxy TalkBack.
- **Galaxy TalkBack help:** View tutorials on using Galaxy TalkBack.
- **Dark screen:** Keeps your phone's screen turned off at all times. When Dark screen is enabled, double-press the **Power** key to turn it on or off while using your phone.
- **Rapid key input:** Release your finger to enter a selection, instead of double-tapping it. By default, when you have Galaxy TalkBack turned on, you must double-tap items on the screen to select them. If you turn on Rapid key input, you can tap and release your finger to select and item instead of double-tapping.
- **Speak passwords:** The phone reads out characters entered in password fields. Use caution with this feature, because others near you will be able to hear your passwords.
- **Voice label:** Write voice recordings to NFC tags to provide information about nearby objects.
- **Font size:** Choose the size of text for your phone's screens.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Magnifier window:** Magnify content on shown on the screen.
- **Grayscale:** Display screens in grayscale instead of color.
- **Negative colors:** Screen colors are reversed.
- **Color adjustment:** Adjusts the color of the screen if you have difficulty reading the screen because of the color. Follow the prompts to fine-tune screen colors.

- **Accessibility shortcut:** Quickly turns on accessibility features by pressing and holding the **Power** key until you hear a sound or feel a vibration, and then pressing and holding with two fingers until you hear an audio confirmation.
- **Text-to-speech options:** Configure options for converting text to speech.


Hearing Accessibility Settings

Your phone offers many features to assist users who are deaf or hearing-impaired.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

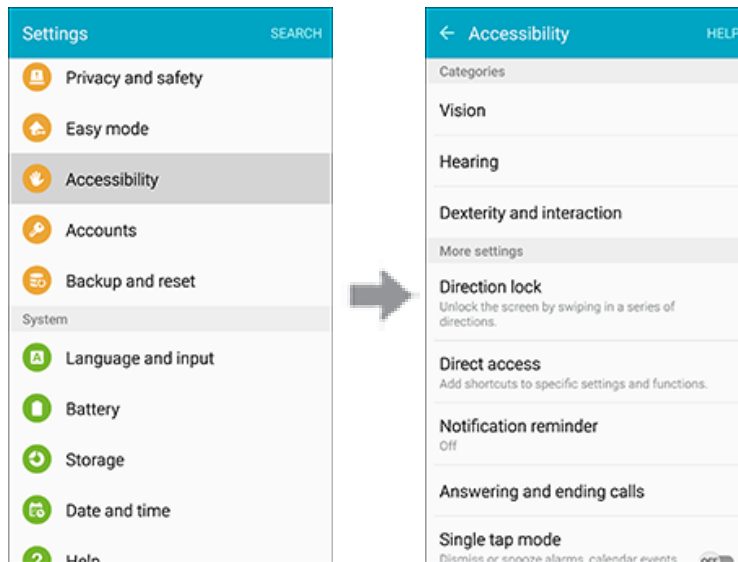

2. Tap **Hearing** to configure options:

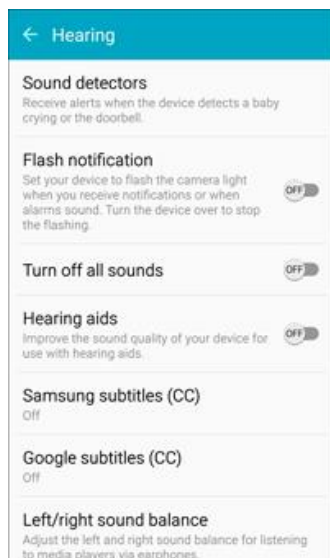


- **Sound detectors:** Vibrate when the phone detects a baby crying or doorbell ring.

- **Flash notification:** Flash the camera light when you receive notifications or when alarms sound. Turn the device over to stop the flashing.
- **Turn off all sounds:** Sounds made by the phone during taps, selections, notifications, etc. is muted.
- **Hearing aids:** Automatically adjusts to attempt to improve the sound quality for use with hearing aids.
- **Samsung subtitles (CC):** Displays Samsung subtitles where available. Tap the **ON/OFF** switch to turn the option on or off, and then tap **Samsung subtitles** to configure options.
- **Google subtitles (CC):** Displays Google subtitles where available. Tap the **ON/OFF** switch to turn the option on or off, and then tap **Google subtitles** to configure options like Language, Text size, and Caption style.
- **Left/right sound balance:** Adjust the sound sent to the left and right when using earphones.
- **Mono audio:** Enable or disable the compression of stereo audio into a single mono audio stream for use with a single earphone.
- **Auto haptic:** Automatically vibrates in response to the sounds of downloadable apps, such as games. Not all apps support this feature.


Dexterity and Interaction Settings

Your phone offers many features to improve accessibility related to the way you interact with touch and movement.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

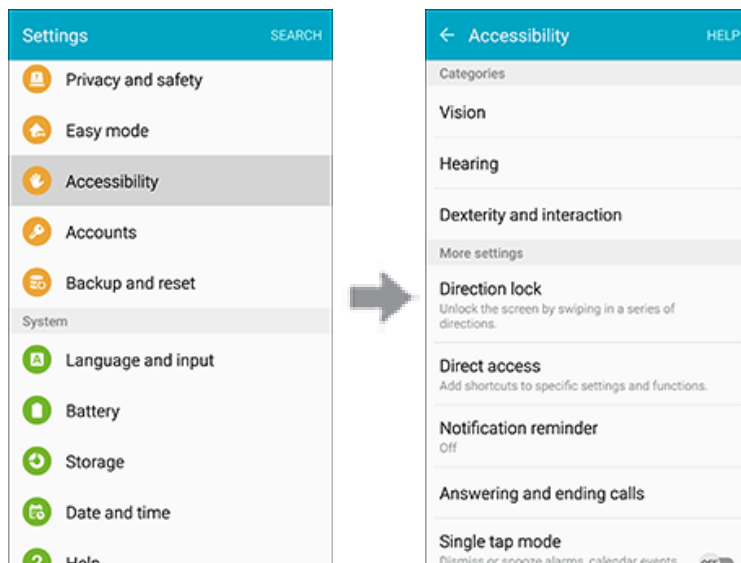

2. Tap **Dexterity and interaction** to configure options:

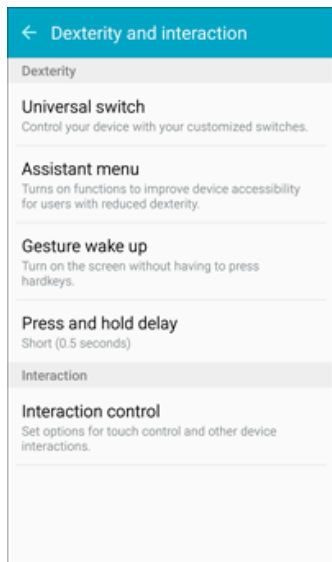

- **Universal switch:** Use customizable switches to interact with your phone and to select items on the screen. Set your personal interaction method by connecting external accessories, tapping the screen, or using the front camera to detect the rotation of your head, the opening of your mouth, and the blinking of your eyes.
- **Assistant menu:** Assistant menu can improve phone accessibility by providing quick access to important functions.
A shortcut  appears on all screens to give you access to the Assistant menu.

Tap **Assistant menu** to configure options:


- Tap the **ON/OFF** switch beside **Assistant menu** to turn the feature on or off. When you turn on Assistant menu, Single tap mode is also enabled.
- **Dominant hand:** Choose whether the Assistant menu displays on the left or right side of the screen
- **Edit:** Re-order or remove items from the Assistant menu.
- **Assistant plus:** When turned on, Assistant plus displays contextual menu options for some apps in Assistant menu. Not all apps support this option. Tap **Assistant plus**, and then tap the **ON/OFF** switch to turn the option on or off. After you turn on Assistant plus, enable or disable apps to use with Assistant plus.
- **Touchpad size:** Choose a size for touchpads for use in your phone's screens.
- **Cursor size:** Choose the size of cursors, to display on the screen.
- **Cursor speed:** Choose a speed for cursor blinks.
- **Zoom percentage:** Set the percentage of zooming in when using Assistant menu.
- **Magnifier size:** set the size of magnification when using Assistant Menu.

- **Gesture wake up:** Move your hand over the screen to turn it on, if the phone is face up on a stable surface.
- **Press and hold delay:** Choose how long your phone waits during a tap and hold gesture on the screen, before continuing with the tap and hold action.
- **Interaction control:** Control how your phone interprets motions and screen touches. To turn Interaction control on or off at any time, press and hold the Home key and the down **Volume** key at the same time. When Interaction control is on, you can use motions to control your phone, and screen timeout is turned on. You can also block areas of the screen from touch interaction. Automatic screen rotation and hard-key functions (Power key, Volume key, etc.) will be turned off, and app notifications will only be shown in the Notification Panel and Status Bar.

Configure Other Accessibility Settings

Your phone offers many features to improve phone accessibility.

1. From home, tap **Apps**  > **Settings**  > **Accessibility** .

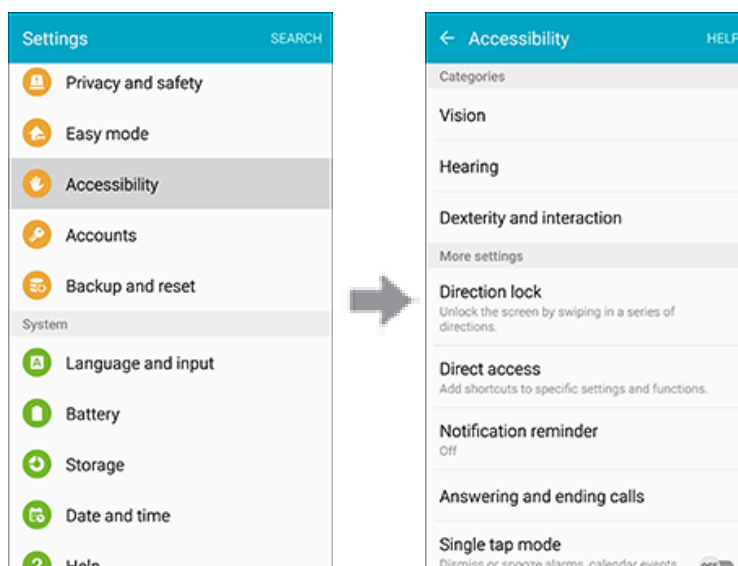

2. Configure additional accessibility options:
 - **Direction lock:** Unlock the screen by swiping in a series of directions.
 - **Direct access:** Access common accessibility settings from any screen by pressing the Home key rapidly 3 times in a row.
 - **Notification reminder:** Phone beeps at set intervals to remind you of unread notifications.
 - **Answering and ending calls:** Select options for answering and ending calls.
 - **Pressing the Home key:** Answer calls by pressing the Home key.
 - **Using voice commands:** Say "Answer" or "Reject" to answer or reject calls with your voice.

- **Pressing the Power key:** End calls by pressing the Power key.
- **Single tap mode:** When enabled, you can use a single tap to dismiss or snooze alarms, notifications and alerts, and answer or reject calls.
- **Manage accessibility:** Choose settings for exporting, updating, and sharing the accessibility settings as a file.


Note: Additional accessibility services you have installed are displayed under the **Services** heading.

Add Accounts


The Accounts settings menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

Set Up a New Account

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

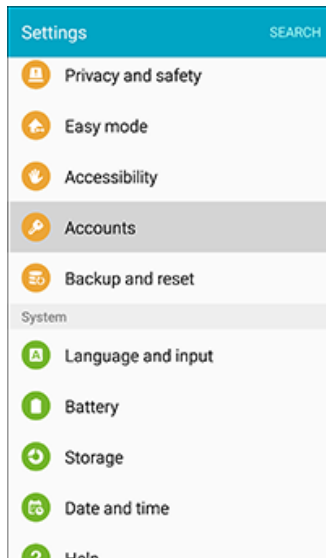

2. Tap **Add account**.

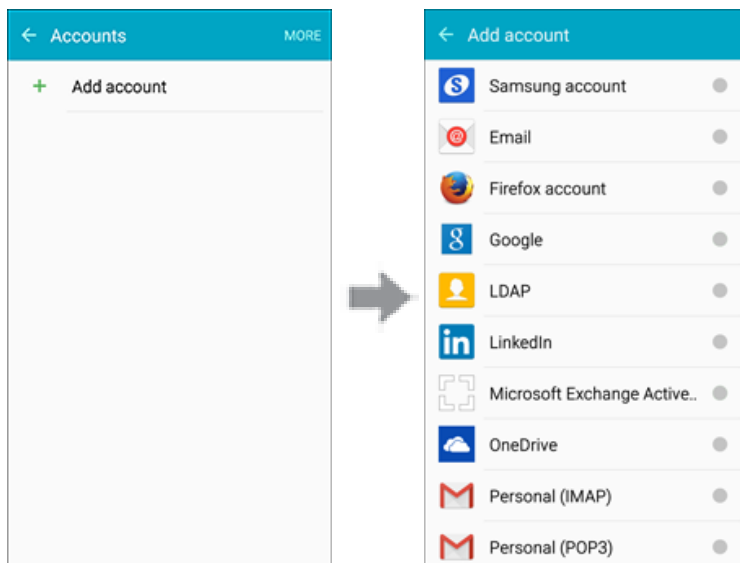


❖ An Add account window appears.

3. Tap an account type and then follow the onscreen instructions to add the required account information.


❖ The account is added to the accounts list.

Manage Existing Accounts

1. From home, tap **Apps**  > **Settings**  > **Accounts** .

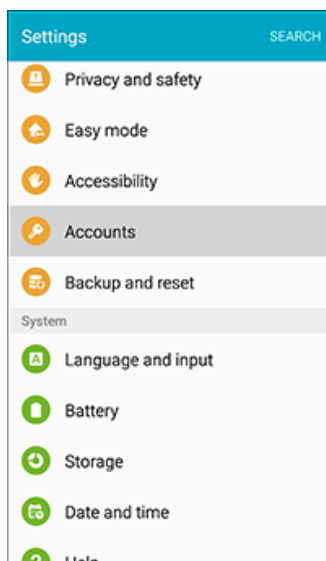

2. Tap the account type to see the existing accounts.

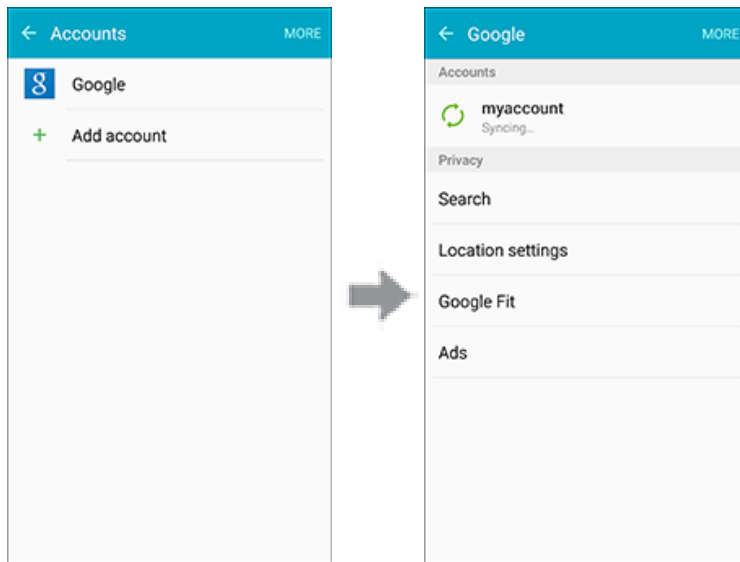

❖ The account settings menu appears.

3. View and configure your account settings as desired.

❖ The account options are updated.

Backup and Reset

Your phone's **Backup and reset** menu lets you back up your phone's data and settings to Google servers before resetting your phone to the original factory settings. The Factory data reset erases all data from the phone's application storage, including:

- Your Samsung account
- Your Google account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

Backup and Reset Overview


The following options are available in the Back up and reset menu:

Backup and Reset Option	Description
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to your Samsung account.
Restore	When reinstalling an application, backed up settings and data will be restored from your Samsung account.
Backup account	Select the Google account used to back up data.
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to your Google account.
Automatic restore	When reinstalling an application, backed up settings and data will be restored from your Google account.
Factory data reset	Reset all settings and delete all data on phone.


- Performing a factory data reset erases all data on the phone. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

Access Backup and Reset Options

1. From home, tap **Apps**  > **Settings** .

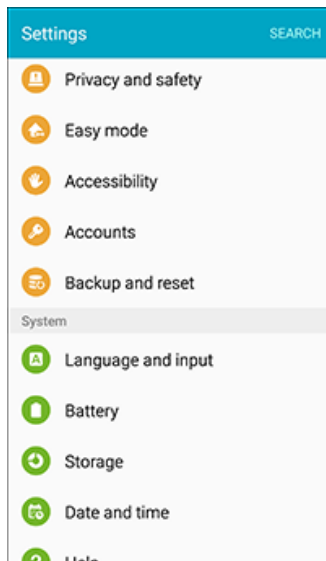

2. Tap **Backup and Reset** .

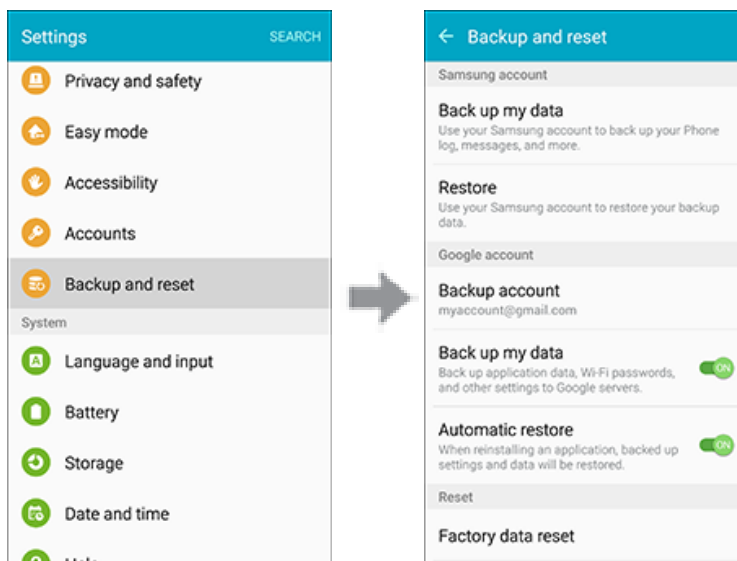

❖ The Backup and reset menu opens.

3. Set options.

❖ The backup and reset settings are applied and saved.


- If you are performing a Factory data reset, follow the prompts to confirm the data removal. The phone will erase all data and reboot.

Factory Data Reset

1. From the Backup and reset menu, tap **Factory data reset**.



2. Read the factory data reset information page and tap **RESET DEVICE**.

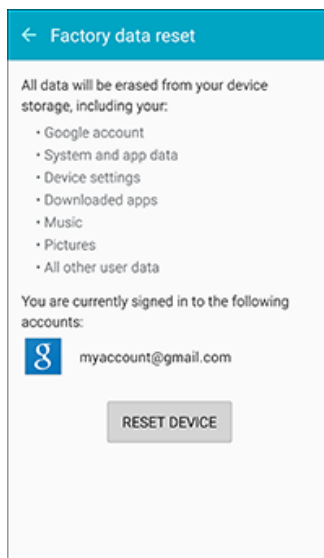

3. Tap **DELETE ALL**.



- ❖ Your phone will power down and reset itself, which may take up to 10 minutes.
- Once the phone has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Screens](#) to start over.

Language and Input Settings

Your phone's language and input settings let you select a language for the phone's menus and keyboards, select and configure keyboard settings, configure speech input settings, and set your phone's mouse/trackpad options.


Language and Input Settings Overview

You can set the following options in the Language and input settings menu:


Language and Input Setting	Description
Language	Set the language for your display and menus.
Default keyboard	Set the default method for entering text.
Samsung keyboard	Set Samsung keyboard options.
Google voice typing	Set options for Google Voice text entry.
Voice input	Set your voice search options.
Text-to-speech options	Set text-to-speech options.
Pointer speed	Set the speed of the pointer for a mouse/trackpad.

Access Language and Input Setting Options

1. From home, tap **Apps**  > **Settings** .

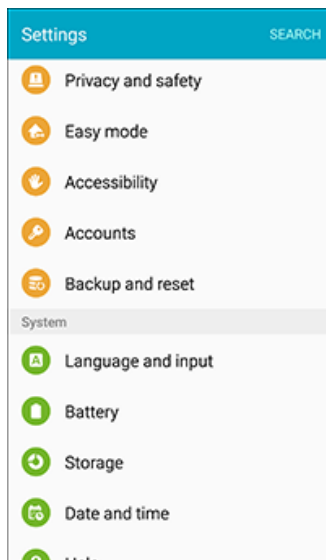

2. Tap **Language and input** .

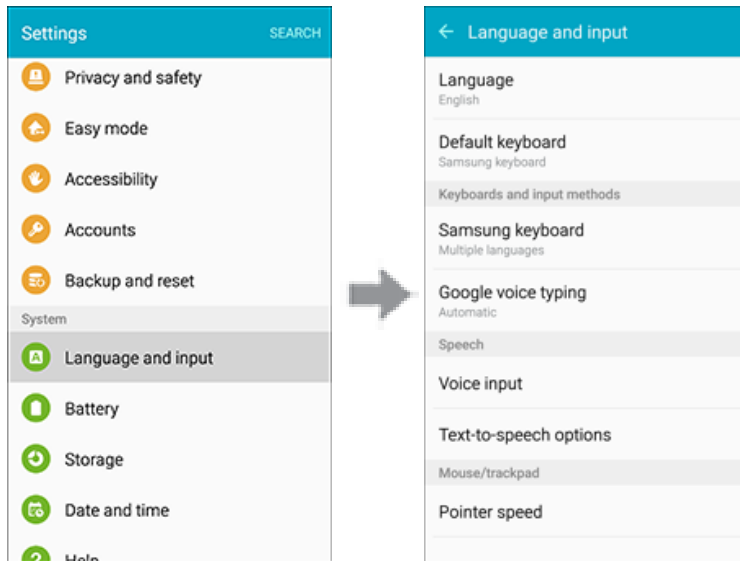

- ❖ The Language and input settings menu opens.
3. Set options.
 - ❖ The language and input settings are applied and saved.

Select the Default Language for Your Phone

1. From home, tap **Apps**  > **Settings**  > **Language and input**  > **Language**.
2. Tap an available language.

Language and Input Options

Some of the language and input options are detailed below.


1. From home, tap **Apps**  > **Settings**  > **Language and input** .
2. Set options:
 - **Set the Display Language:** From the Language and input settings menu, tap **Language** and then tap a language to assign it.
 - **Set Input Method:** From the Language and input setting menu, tap **Default keyboard** and then tap an input method.
 - **Set Samsung Keyboard Options:** From the Language and input settings menu, tap **Samsung keyboard** and configure your keyboard options.
 - **Set Google Voice Typing Options:** From the Language and input settings menu, tap **Google voice typing** and configure your options, including language detection.

- **Set Voice Input When Using Voice Search:** From the Language and input settings menu, tap **Voice input**, tap a settings option, and follow the onscreen instructions.
- **Set Output for Text-to-Speech:** From the Language and input settings menu, tap **Text –to–speech options**, tap a settings option, and follow the onscreen instructions.
- **Set Speed of Pointer for Mouse/Trackpad:** From the Language and input settings menu, tap **Pointer speed**, drag the bar to adjust the speed, and tap **OK**.


Battery Settings

Monitor your phone's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage. You can also display the battery charge remaining as a percentage on the Status Bar.


1. From home, tap **Apps**  > **Settings** .

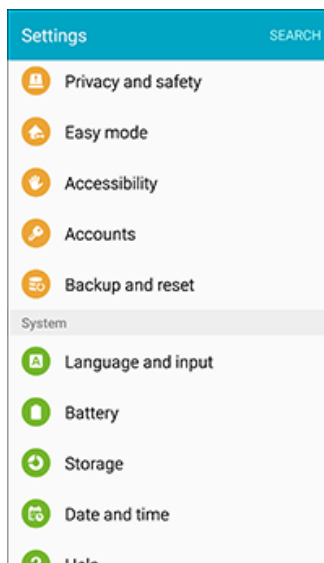

2. Tap **Battery** .

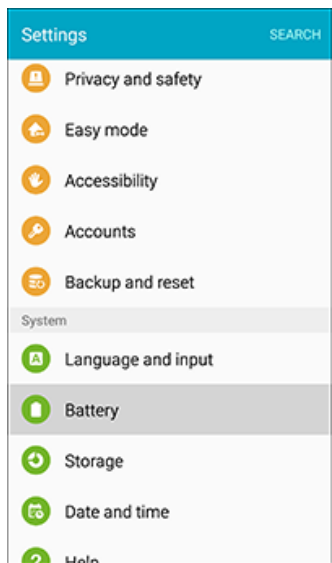

3. Tap **Display battery percentage** to show the percentage of battery charge remaining on the Status Bar.

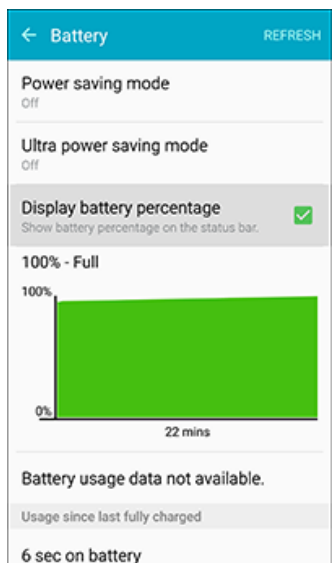


4. Tap items to view details.
 - ❖ Check your battery condition and access additional options.

Power Saving Mode


Save battery power by activating Power saving mode, which reduces or turns off certain features to decrease battery consumption.

Turn On Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

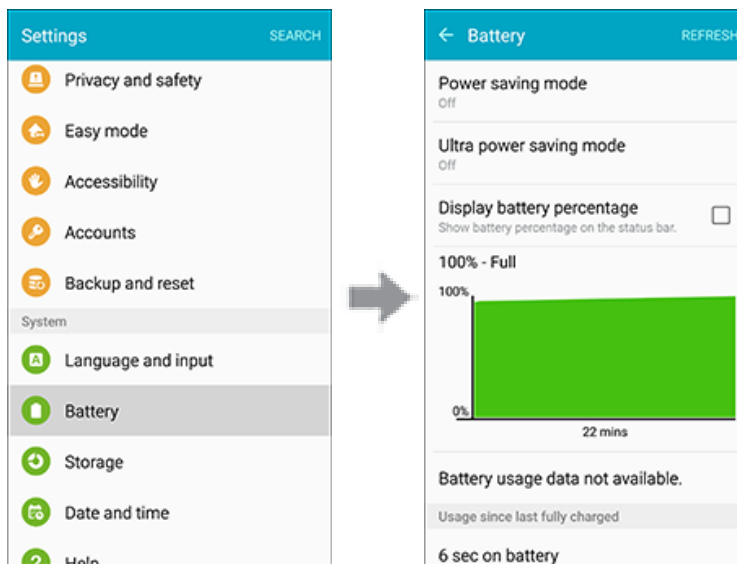

2. Tap **Power saving mode**.

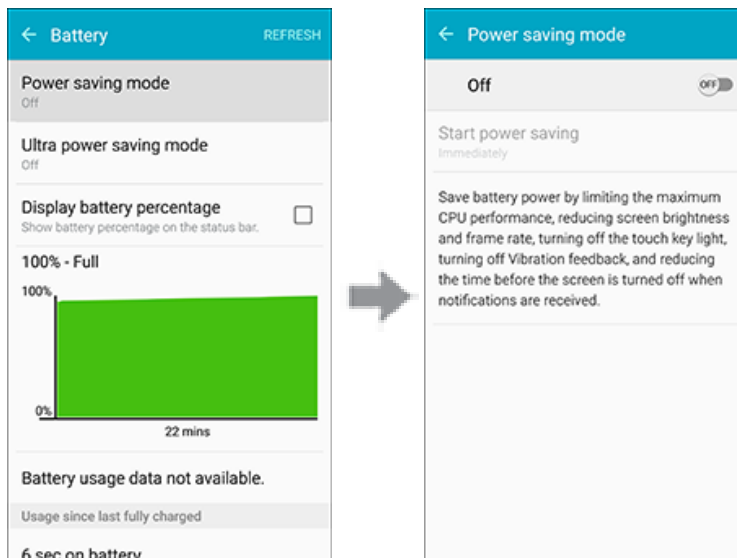

3. Tap the **ON/OFF** switch to enable Power saving mode.


❖ Power saving mode is activated.

Ultra Power Saving Mode


Conserve power and extend your phone's battery life by using a minimal Home screen layout, limiting the number of usable apps, turning off mobile data when the screen is off, and turning off connectivity features such as Wi-Fi and Bluetooth.

Turn On Ultra Power Saving Mode

1. From home, tap **Apps**  > **Settings**  > **Battery** .

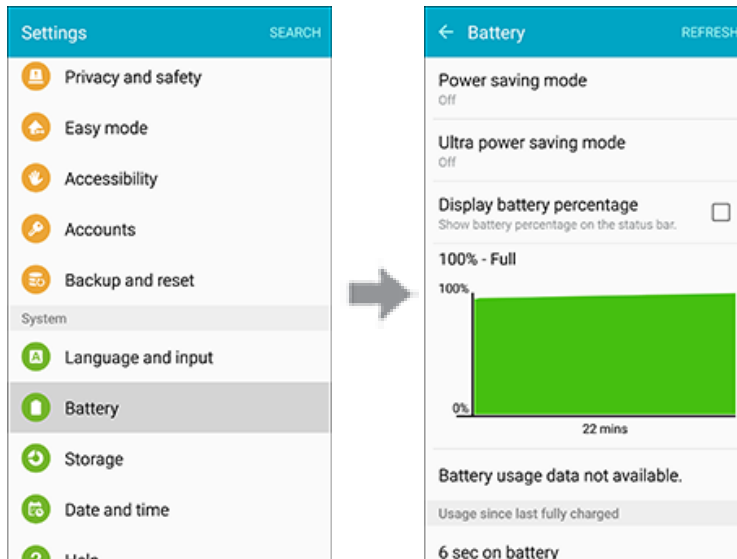

2. Tap **Ultra power saving mode**.

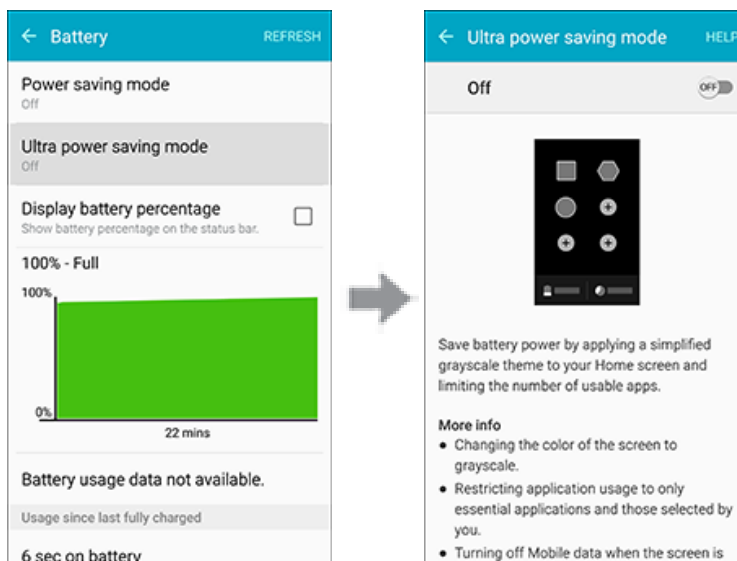


3. Tap the **ON/OFF** switch to enable Ultra power saving mode.

❖ Ultra power saving mode is activated.

Turn Off Ultra Power Saving Mode

- From home, tap **MORE** > **Turn off Ultra power saving mode**.

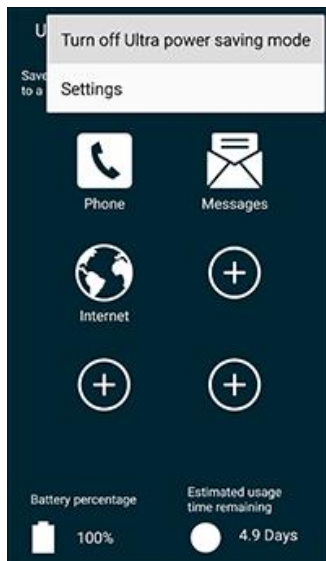

- ❖ The phone returns to normal power mode.

Storage Settings

The Storage settings menu lets you manage internal storage on your phone.


Storage Settings Overview

The sound settings menu allows you to configure the following options:


Storage Device	Description
DEVICE MEMORY	● Total space: View the total space/free space in your phone's memory. ● Available space: The amount of storage space currently available. ● System memory: The minimum amount of storage space required to run the system. ● Used space: The amount of storage space currently being used. ● Cached data: The amount of data currently cached. ● Miscellaneous files: The amount of memory used to store miscellaneous files.

Access Storage Settings

1. From home, tap **Apps**  > **Settings**  > **Storage** .

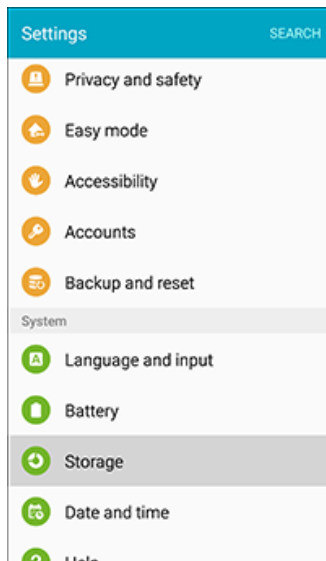

2. View memory usage for the different types of information stored in your phone's memory. Tap an item for more information.

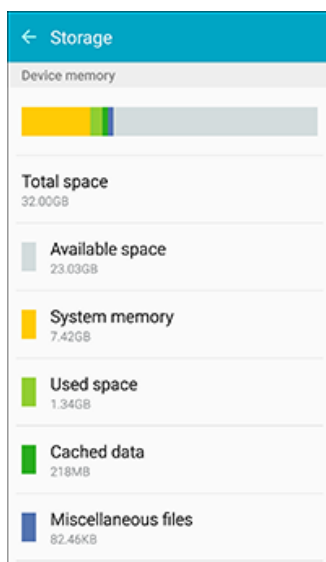

Date and Time Settings

Use the Date and Time settings menu either to automatically use the network-provided date and time or manually set these values, as well as select time and date format options.


Date and Time Overview

The following Date and time options may be configured:


Date and Time Option	Description
Automatic date and time	Set the date and time automatically via the connected wireless network.
Automatic time zone	Set the time zone automatically via the connected wireless network.
Set date	Set the date manually (only available when Automatic date and time option is disabled).
Set time	Set the time manually (only available when Automatic date and time option is disabled).
Select time zone	Set the time zone manually (only when Automatic time zone is disabled).
Use 24-hour format	Enable or disable 24-hour format.
Select date format	Set the date display format.

Access Date and Time Options

1. From home, tap **Apps**  > **Settings** .

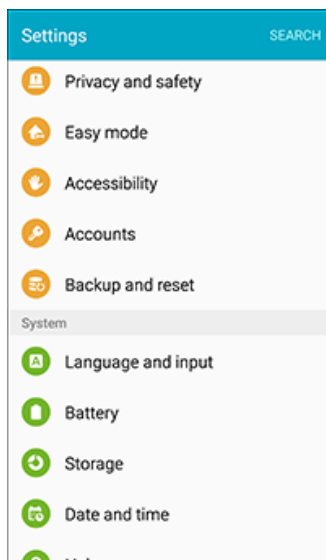

2. Tap **Date and time** .

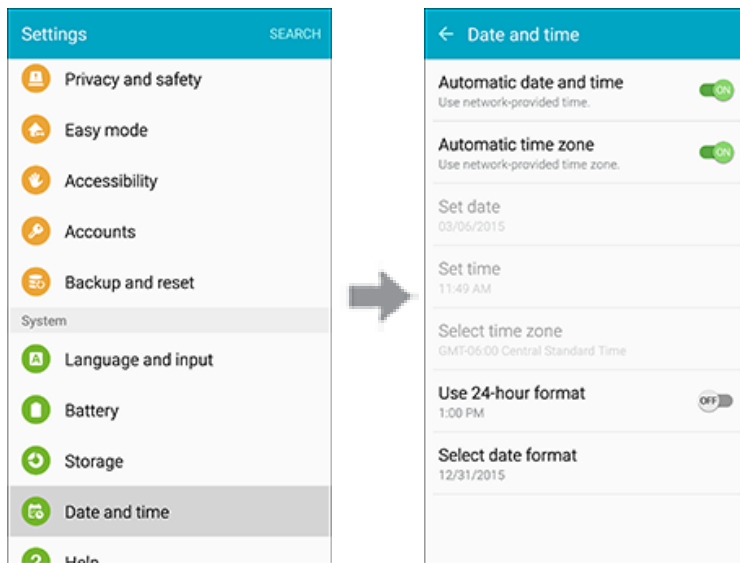


3. Set available date and time options.
 - ❖ Your date and time settings are applied and saved.

Help

The Help menu provides tips and guidelines to help you use your phone.

Access Help

1. From home, tap **Apps**  > **Settings**  > **Help** .

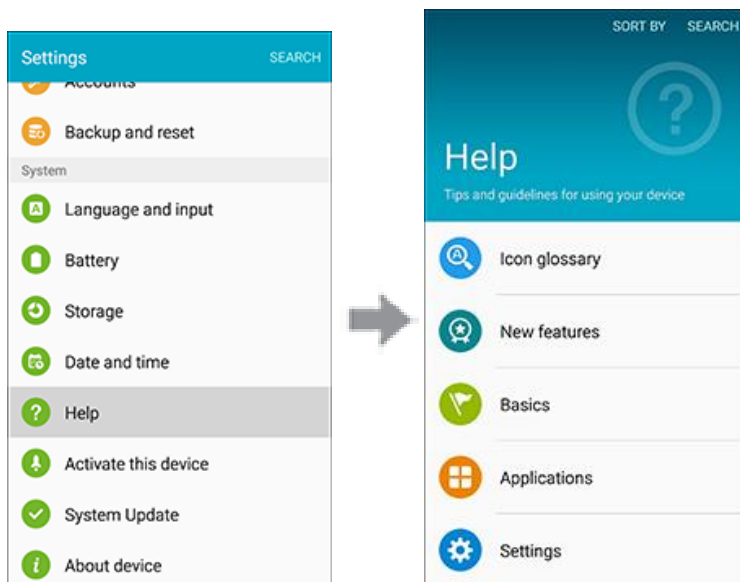


- ❖ The Help menu and topics appear.

2. Tap on a topic to view its contents.
3. Tap **SEARCH** to search for a topic.


Activate This Device

The Activate this device menu lets you activate a new phone or use additional self-service options such as checking the status of an in-service phone.

1. From home, tap **Apps**  > **Settings** .

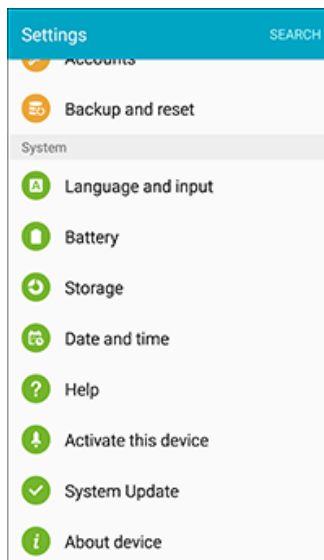

2. Tap **Activate this device** .

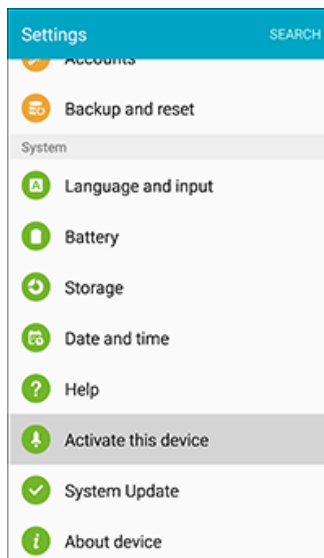

- ❖ The Self Service menu appears.


3. Follow the onscreen prompts to activate your phone or review your summary.
 - ❖ Your phone activates. If already activated on an account, you will see a usage and plan summary.

System Update

The System Update menu provides settings for keeping your phone up-to-date with the latest software.

Access System Update

- From home, tap **Apps**  > **Settings**  > **System Update** .

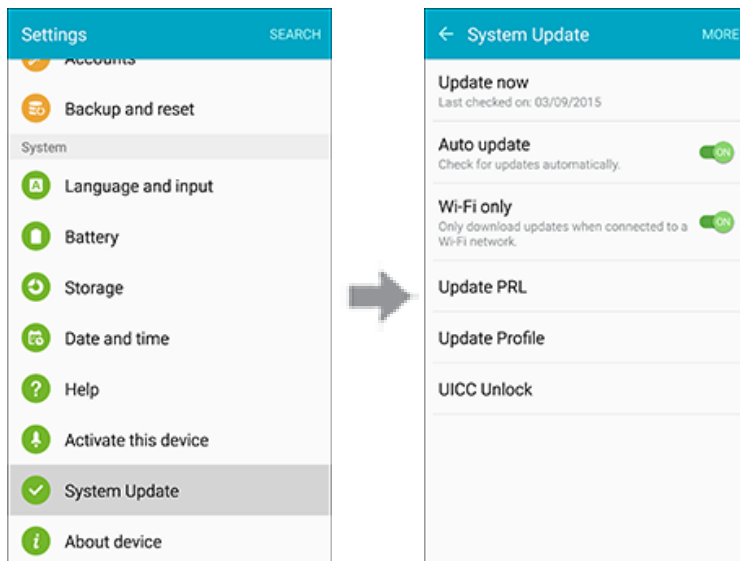

- ❖ The System Update menu appears.

For details about updating your phone, see [Update Your Phone](#).

About Device

The About device menu lets you access important phone information, search for and apply updates, and view legal and safety information.


About Device Overview

The following About device items may be reviewed or set:


About Device Item	Description
Software version	Check your current software version.
Hardware version	Check your current hardware version.
Status	Check your phone's status. Status information includes helpful information about battery status and level, network information, service, roaming, addresses for IP, MAC, and Bluetooth, and more. It also includes the phone number and username assigned to your phone.
Legal information	Check copyright information, terms of use, etc.
Device name	Change the name of your device (other devices see this name when using Mobile hotspot or Bluetooth).
Model number	Check the phone's model number.
Android version	Check the Android version number.
Baseband version	Check the phone's baseband version.
Kernel version	Check the phone's kernel version.
Build number	Check the current phone build number.

Access About Device Options

1. From home, tap **Apps**  > **Settings** .

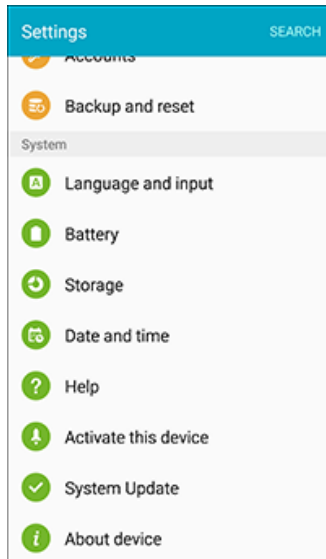

2. Tap **About device** .

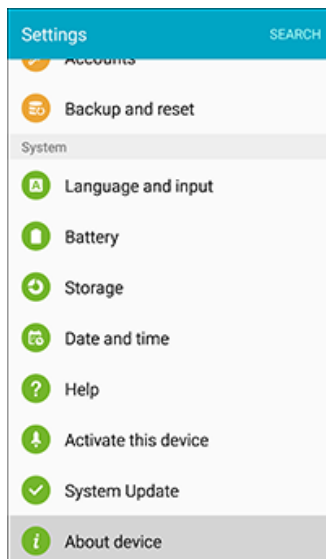

3. Select or view available options.
 - ❖ Your phone information is displayed.

Copyright Information

©2015 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

©2015 Samsung. Samsung, Galaxy, S Beam, Air View, and S Voice are trademarks of Samsung Electronics Co., Ltd.

Android, Chrome, Gmail, Google Maps, Play Music, Play Movies & TV, Play Books, Play Newsstand, Play Games, Drive, YouTube, Photos, Hangouts, Google Mobile Services, and Google Play are trademarks of Google, Inc.

Other marks are property of their respective owners.

Screen images are simulated.

Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

This device and related software are not intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment, or prevention of disease.

For Assistance

The following topics address areas of support for your phone, including troubleshooting, specifications, account information, warranty information, and customer service contact information.

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

Sprint Account Passwords

You will need to create passwords to protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to sprint.com/mysprint. (Click **Sign in/Register** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at sprint.com/mysprint.

Voicemail Password

You will create your voicemail password when you set up your voicemail. See [Voicemail Setup](#) for more information on your voicemail password.

Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to sprint.com/mysprint.

Manage Your Account

Manage your Sprint account from your computer, your Sprint phone, or any other phone.

Online: sprint.com/mysprint

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.

- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringtones, screen savers, and more.

From Your Sprint Phone

1. From home, tap **Phone**  > **Keypad** tab.
2. Do any of the following:
 - Tap    to access a summary of your Sprint service plan or get answers to other questions.
 - Tap    to access the “Pay My Bill” section of Sprint Zone to make a payment.
 - Tap    to check minute usage and account balance.

Sprint Support Services

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from your Sprint phone.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- From home, tap **Phone**  > **Keypad** tab, and then tap    .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- From home, tap **Phone**  > **Keypad** tab, and then tap  .

For more information or to see the latest in products and services, visit us online at sprint.com/mysprint.

Index

- 1Weather, 252
- 3-way Calling, 106
- 4G, 172
- About Device, 403
- Accessibility Settings, 377
- Accessory Port, 5
- Accounts
 - Add new, 384
 - Manage, 385
 - Settings, 384
- Activation, 401
- Airplane Mode, 300
- Alarm, 224
- Amazon, 252
- Answer a Call, 87
- App Pass, 252
- Application Manager, 337
- Applications, 29
 - List, 30
- Applications Settings, 336
- Apps
 - Find and install, 53
 - Request refunds, 54
 - Uninstall, 58
 - Update, 55
- Back Key, 4
- Backup and Reset, 386
- Battery
 - Charge, 6
 - Power saving mode, 396
 - Settings, 393
- Bluetooth, 267
 - Connect, 272
 - Pair, 269
 - Receive information, 275
 - Send information, 273
 - Settings, 294
 - Share pictures and videos, 203
 - Turn on or off, 267
 - Unpair, 271
- Bookmark, 178
- Brightness, 331
- Browser
 - Bookmark, 178
 - History, 179
 - Launch connection, 177
 - Settings, 182
 - Windows, 181
- Calculator, 212
- Calendar, 214
 - Add event, 214
 - Settings, 340, 341
 - Sync, 220
 - Sync Exchange ActiveSync calendar, 222
 - View events, 217
- Call
 - Settings, 353
- Call Forwarding, 108
- Call Logs
 - Make call from, 93
- Call Waiting, 105
- Caller ID, 104
- Calling
 - International, 278
 - International Dialing, 355
 - US Dialing, 355
- Camera, 184
 - Settings, 208
 - Shooting modes, 189
 - Take a picture, 186
 - Viewfinder, 187
- Car Kit
 - Connect, 272
- Charge the Battery, 6
- Charger/Accessory Port, 5
- Chrome, 182
- Clock, 222
 - Alarm, 224
 - Stopwatch, 226
 - Timer, 227
 - World Clock, 226
- Conference Calling, 106
- Connections Optimizer**, 305
- Contacts, 112
 - Add contact, 112
 - Delete, 120
 - Edit, 119
 - Make call from, 91

- Profile sharing, 124
- Save a phone number, 115
- Settings, 342
- Share, 122
- Data Services, 172
 - Password, 406
 - Status indicators, 176
 - User name, 173
- Data Usage Settings, 302
- Date Settings, 399
- Default Applications, 339
- Default Messaging App Settings, 322
- Dexterity and Interaction Settings, 381
- Display Settings, 331
- Drag, 10
- DTMF Tones, 355
- eBay, 252
- Edge Lighting, 18
- Edge Screen, 18
 - Edge lighting, 18
 - Information stream, 25
 - Night clock, 27
 - Notification options, 18
 - People edge, 22
 - Position, 28
 - Quick reply, 20
 - Select notifications, 24
 - Settings, 333
- Editing Text, 40
- Email
 - Add account, 156
 - Add Exchange ActiveSync account, 160
 - Compose and send, 162
 - Delete account, 166
 - Manage inbox, 168
 - Send Gmail, 141
 - Settings, 344
 - Setup, 155
 - Share pictures, 200
 - View and reply, 165
- Emergency Numbers, 85
- Enhanced 9-1-1 (E9-1-1), 86
- Enter Text, 38
- Exchange ActiveSync
 - Add account, 160
 - Features, 169
- Extended Home Screen, 69
- Factory Data Reset, 389
- Files
 - Transfer between phone and computer, 256
- Finger Scanner
 - Fingerprint Screen Lock, 367
- Flash, 4
- Flick, 11
- Folders, 81
- Galaxy Apps, 227
- Gallery, 190, 228
- Global Roaming Mode, 278
- Gmail
 - Archive threads, 146
 - Create account, 41
 - Delete threads, 148
 - Labels, 145
 - Mute threads, 147
 - New messages, 143
 - Read and reply, 143
 - Read messages, 144
 - Report phishing, 151
 - Report spam, 151
 - Search, 149
 - Send message, 141
 - Share pictures, 200
 - Switch accounts, 153
- Google
 - Chrome, 182
 - Create account, 41
 - Hangouts, 229
 - Sign in, 48
 - Voice search, 239
 - YouTube, 250
- Google Maps, 231
- Google Play
 - Find and install apps, 53
 - Help, 59
 - Store, 52
- Google Play Books, 233
- Google Play Games, 233
- Google Play Movies & TV, 233
- Google Play Music, 234
- Google Play Newsstand, 237
- Google Search, 237
- Google Voice Typing, 40
 - Configuring, 40
 - Using, 40
- GPS Satellites, 374
- Hangouts, 229
- Headset
 - Connect, 272

- Headset Jack, 5
- Hearing Accessibility, 380
- Hearing Aids, 355
- Help, 400
- Home Screen, 67
 - Add Folders, 81
 - Add Shortcuts, 79
 - Add Widgets, 80
 - Customize, 77
 - Extended, 69
- Hotspot Settings, 296
- Incoming Call
 - Answer, 87
 - Reject, 88
- Information Stream, 25
- Input Settings, 391
- International Data Roaming, 281
- International Dialing, 355
- Internet, 129
 - Settings, 348
- Keyboard
 - Samsung, 38
- Language Settings, 391
- Location
 - GPS satellites, 374
 - Wireless networks, 374
- Location Services, 374
- Lock Screen
 - Settings, 360
- Lookout Security, 239
- Maps, 231
- Memo, 240
- Memory, 397
- Messages
 - Settings, 349, 351
- Messaging, 129
- Messaging Plus, 252
- Milk, 241
- MMS
 - Send messages, 131, 133
- Mobile Networks Settings, 304
- More Networks Settings, 310
- Motions and Gestures, 334
- Multimedia Messaging
 - Share pictures and videos, 202
- Music
 - Google Play Music, 234
 - Music (App), 241
 - NextRadio, 253
 - Spotify, 254
- Music (App), 241
 - Play music, 241
- My Files, 244
- NASCAR Mobile 2014, 253
- Navigation
 - Scout, 253
- NBA Game Time, 253
- NextRadio, 253
- NFC and Payment, 306
- Night Clock, 27
- Notification Icons, 70
- Notification Settings, 324
- Notifications, 70, 330
- OneDrive, 245
- OneNote, 245
- People Edge, 22
- Phone
 - Dialer, 84
- Phone Calls, 82
 - Answer, 86
 - Emergency numbers, 85
 - Using Call Logs, 93
 - Using contacts, 91
 - Using phone keypad, 84
- Phone Layout (illustration), 4
- Phone Number, 35
 - Save to contacts, 115
- Phone Status, 403
- Phone Update
 - PRL, 66
 - Profile, 65
 - Software, 62
- Pictures
 - Crop, 195
 - Rotate, 194
 - Share via Bluetooth, 203
 - Share via email, 200
 - Share via messaging, 202
 - Take with camera, 186
- Pinch, 12
- Play Books, 233
- Play Games, 233
- Play Movies & TV, 233
- Play Music, 234
- Play Newsstand, 237
- Play Store, 52
 - Find and install apps, 53
- Plus (+) Code Dialing, 279

- Power Key, 5
- Power Off, 8
- Power On, 7
- Power Saving Mode, 395, 396
- Printing, 313
- Privacy and Safety, 370
- Private Mode, 371
- PRL Update, 66
- Quick Reply, 20
- Reject Incoming Call, 88
- Report Diagnostic Info, 372
- Ringtone, 324
- Ringtones
 - Settings, 327
- Rotate, 11
- S Voice, 245
 - Settings, 355, 357
- Samsung Keyboard, 38
- Save a Phone Number, 115
- Scout, 253
- Screen Lock, 362
- Screen Timeout, 331
- Screen Unlock
 - Motion, 363
 - Swipe, 363
- Screen Unlock Password, 367
- Screen Unlock Pattern, 364
- Screen Unlock PIN, 366
- Search
 - Google, 237
- Secure Credential Storage, 315
- Security Settings, 360
- Select Notifications, 24
- Settings, 285
 - Overview, 285
- Setup Screens, 13
- Share
 - Contacts, 122
- SIM Card, 277
- Slide, 10
- SOS Message, 373
- Sound Settings, 324
- Speaker, 5
- Spotify, 254
- Spread, 12
- Sprint 411, 407
- Sprint Account
 - Management, 406
 - Passwords, 406
- Sprint Family Locator, 211
- Sprint Fun & Games, 211
- Sprint Operator Services, 407
- Sprint TV & Movies, 211
- Sprint Worldwide Wireless Service, 277
- Sprint Zone, 211
- Status Bar, 70
- Status Icons, 71
- Status Messages
 - international roaming, 282
- Stopwatch, 226
- Storage
 - Settings, 397
- Swipe, 10
- System Update, 402
- Tap, 9
- Tap and Pay, 309
- Tethering Settings, 312
- Text Editing, 40
- Text Entry, 38
- Text Messaging
 - Conversations, 138
 - Draft messages, 137
 - Notifications, 138
 - Send messages, 129
- Themes, 359
- Time Settings, 399
- Timer, 227
- Touch, 9
- Touch and Hold, 9
- Touchscreen
 - Turn off, 60
 - Turn on, 61
- TTY Mode, 354
- Turn Device Off, 8
- Turn Device On, 7
- Typing, 38
- Uber, 254, 255
- Ultra Power Saving Mode, 396
- US Dialing, 355
- Vibration, 328
- Video (App), 246
- Video Camera
 - Record video, 188
- Videos
 - Record, 188
 - Share via Bluetooth, 203
 - Share via messaging, 202
 - Share via YouTube, 206

- Virtual Private Networks (VPN), 314
 - Add connection, 317
 - Secure credential storage, 315
- Vision Accessibility, 378
- Visual Voicemail, 96
 - Listen to multiple messages, 99
 - Options, 100
 - Review, 98
 - Set up, 96
 - Settings, 101
- Voice Recorder, 247
- Voice Search, 239
- Voice Typing, 40
 - Configuring, 40
 - Using, 40
- Voicemail
 - Display name, 103
 - Greeting, 103
 - International, 279
 - Password, 406
 - Settings, 355
 - Setup, 95
- Volume, 324, 326
 - Key, 5
- Wallpaper, 77
- Web
 - Launch connection, 177
- Widgets, 80
- Wi-Fi, 258
 - Settings, 291
 - Turn on and connect, 258
- Wi-Fi Calling, 82, 289
- World Clock, 226
- YouTube, 250
 - Share videos, 206
- Zoom, 12